



### Construction

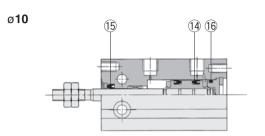

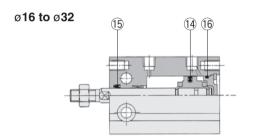

#### With auto switch

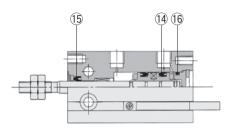

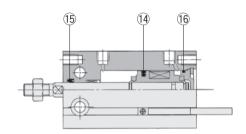

\* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CU.

#### **Seal Kit List**

No.	Description	Material	Note
14)	Piston seal		
15	Rod seal	NBR	
(16)	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
10	CU10D-PS	
16	CU16D-PS	Set of left nos.
20	CU20D-PS	14, 15, 16.
25	CU25D-PS	19, 19, 19.
32	CU32D-PS	

- \* ø6 cannot be repaired.
- \* Seal kit includes (4), (15), (16). Order the seal kit, based on each bore size.
- \* Seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is

# Series CU


ø10, ø16, ø20, ø25, ø32

#### Construction

#### Single acting, spring return

ø10 18 19 9 9 16 to ø32 18 19

#### With auto switch

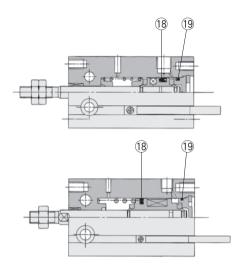

\* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CU.

#### **Seal Kit List**

No.	Description	Material	Note		
18	Piston seal	NBR			
19	Gasket				

Replacement Parts: Seal Kit

riepiacement i arts. ocai kit					
Bore size (mm)	Kit no.	Contents			
10	CU10S-PS				
16	CU16S-PS				
20	CU20S-PS	Set of left nos. 18, 19.			
25	CU25S-PS				
32	CU32S-PS				

- \* ø6 cannot be repaired.
- \* Seal kit includes ®, ®. Order the seal kit, based on each bore size.
- \* Seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is needed.

#### Free Mount Cylinder/Single Acting, Single Rod, Spring Extend




Ø10, Ø16, Ø20, Ø25, Ø32


#### Construction


#### Single acting, spring extend


ø10

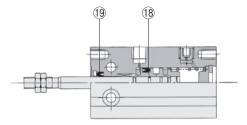

#### With auto switch

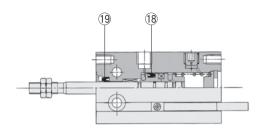

 

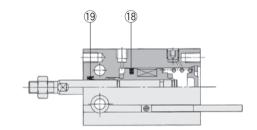

\* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CU.

#### Seal Kit List

No.	Description	Material	Note
18	Piston seal	NBR	
(19)	Rod seal		


Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents			
10	CU10T-PS				
16	CU16T-PS				
20	CU20T-PS	Set of left nos. 18, 19.			
25	CU25T-PS				
32	CU32T-PS				


- \* ø6 cannot be repaired.
- \* Seal kit includes ®, 9. Order the seal kit, based on each bore size.
- \* Seal kit includes a grease pack (10 g).


Order with the following part number when only the grease pack is needed.


**Actuators** 

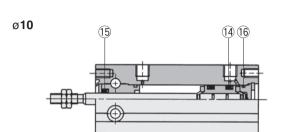

#### With auto switch

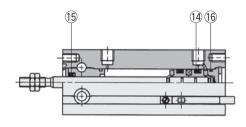

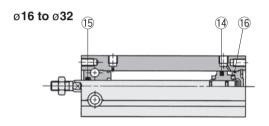

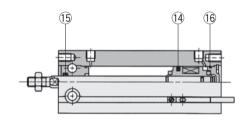

\* The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CU.

#### **Seal Kit List**

No.	Description	Material	Note		
14)	Piston seal				
15	Rod seal	NBR			
16	Gasket				

Replacement Parts: Seal Kit


riopiacement i arter ocar ixit				
Bore size (mm)	Kit no.	Contents		
10	CU10D-PS			
16	CU16D-PS	Cat of left nee		
20	CU20D-PS	Set of left nos.		
25	CU25D-PS	(19), (19), (10).		
32	CU32D-PS			

- \* ø6 cannot be repaired.
- \* Seal kit includes (14), (15), (16). Order the seal kit, based on each bore size.
- \* Seal kit includes a grease pack (10 g).
- Order with the following part number when only the grease pack is needed.

## Free Mount Cylinder with Air Cushion



#### Construction

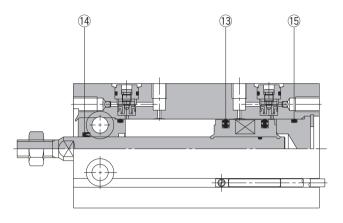

 $\ast$  The numbers are the same as the "Construction" of the Best Pneumatics No.2 Series CU.

#### **Seal Kit List**

No.	Description	Material	No. of pcs.	Note
13	Piston seal		2	
14)	Rod seal	NBR	1	
15	Gasket		1	

Replacement Parts: Seal Kit

neplacement Farts. Sear Kit					
Bore size (mm)	Kit no.	Contents			
ø <b>20</b>	CU20A-PS	Set of left nos.			
ø <b>25</b>	CU25A-PS	13. (14). (15).			
ø <b>32</b>	CU32A-PS	(9, (9, (9.			

- \* Seal kit includes 3, 4, 5. Order the seal kit, based on each bore size.
- \* Seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is needed.