# Cylinder with Lock

# Series MNB

ø32, ø40, ø50, ø63, ø80, ø100


# A locking cylinder ideal for intermediate stops, emergency stops and drop prevention.

### Simple construction

A force magnifying mechanism is employed based on the wedge effect of the taper ring and steel balls.

## Maximum piston speed: 1000 mm/s

It can be used at 50 to 1000 mm/s provided that it is within the allowable kinetic energy range.

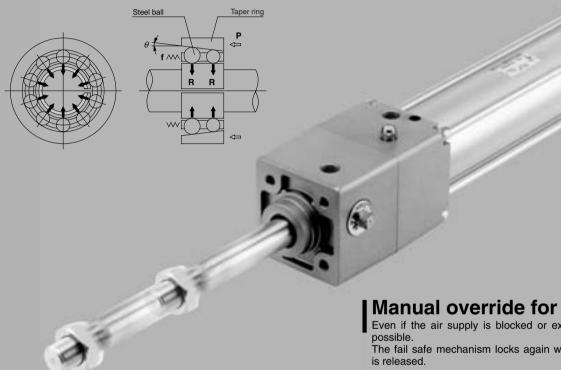

## I High locking efficiency

Greater locking efficiency as well as stable locking and unlocking operation has been achieved by arranging a large number of steel ball bearings in circular rows. (Unlocking pressure of 0.25 MPa ..... 0.05 MPa lower than conventional SMC products) In addition, both alignability and stable locking force with respect to piston rod eccentricity are obtained by allowing the taper ring to float.

### High reliability and stable holding force


Outstanding durability and stable holding force are maintained by the use of a brake shoe having superior wear resistance, which has also been substantially lengthened (double the conventional SMC product).

■ Serie	es vari	ations				
Series	Action	Туре	Standard variations With rod boot	Bore size (mm)	Lock holding force (N)	Max. stroke (mm)
		a		32	552	700
Outlineday		Single rod Series	$\rightarrow$	40	882	800
Cylinder with lock	Double	MNB		50	1370	1000
Series	acting	Double rod		63	2160	1000
MNB		Series	_	80	3430	1000
		MNBW		100	5390	1000

## Manual override for unlocking

Even if the air supply is blocked or exhausted, lock release is

. The fail safe mechanism locks again when the manual override

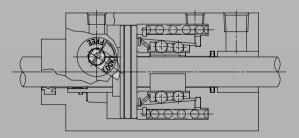

### I Design minimizes the influences of unlocking air quality

A construction which is strong against moisture and drainage in the compressed air has been realized by separating the locking mechanism and the unlocking chamber.

### Can be locked in both directions

An equal holding force can be obtained on either reciprocating stroke of the cylinder.

|--|

CLJ2

CLM2

CLG1

CL<sub>1</sub>

MLGC

CNG

MNB

CNA

CNS

CLS

CLQ

RLQ

MLU

MLGP

ML1C

-X□ Individual -X□




# **Model Selection**

### **Precautions on Model Selection**

### 

- 1. In order that the originally selected maximum speed shall not be exceeded, be certain to use a speed controller to adjust the total movement distance of the load so that movement takes place in no less than the applicable movement time.
  - The movement time is the time that is necessary for the load to travel the total movement distance from the start without any intermediate stops.
- 2. In cases where the cylinder stroke and the movement distance of the load are different (double speed mechanism, etc.), use the movement distance of the load for selection purposes.

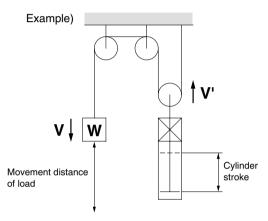

3. The following selection example and procedures are based on use at the intermediate stop (including emergency stops during operation). However, when the cylinder is in a locked state, kinetic energy does not act upon it. Under these conditions, use the load mass at the maximum speed (V) of 100 mm/s shown in graphs (5) to (7) on page 695 depending on the operating pressure and select models.

### **Selection Example**

Load mass : m = 50 kg
 Movement distance : st = 500 mm
 Movement time : t = 2 s

 Load condition : Vertical downward = Load in direction of rod extension

• Operating pressure :  $\mathbf{P} = 0.4 \text{ MPa}$ 

Step (1): From graph (1) find the maximum movement speed of the load

∴ Maximum speed **V**: ≅ 350 mm/s.


Step (2): Select graph (6) based upon the load conditions and operating pressure, and then from the intersection of the maximum speed V = 350 mm/s found in Step (1), and the load mass m = 50 kg.

 $\therefore$  ø63  $\rightarrow$  select a MNB63 or larger bore size.

### Step (1) Find the maximum load speed V.

Find the maximum load speed: V (mm/s) from the load movement time: t (s) and the movement distance: st (mm).

### Graph (1)

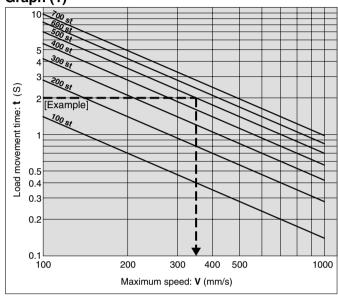


### Step (2) Find the bore size.


Select a graph based upon the load condition and operating pressure, and then find the point of intersection for the maximum speed found in Step (1) and the load mass. Select the bore size on the above the point of intersection.

# Load Condition Operating pressure Load in the direction at the right

angle to rod
(\* Being held by a guide)

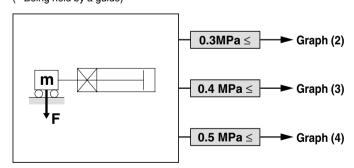


# Load in the direction of rod extension Load in the direction of rod retraction

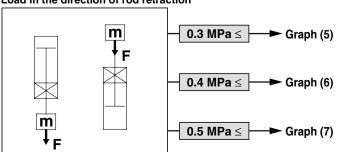






# Cylinder with Lock Series MNB


### **Selection Graph**

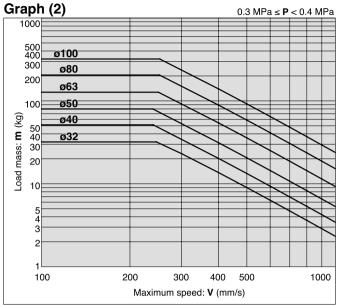


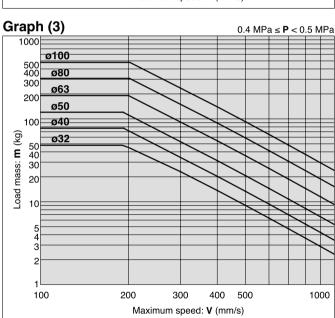

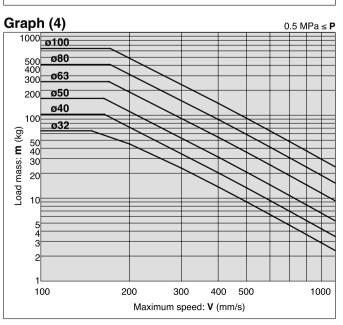

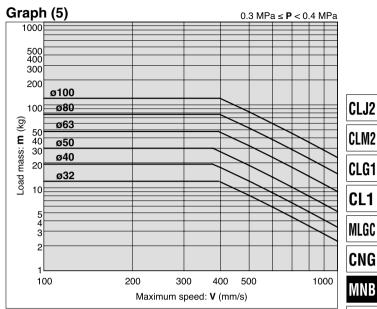

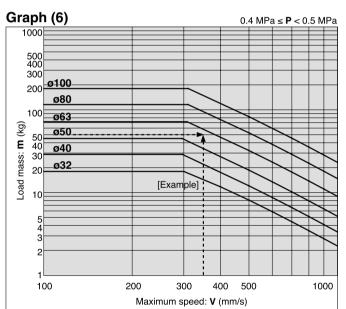

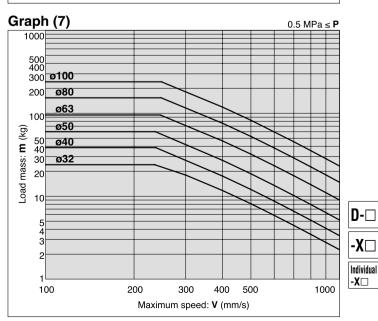

CL<sub>1</sub>

MLGC

CNA

**CNS** 

CLS

CLQ

RLQ

MLU

MLGP


ML1C

# Cylinder with Lock **Double Acting, Single Rod**

# Series MNB

ø32, ø40, ø50, ø63, ø80, ø100

### **How to Order**

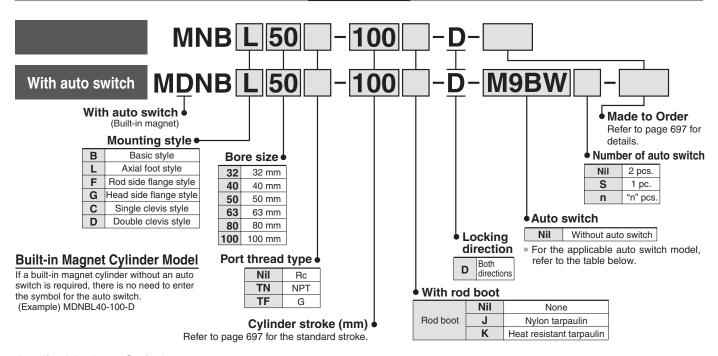

### Applicable Auto Switch/Refer to pages 1719 to 1827 for further information on auto switches.

			ž		Lo	oad volta	ge	Auto swit	tch model	Lead v	vire le	ngth	(m)						
Туре	Special function	Electrical entry		Wiring (Output)	DC AC		AC	Tie-rod Band mounting		0.5 (Nil)	1 (M)	3 (L)	5 (Z)	Pre-wired connector		cable ad			
				3-wire (NPN)				M9N	_	•	•		0	0	10 : 1				
		C ====================================		3-wire (PNP)	24 V	5 V, 12 V	_	M9P	_	•	•		0	0	IC circuit				
		Grommet		2-wire		12 V		M9B	_	•	•	•	0	0					
				2-WIIE	_	_	100 V, 200 V	J51	_	•	-		0	_	_				
ڃ		Terminal		3-wire (NPN)		5 V, 12 V		_	G39	_	-	_	_	_					
switch		conduit		2-wire		12 V		_	K39	_	-	_	_	_					
S	Discount of the second			3-wire (NPN)		5 V 40 V		M9NW	_	•	•		0	0	IC circuit	Dalau			
state	Diagnostic indication (2-color indication)		Yes	3-wire (PNP)	5 V, 12 V	2 V	M9PW	_	•	•		0	0	IC circuit	Relay, PLC				
्र ।	(2-color iridication)	(2 00101 indication)	idon)	ľ	2-wire	→  E\/ 40\	12 V	M9BW	_	•	•		0	0		I LC			
Solid	Water resistant	Grommet		3-wire (NPN)	PNP) 5 V, 12 V		24 V	_	M9NA**	_	0			0	0	IC circuit			
S		(2-color indication)		3-wire (PNP)				M9PA**	_	0	0	•	0	0	10 circuit				
				2-wire					12 V		M9BA**	_	0			0	0	_	
	With diagnostic output (2-color indication)			4-wire (NPN)		,		F59F	_	•	<u> </u>	•	0	0	IC circuit				
	Magnetic field resistant			2-wire				P3DW	_	•	<u> -</u>		•	0	_				
	(2-color indication)			(Non-polar)				P4DW	_	_	<u> </u>		•	0					
			Yes	3-wire (NPN equivalent)	_	5 V	_	A96	_	•	-	•	_	_	IC circuit	_			
			1.				100 V	A93	_	•	1-		_	_	_				
닪	switch —	Grommet	೨				100 V or less	A90	_	•	I —		_	_	IC circuit				
SW			No Yes				100 V, 200 V	A54	_	•	1-	•		-		Relay, PLC			
Reed		Terminal 2-wire	Queiro	12	12 V 200 V or less	200 V or less	A64	_	•	-		—	_		PLC				
Be			Terminal 2-wir	2-wire	24 V		_	_	A33	_	-	_	_	_	_				
						100 \/ 000\/	_	A34	_	1-	_		_		PLC				
		DIN terminal	Yes				100 V, 200V	_	A44	_	-	_	_	_		Relay,			
	Diagnostic indication (2-color indication)	Grommet				_	_	A59W	_	•						PLC			

<sup>\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.


- \* Lead wire length symbols: 0.5 m ..... Nil (Example) M9NW

  - 1 m ······· M (Example) M9NWM 3 m ····· L (Example) M9NWL 3 m ..... L
  - 5 m ······ Z (Example) M9NWZ
- \* Solid state auto switches marked with "O" are produced upon receipt of order.
- \* Since there are other applicable auto switches than listed, refer to page 717 for details.
- \* For details about auto switches with pre-wired connector, refer to pages 1784 and 1785. For D-P3DW□, refer to pages 1773-1 and 1773-2.
- \* D-A9 M9 Call D-A9 auto switches are shipped together (not assembled). (Only auto switch brackets are assembled at the time of shipment for D-A9□ and M9□□□.)



# Cylinder with Lock Double Acting, Single Rod Series MNB

### JIS Symbol Cylinder with brake

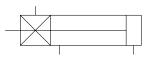



Symbol	Specifications			
-XA□ Change of rod end shape				
-XC35	With coil scraper			

# Refer to pages 714 to 717 for cylinders with auto switches.

- Minimum auto switch mounting stroke
- Proper auto switch mounting position (detection at stroke end) and mounting height
- Operating range
- Auto switch mounting bracket: Part no.

### **Cylinder Specifications**

Bore size (mm)	32 40 50 63 80 100							
Lubrication	Not required (Non-lube)							
Fluid			А	ir				
Proof pressure	1.5 MPa							
Max. operating pressure		1.0 MPa						
Min. operating pressure	0.08 MPa							
Piston speed	50 to 1000 mm/s *							
Ambient and fluid temperature	Without auto switch: -10 to 70°C (No freezing) With auto switch: -10 to 60°C (No freezing)							
Cushion	Air cushion on both ends							
Stroke length tolerance	Up to 250: 1.0, 251 to 1000: 1.4							
Mounting	Basic style, Axial foot style, Rod side flange style, Head side flange style, Single clevis style, Double clevis style							

<sup>\*</sup> Load limits exist depending upon piston speed when locked, mounting direction and operating pressure.

### **Lock Specifications**

Bore size (mm)	32	40	50	63	80	100	
Locking action	Spring locking (Exhaust locking)						
Unlocking pressure	0.25 MPa or more						
Lock starting pressure	0.20 MPa or less						
Max. operating pressure	1.0 MPa						
Locking direction	Both directions						
Holding force N	552	882	1370	2160	3430	5390	

<sup>\*</sup> Be sure to select cylinders in accordance with the procedures on page 694.

# For cases with auto switches, refer to the table of minimum strokes for **Standard Stroke** /mounting of auto switches (page 716).

Bore size (mm)	Standard stroke (mm) (1)	Maximum manufacturable stroke (mm)
32, 40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	ø32 : 700 ø40 : 800
50, 63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	1000
80, 100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800	1000

Note 1) Intermediate strokes other than the above are produced upon receipt of order. Spacers are not used for intermediate strokes

### **Stopping Accuracy**

(mm)

Look type		Piston spe	ed (mm/s)	
Lock type	100	300	500	1000
Spring locking	±0.3	±0.6	±1.0	±2.0

Condition: Lateral, Supply pressure P = 0.5 MPa

Load mass ..... Upper limit of allowed value

Solenoid valve for locking mounted on the unlocking port

Maximum value of stopping position dispersion from 100 measurements

D-□

-X□

CLJ2

CLM2

CLG1

CL<sub>1</sub>

MLGC

CNG

MNB

CNA

CNS

CLS

CLQ

RLQ

MLU

MLGP

ML1C



Note 2) When exceeding the stroke range for each bracket, determine the maximum strokes referring to the Selection Table (front matter 29 in Best Pneumatics No. 2).

### **Mounting Bracket Part No.**

Bore size (mm)	32	40	50	63	80	100
Foot (1)	MB-L03	MB-L04	MB-L05	MNB-L06*	MB-L08	MB-L10
Flange	MNB-F03*	MNB-F04*	MNB-F05*	MNB-F06*	MB-F08	MB-F10
Single clevis	MB-C03	MB-C04	MB-C05	MB-C06	MB-C08	MB-C10
Double clevis	MB-D03	MB-D04	MB-D05	MB-D06	MB-D08	MB-D10

Note 1) When ordering foot bracket, order 2 pieces per cylinder.

Note 2) Accessories for each mounting bracket are as follows.

Foot, Flange, Single clevis: Body mounting bolts

Double clevis: Clevis pin, Cotter pin, Flat washer, Body mounting bolts

Note 3) All are common to the MB series air cylinders, except the sections marked with a "\*".

### **Rod Boot Material**

Symbol	Rod boot material	Max. ambient temperature
J	Nylon tarpaulin	20°C
K	Heat resistant tarpaulin	110°C *

<sup>\*</sup> Maximum ambient temperature for the rod boot itself.

### Accessory

Mounting		Basic style	Foot style	Rod side flange style	Head side flange style	Single clevis style	Double clevis style
Standard	Rod end nut	•	•	•	•	•	•
equipment	Clevis pin	_	_	_	_	_	•
	Single knuckle joint	•	•	•	•	•	•
Option	Double knuckle joint (With pin)	•	•	•	•	•	•
	With rod boot	•	•	•	•	•	•

### **Single Rod Mass/Aluminum Tube**

							(kg)
Bore size (mm)		32	40	50	63	80	100
	Basic style	1.20	1.72	2.76	4.06	6.85	10.26
	Foot style	1.30	1.84	2.94	4.32	7.28	10.85
Basic mass	Flange style	1.44	2.04	3.29	4.80	8.30	13.57
	Single clevis style	1.45	1.98	3.10	4.69	7.96	13.43
	Double clevis style	1.46	1.99	3.19	4.85	8.25	13.95
Additional mass per each 50 mm of stroke	All mounting brackets	0.11	0.16	0.26	0.27	0.42	0.56
Accessory	Single knuckle	0.15	0.23	0.26	0.26	0.60	0.83
Accessory	Double knuckle (with pin)	0.22	0.37	0.43	0.43	0.87	1.27

Calculation:

(Example) MNBB32-100-D (Basic type, ø32, 100 st)


• Basic mass------1.20 (Basic style, ø32)

• Additional mass ----- 0.11/50 stroke

• Cylinder stroke ..... 100 stroke 1.20 + 0.11 x 100/50 = 1.42 kg

# Cylinder with Lock Double Acting, Single Rod Series MNB

### **Construction Principle**

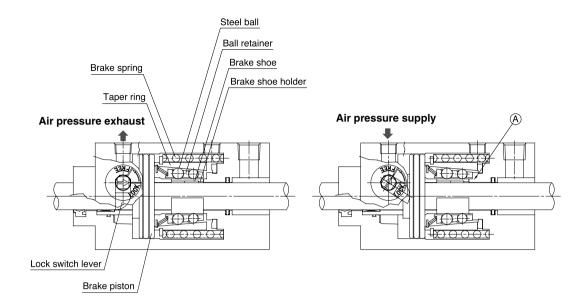

Locked state

Unlocked state

#### Spring locking (Exhaust locking)

The spring force which acts upon the taper ring is magnified by a wedge effect, and is conveyed to all of the numerous steel balls which are arranged in two circles. These act on the brake shoe holder and brake, which locks the piston rod by tightening against it with a large force.

Unlocking is accomplished when air pressure is supplied to the unlocking port. The brake piston and taper ring oppose the spring force, moving to the right side, and the ball retainer strikes the cover section A. The braking force is released as the steel balls are removed from the taper ring by the ball retainer.

CLJ2

CLM2

CLG1

CL1

MLGC

CNG

MNB

CNA

CNS

CLS

CLQ

RLQ

MLU

MLGP


ML1C




-X□ Individual -X□



### Construction

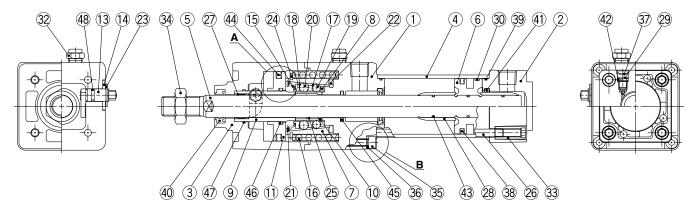



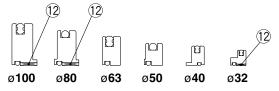

### **B** section



### **Component Parts**

No.	D	escri	ption	Material	Note
1	Rod cove	r		Aluminum alloy	Hard anodized and metallic painted
2	Head cov	er		Aluminum die-casted	Chromated and metallic painted
3	Cover			Aluminum alloy	Hard anodized and metallic painted
4	Cylinder t	ube		Aluminum alloy	Hard anodized
(5)	Piston roo	d		Carbon steel	Hard chrome plated
6	Piston			Aluminum alloy	Chromated
7	Taper ring	3		Carbon steel	Heat treated
8	Ball retain	ner		Special resin	
9	Piston gu	ide		Carbon steel	Zinc chromated
10	Brake sho	e ho	older	Special steel	Heat treated
(11)	Release	ø32	2, ø80, ø100	Aluminum alloy	Chromated
· ·	piston	ø40	), ø50, ø63	Aluminum alloy	Hard anodized
12	Release p	isto	n bushing	Steel + Special resin	ø32, ø80, ø100 only
13	Unlocking	g car	n	Chromium molybdenum steel	Glossy chromated
14)	Washer			Carbon steel	Colorless zinc chromated
(15)	Retainer	ore-	ø32	Steel wire	Zinc chromated
(19)	load sprin	ng	ø40 to ø100	Stainless steel wire	
16	Brake spr	ing		Steel wire	
17)	Clip A			Stainless steel	Zinc chromated
18	Clip B			Stainless steel	
19	Steel ball	Α		Carbon steel	
20	Steel ball	В		Carbon steel	
21)	Tooth ring	9		Stainless steel	
22	Bumper			Polyurethane rubber	
23	Type C retaining	ring fo	r unlocking cam shaft	Carbon steel	
24)	Type C retain	ning r	ing for taper ring	Carbon steel	
25	Brake sho	ре		Babbitt	
26	Tie-rod			Carbon steel	Zinc chromated
27)	Bushing			Copper alloy	
28	Cushion r	ring		Aluminum alloy	Anodized

### **Component Parts**

No.	Description	Material	Note
29	Cushion valve	Steel wire	Nickel plated
30	Wear ring	Resin	
31)	Unit holding tie-rod	Carbon steel	Chromated ø80, ø100 only
32	BC element		
33	Tie-rod nut	Carbon steel	Nickel plated
34)	Rod end nut	Carbon steel	Nickel plated
35	Hexagon socket head cap screw	Chromium molybdenum steel	Nickel plated ø32 to ø63
36	Spring washer for hex. socket head cap screw	Steel wire	Nickel plated ø32 to ø63
37)	Retaining ring	Spring steel	
38	Piston seal	NBR	
39	Cylinder tube gasket	NBR	
40	Rod seal A	NBR	
<b>41</b>	Cushion seal	NBR	
42	Cushion valve seal	NBR	
43	Piston gasket	NBR	
44)	Release piston seal	NBR	
45	Rod seal B	NBR	
46	Release piston gasket	NBR	
47)	Piston guide gasket	NBR	
48	Unlocking cam gasket	NBR	

### **Replacement Parts: Seal Kit**

Bore size (mm)	Kit no.	Contents
32	MB32-PS	
40	MB40-PS	
50	MB50-PS	A set of 38, 39, 40 and 41 above
63	MB63-PS	A dot of S, S, G and G above
80	MB80-PS	
100	MB100-PS	


<sup>\*</sup> Since the lock section for Series MNB is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.


<sup>\*</sup> Seal kit includes a grease pack (ø32 to ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g). Order with the following part number when only the grease pack is needed. Grease pack part number: GR-S-010 (10 g), GR-S-020 (20 g)



# Cylinder with Lock Double Acting, Single Rod Series MNB

### **Dimensions**

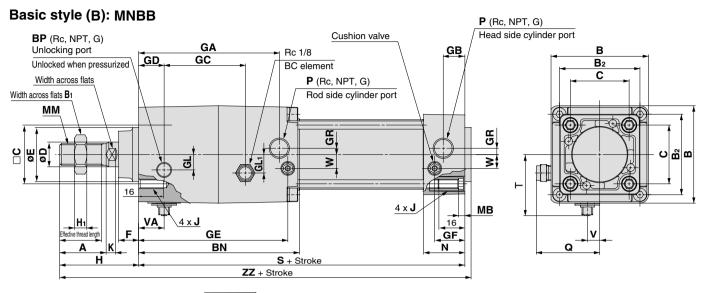

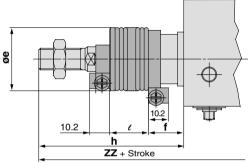

With rod boot

																				(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	Width across flats	Α	В	B <sub>1</sub>	H <sub>1</sub>	B2	BN	BP	С	D	Ee <sub>11</sub>	F	GA	GB	GC	GD	GL	GL <sub>1</sub>
32	Up to 500	19.5	10	22	54	17	6	46	97	1/8	32.5	12	30	13	83	13	45.5	13	8.5	12
40	Up to 500	27	14	30	63	22	8	52	104	1/8	38	16	35	13	91	14	52.5	16.5	10	12
50	Up to 600	32	18	35	75	27	11	65	120.5	1/4	46.5	20	40	14	104.5	15.5	58.5	19	12.5	15
63	Up to 600	32	18	35	90	27	11	75	134.5	1/4	56.5	20	45	14	119.5	16.5	68	23	17.5	12
80	Up to 800	37	22	40	102	32	13	95	169	1/4	72	25	45	20	150	19	81	33	22	18
100	Up to 800	37	26	40	116	41	16	114	189	1/4	89	30	55	20	170	19	96	37.5	25	20

Bore size (mm)	GR	GE	GF	J	MB	K	ММ	N	Р	Q	Н	S	Т	٧	VA	W	ZZ
32	4	88.5	18.3	M6 x 1.0	4	6	M10 x 1.25	27	1/8	37	47	154	34	6.5	13	6.5	205
40	4	96.5	19.5	M6 x 1.0	4	6	M14 x 1.5	27	1/4	41.5	51	161	39.5	8	16.5	9	216
50	5	111.2	22.4	M8 x 1.25	5	7	M18 x 1.5	31.5	1/4	47.5	58	183	47	9	20	10.5	245
63	9	123.5	20.7	M8 x 1.25	5	7	M18 x 1.5	31.5	3/8	55	58	197	55.5	8.5	23	12	259
80	11.5	157	26	M10 x 1.5	5	10	M22 x 1.5	38	3/8	61	72	245	61.5	10.5	33	14	321
100	17	177	26	M10 x 1.5	5	10	M26 x 1.5	38	1/2	68	72	265	69.5	10.5	37.5	15	341

With R	00	d E	Boot																			(mm)
Bore size		_						e									ŀ	1				
(mm)	е		1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	301 to 400	401 to 500	501 to 600	601 to 700	701 to 800	1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	301 to 400	401 to 500	501 to 600	601 to 700	701 to 800
32	36	23	12.5	25	37.5	50	75	100	125	_	_	_	73	86	98	111	136	161	186	_	_	_
40	41	23	12.5	25	37.5	50	75	100	125	_	_	_	81	94	106	119	144	169	194	_	_	_
50	51	25	12.5	25	37.5	50	75	100	125	150	_	_	89	102	114	127	152	177	202	227	_	_
63	51	25	12.5	25	37.5	50	75	100	125	150	_	_	89	102	114	127	152	177	202	227	_	_
80	56	29	12.5	25	37.5	50	75	100	125	150	175	200	101	114	126	139	164	189	214	239	264	289
100	61	29	12.5	25	37.5	50	75	100	125	150	175	200	101	114	126	139	164	189	214	239	264	289

Bore size					Z	Z				
(mm)	1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	301 to 400	401 to 500	501 to 600	601 to 700	701 to 800
32	231	244	256	269	294	319	344	_	_	
40	246	259	271	284	309	334	359	_	_	_
50	276	289	301	314	339	364	389	414	_	_
63	290	303	315	328	353	378	403	428	_	_
80	350	363	375	388	413	438	463	488	513	538
100	370	383	395	408	433	458	483	508	533	538

**D-**□ -**X**□

CLJ2

CLM2

CLG1

CL1

MLGC

CNG

MNB

CNA

**CNS** 

**CLS** 

CLQ

RLQ

MLU


MLGP

ML1C



### **Dimensions**

### Axial foot style (L): MNBL

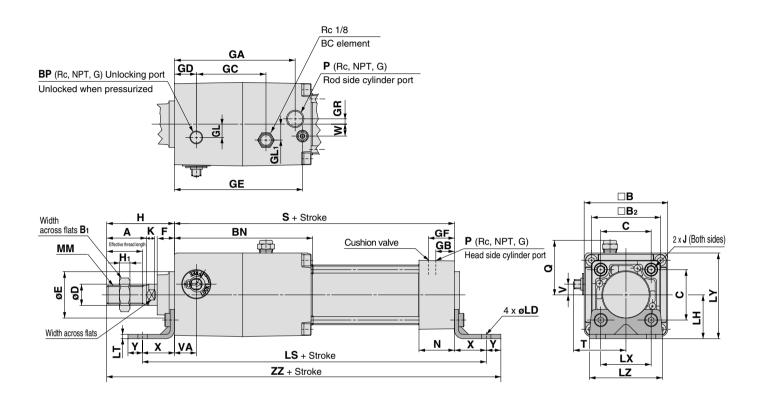


																							(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	Width across flats	A	В	B <sub>1</sub>	Hı	<b>B</b> <sub>2</sub>	BN	ВР	С	D	Ee <sub>11</sub>	F	GA	GB	GC	GD	GL	GL <sub>1</sub>	GR	GE	GF
32	Up to 700	19.5	10	22	54	17	6	46	97	1/8	32.5	12	30	13	83	13	45.5	13	8.5	12	4	88.5	18.3
40	Up to 800	27	14	30	63	22	8	52	104	1/8	38	16	35	13	91	14	52.5	16.5	10	12	4	96.5	19.5
50	Up to 1000	32	18	35	75	27	11	65	120.5	1/4	46.5	20	40	14	104.5	15.5	58.5	19	12.5	15	5	111.2	22.4
63	Up to 1000	32	18	35	90	27	11	75	134.5	1/4	56.5	20	45	14	119.5	16.5	68	23	17.5	12	9	123.5	20.7
80	Up to 1000	37	22	40	102	32	13	95	169	1/4	72	25	45	20	150	19	81	33	22	18	11.5	157	26
100	Up to 1000	37	26	40	116	41	16	114	189	1/4	89	30	55	20	170	19	96	37.5	25	20	17	177	26

Bore size (mm)	J	LD	LH	LS	LT	LX	LY	LZ	К	ММ	N	Р	Q	н	s	Т	V	VA	w	х	Y	ZZ
32	M6 x 1.0	7	30	198	3.2	32	57	50	6	M10 x 1.25	27	1/8	37	47	154	34	6.5	13	6.5	22	9	232
40	M6 x 1.0	9	33	209	3.2	38	64.5	55	6	M14 x 1.5	27	1/4	41.5	51	161	39.5	8	16.5	9	24	11	247
50	M8 x 1.25	9	40	237	3.2	46	77.5	70	7	M18 x 1.5	31.5	1/4	47.5	58	183	47	9	20	10.5	27	11	279
63	M8 x 1.25	12	48	251	3.6	56	93	80	7	M18 x 1.5	31.5	3/8	55	58	197	55.5	8.5	23	12	27	14	296
80	M10 x 1.5	12	55	305	4.5	72	106	100	10	M22 x 1.5	38	3/8	61	72	245	61.5	10.5	33	14	30	14	361
100	M10 x 1.5	14	65	329	4.5	89	123	120	10	M26 x 1.5	38	1/2	68	72	265	69.5	10.5	37.5	15	32	16	385

 $<sup>\</sup>ast$  Refer to page 701 for cylinders with a rod boot.

### Rod side flange style (F): MNBF

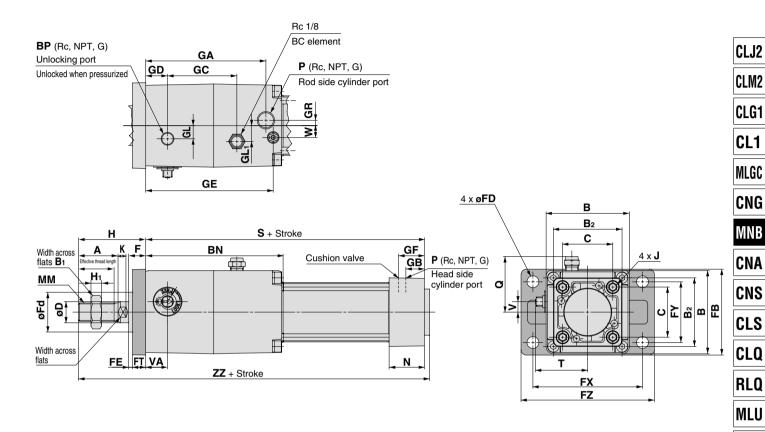

																							(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	Width across flats	A	FB	В	B <sub>1</sub>	H <sub>1</sub>	<b>B</b> <sub>2</sub>	BN	ВР	С	D	F	Fd	FD	FE	FT	FX	FY	FZ	GA	GB
32	Up to 700	19.5	10	22	56	54	17	6	46	97	1/8	32.5	12	13	25	7	3	10	72	38	87	83	13
40	Up to 800	27	14	30	65	63	22	8	52	104	1/8	38	16	13	31	9	3	10	83	46	101	91	14
50	Up to 1000	32	18	35	77	75	27	11	65	120.5	1/4	46.5	20	14	38.5	9	2	12	100	52	120	104.5	15.5
63	Up to 1000	32	18	35	92	90	27	11	75	134.5	1/4	56.5	20	14	39.5	9	2	12	115	62	135	119.5	16.5
80	Up to 1000	37	22	40	100	102	32	13	95	169	1/4	72	25	20	45.5	12	4	16	126	63	153	150	19
100	Up to 1000	37	26	40	120	116	41	16	114	189	1/4	89	30	20	54	14	4	16	150	75	178	170	19

Bore size (mm)	GC	GD	GL	GL <sub>1</sub>	GR	GE	GF	J	к	ММ	N	Р	Q	Н	s	т	v	VA	w	ZZ
32	45.5	13	8.5	12	4	88.5	18.3	M6 x 1.0	6	M10 x 1.25	27	1/8	37	47	154	34	6.5	13	6.5	205
40	52.5	16.5	10	12	4	96.5	19.5	M6 x 1.0	6	M14 x 1.5	27	1/4	41.5	51	161	39.5	8	16.5	9	216
50	58.5	19	12.5	15	5	111.2	22.4	M8 x 1.25	7	M18 x 1.5	31.5	1/4	47.5	58	183	47	9	20	10.5	245
63	68	23	17.5	12	9	123.5	20.7	M8 x 1.25	7	M18 x 1.5	31.5	3/8	55	58	197	55.5	8.5	23	12	259
80	81	33	22	18	11.5	157	26	M10 x 1.5	10	M22 x 1.5	38	3/8	61	72	245	61.5	10.5	33	14	321
100	96	37.5	25	20	17	177	26	M10 x 1.5	10	M26 x 1.5	38	1/2	68	72	265	69.5	10.5	37.5	15	341

<sup>\*</sup> Refer to page 701 for cylinders with a rod boot.

D-□

MLGP


ML1C

**-X**□



### **Dimensions**

### Head side flange style (G): MNBG

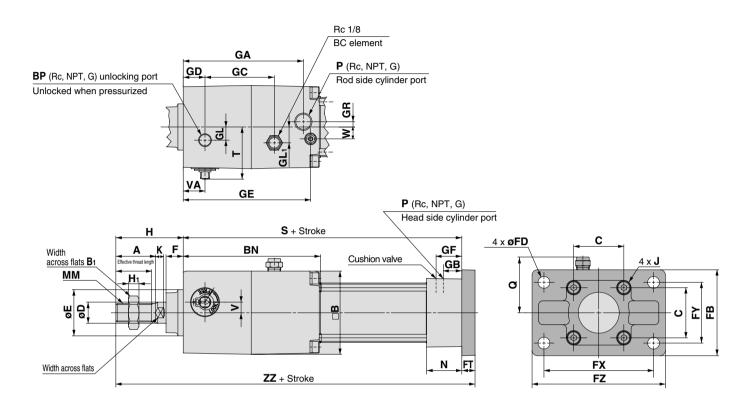


																							(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	Width across flats	A	FB	В	B <sub>1</sub>	Hı	BN	ВР	С	D	Ee <sub>11</sub>	F	FD	FT	FX	FY	FZ	GA	GB	GC	GD
32	Up to 500	19.5	10	22	56	54	17	6	97	1/8	32.5	12	30	13	7	10	72	38	87	83	13	45.5	13
40	Up to 500	27	14	30	65	63	22	8	104	1/8	38	16	35	13	9	10	83	46	101	91	14	52.5	16.5
50	Up to 600	32	18	35	77	75	27	11	120.5	1/4	46.5	20	40	14	9	12	100	52	120	104.5	15.5	58.5	19
63	Up to 600	32	18	35	92	90	27	11	134.5	1/4	56.5	20	45	14	9	12	115	62	135	119.5	16.5	68	23
80	Up to 800	37	22	40	100	102	32	13	169	1/4	72	25	45	20	12	16	126	63	153	150	19	81	33
100	Up to 800	37	26	40	120	116	41	16	189	1/4	89	30	55	20	14	16	150	75	178	170	19	96	37.5

Bore size (mm)	GL	GL <sub>1</sub>	GR	GE	GF	J	K	ММ	N	Р	Q	Н	s	т	V	VA	w	ZZ
32	8.5	12	4	88.5	18.3	M6 x 1.0	6	M10 x 1.25	27	1/8	37	47	154	34	6.5	13	6.5	211
40	10	12	4	96.5	19.5	M6 x 1.0	6	M14 x 1.5	27	1/4	41.5	51	161	39.5	8	16.5	9	222
50	12.5	15	5	111.2	22.4	M8 x 1.25	7	M18 x 1.5	31.5	1/4	47.5	58	183	47	9	20	10.5	253
63	17.5	12	9	123.5	20.7	M8 x 1.25	7	M18 x 1.5	31.5	3/8	55	58	197	55.5	8.5	23	12	267
80	22	18	11.5	157	26	M10 x 1.5	10	M22 x 1.5	38	3/8	61	72	245	61.5	10.5	33	14	333
100	25	20	17	177	26	M10 x 1.5	10	M26 x 1.5	38	1/2	68	72	265	69.5	10.5	37.5	15	353

 $<sup>\</sup>ast$  Refer to page 701 for cylinders with a rod boot.

### Single clevis style (C): MNBC

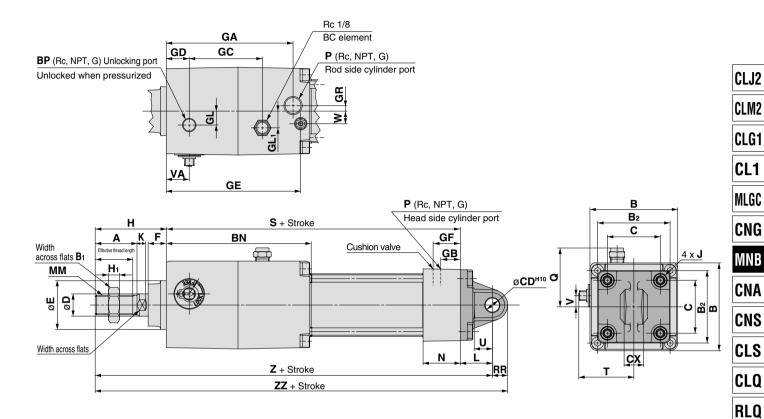

																							(mm)
Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	Width across flats	A	В	B <sub>1</sub>	Hı	<b>B</b> <sub>2</sub>	BN	ВР	С	CD <sup>H10</sup>	CX -0.1	D	Ee <sub>11</sub>	F	GA	GB	GC	GD	GL	GL <sub>1</sub>	GR
32	Up to 500	19.5	10	22	54	17	6	46	97	1/8	32.5	10	14	12	30	13	83	13	45.5	13	8.5	12	4
40	Up to 500	27	14	30	63	22	8	52	104	1/8	38	10	14	16	35	13	91	14	52.5	16.5	10	12	4
50	Up to 600	32	18	35	75	27	11	65	120.5	1/4	46.5	14	20	20	40	14	104.5	15.5	58.5	19	12.5	15	5
63	Up to 600	32	18	35	90	27	11	75	134.5	1/4	56.5	14	20	20	45	14	119.5	16.5	68	23	17.5	12	9
80	Up to 800	37	22	40	102	32	13	95	169	1/4	72	22	30	25	45	20	150	19	81	33	22	18	11.5
100	Up to 800	37	26	40	116	41	16	114	189	1/4	89	22	30	30	55	20	170	19	96	37.5	25	20	17

Bore size (mm)	GE	GF	J	к	L	ММ	N	Р	Q	RR	Н	s	Т	U	v	VA	w	z	ZZ
32	88.5	18.3	M6 x 1.0	6	23	M10 x 1.25	27	1/8	37	10.5	47	154	34	13	6.5	13	6.5	224	234.5
40	96.5	19.5	M6 x 1.0	6	23	M14 x 1.5	27	1/4	41.5	11	51	161	39.5	13	8	16.5	9	235	246
50	111.2	22.4	M8 x 1.25	7	30	M18 x 1.5	31.5	1/4	47.5	15	58	183	47	17	9	20	10.5	271	286
63	123.5	20.7	M8 x 1.25	7	30	M18 x 1.5	31.5	3/8	55	15	58	197	55.5	17	8.5	23	12	285	300
80	157	26	M10 x 1.5	10	42	M22 x 1.5	38	3/8	61	23	72	245	61.5	26	10.5	33	14	359	382
100	177	26	M10 x 1.5	10	42	M26 x 1.5	38	1/2	68	23	72	265	69.5	26	10.5	37.5	15	379	402

 $<sup>\</sup>ast$  Refer to page 701 for cylinders with a rod boot.

D-□

MLU

MLGP


ML1C

-X 🗆

-X□




### **Dimensions**

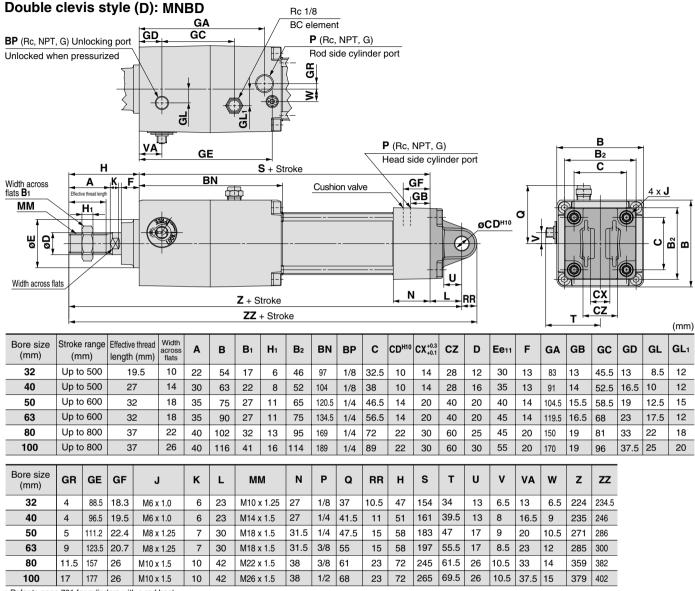

<sup>\*</sup> Refer to page 701 for cylinders with a rod boot.

### **Double Clevis Pivot Bracket**

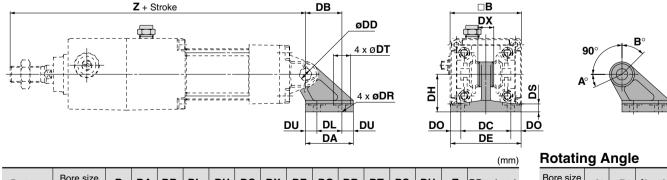

Part no.	Bore size (mm)	В	DA	DB	DL	DU	DC	DX	DE	DO	DR	DT	DS	DH	z	DD <sub>H10</sub> (Hole)
MD Doo	32	54	42	32	22	10	44	14	62	9	6.6	15	7	33	224	10 +0.058
MB-B03	40	63	42	32	22	10	44	14	62	9	6.6	15	7	33	235	10 +0.058
MD DOE	50	75	53	43	30	11.5	60	20	81	10.5	9	18	8	45	271	14 +0.070
MB-B05	63	90	53	43	30	11.5	60	20	81	10.5	9	18	8	45	285	14 +0.070
MP POS	80	102	73	64	45	14	86	30	111	12.5	11	22	10	65	359	22 +0.084
MB-B08	100	116	73	64	45	14	86	30	111	12.5	11	22	10	65	379	22 +0.084


	<u>.                                    </u>	9	
Bore size (mm)	A°	В°	<b>A</b> ° + B° + 90°
32, 40	25°	45°	160°
50, 63	40°	60°	190°
80, 100	30°	55°	175°



# **Accessory Bracket Dimensions**


### **Accessory Bracket Dimensions**

Rod End Nut (Standard equipment)

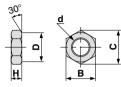


Part no.	Bore size (mm)	В	С	D	н	d
NT-03	32	17	19.6	16.5	6	M10 x 1.25
NT-04	40	22	25.4	21	8	M14 x 1.5
NT-05	50, 63	27	31.2	26	11	M18 x 1.5
NT-08	80	32	37.0	31	13	M22 x 1.5
NT-10	100	41	47.3	39	16	M26 x 1.5

#### I Type Single Knuckle Joint

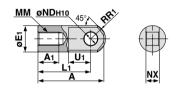

Part no.	Bore size (mm)	Α	Αı	Εı	L <sub>1</sub>	ММ	R₁	U₁	ND <sub>H10</sub>	NX
I-03M	32	40	14	20	30	M10 x 1.25	12	16	10 +0.058	14-0.10
I-04M	40	50	19	22	40	M14 x 1.5	12.5	19	10 +0.058	14-0.10
I-05M	50, 63	64	24	28	50	M18 x 1.5	16.5	24	14 +0.070	20-0.10
I-08M	80	80	26	40	60	M22 x 1.5	23.5	34	22 +0.084	30-0.10
I-10M	100	80	26	40	60	M26 x 1.5	23.5	34	22 +0.084	30-0.10


#### Knuckle Joint Pin, Clevis Pin

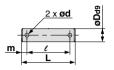

Part no.	Bore size (mm)			,		d	Note)
Part no.	Clevis Knuckle	D <sub>d9</sub>	_	e	m	(Drill through)	Cotter pin
CD-M03	32, 40	10-0.040	44	36	4	3	ø3 x 18 ℓ
CD-M05	50, 63	14-0.050	60	51	4.5	4	ø4 x 25 ℓ
CD-M08	80, 100	22-0.065	82	72	5	4	ø4 x 35 ℓ

Note) Cotter pins and flat washers are included.

#### Y Type Double Knuckle Join

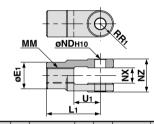

Part no.	Bore size (mm)	E <sub>1</sub>	L <sub>1</sub>	ММ	R₁	U₁	ND <sub>H10</sub>	NX	NZ
Y-03M	32	20	30	M10 x 1.25	10	16	10 +0.058	14 +0.30	28-0.10
Y-04M	40	22	40	M14 x 1.5	11	19	10 +0.058	14 +0.30	28-0.10
Y-05M	50, 63	28	50	M18 x 1.5	14	24	14 +0.070	20 +0.30 +0.10	40-0.10
Y-08M	80	40	65	M22 x 1.5	20	34	22+0.084	30 +0.30	60-0.30
Y-10M	100	40	65	M26 x 1.5	20	34	22 +0.084	30 +0.30	60-0.30
N \ D:									

Note) Pin, cotter pin and plain washer are attached with double knuckle joint.

ML1C

CLJ2

CLM2

CLG1

CL1

MLGC

CNG

MNB

CNA

**CNS** 

**CLS** 

CLQ

RLQ

MLU


MLGP

-X□ Individual -X□

# Cylinder with Lock **Double Acting, Double Rod** Series MNBW

ø32, ø40, ø50, ø63, ø80, ø100

### How to Order

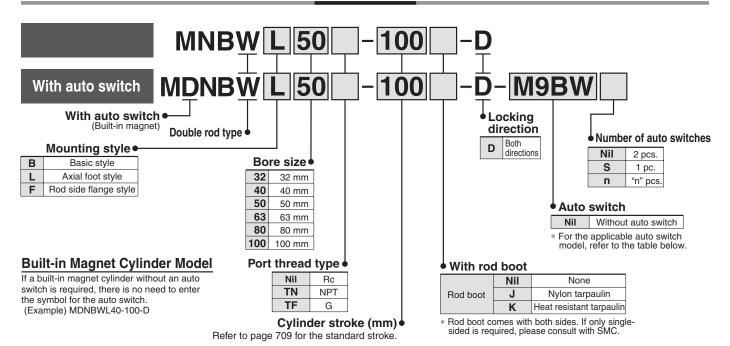

### Applicable Auto Switch/Refer to pages 1719 to 1827 for further information on auto switches.

			ř		L	oad volta	age	Auto swit	tch model	Lead w	vire le	ngth	(m)	D		
Туре	Special function	Electrical entry	Indicator	Wiring (Output)	D	С	AC	Tie-rod mounting	Band mounting	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	Pre-wired connector		icable ad
				3-wire (NPN)				M9N	_	•	•	•	0	0		
				3-wire (PNP)	24 V	5 V, 12 V	_	M9P	_	•	•		0	0	IC circuit	
		Grommet		2-wire		12 V		M9B	_	•	•	•	0	0		1
	<del></del>			Z-WIIG	_	_	100 V, 200 V	J51	_	•	_	•	0	_	_	
ڃ		Terminal		3-wire (NPN)		5 V, 12 V		_	G39	_	-	_	_	_		
Solid state switch		conduit		2-wire		12 V		_	K39		<u> </u>	_	_			
So	Diagnostic indication		S	3-wire (NPN)		5 V, 12 V		M9NW	_	•	•		0	0	IC circuit	Relay,
tate	(2-color indication)		Yes	3-wire (PNP)				M9PW		•	•	•	0	0	10 circuit	PLC
d s	(=,			2-wire		12 V		M9BW	_	•	•	•	0	0	_	
io	Water resistant	Grommet		3-wire (NPN)	24 V	5 V, 12 V	_	M9NA**	_	0	10	•	0	0	IC circuit	
0,	(2-color indication)			3-wire (PNP)				M9PA**	_	0	10	•	0	0		
				2-wire		12 V		M9BA**	_	0	10	•	0	0		
	With diagnostic output (2-color indication)			4-wire (NPN)		5 V, 12 V		F59F		•	<del>                                     </del>		0	0	IC circuit	.
	Magnetic field resistant			2-wire		_		P3DW		•	<del>  -</del>		•	0	_	
	(2-color indication)			(Non-polar)				P4DW		_	<del>  -</del>	•	•	0		
			Yes	3-wire (NPN equivalent)	_	5 V	_	A96	_	•	-	•	_	_	IC circuit	_
_		Grommet					100 V	A93	_		-		_	_	_	
Reed switch		Grommet	೨				100 V or less	A90	_	•	<u> </u>		_	_	IC circuit	Relay,
S W			No Yes				100 V, 200 V	A54	_	•	-			_		PLC
eq			2	2-wire	24 V	12 V	200 V or less	A64	_	•	<u> </u>	•	_	_		
Re		Terminal		Z-WIIG	∠ <del>-</del> 7 V			_	A33	_	-	_	-	_	-	
		conduit	SS				100 V, 200 V		A34		<u>  - </u>	_	_			PLC
		DIN terminal	Yes				100 4, 200 4	_	A44	_	-	_	_	_		Relay,
	Diagnostic indication (2-color indication)	Grommet				_	_	A59W	_		<u> </u>		—			PLC

<sup>\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

- \* Lead wire length symbols: 0.5 m.....Nil (Example) M9NW
  - 1 m······M (Example) M9NWM 3 m······L (Example) M9NWL

  - 5 m ········ Z (Example) M9NWZ
- \* Solid state auto switches marked with "O" are produced upon receipt of order.
- \* Since there are other applicable auto switches than listed, refer to page 717 for details.
- \* For details about auto switches with pre-wired connector, refer to pages 1784 and 1785. For D-P3DW , refer to pages 1773-1 and 1773-2.

  \* D-A9□/M9□□□/P3DW□ auto switches are shipped together (not assembled). (Only auto switch brackets are assembled at the time of shipment for D-A9□ and M9□□□.)




# Cylinder with Lock Double Acting, Double Rod Series MNBW

# Cylinder Specifications



JIS Symbol Cylinder with brake

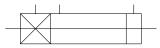

Refer to pages 714 to 717 for cylinders with auto switches.

- Minimum auto switch mounting stroke
- Proper auto switch mounting position (detection at stroke end) and mounting height
- Operating range
- Auto switch mounting bracket: Part no.

Bore size (mm)	32	40	50	63	80	100				
Lubrication		10	Not requir			100				
Fluid				Air	<u>,                                 </u>					
Proof pressure			1.	5 MPa						
Max. operating pressure			1.	0 MPa						
Min. operating pressure	perating pressure 0.08 MPa									
Piston speed										
Ambient and fluid temperature			switch: –1 witch: –10		`	٥,				
Cushion		Air	cushion o	n both en	ds					
Stroke length tolerance		Up to	250: +1.0	251 to 100	OO: +1.4					
Mounting Basic style, Axial foot style, Rod side flange style										

<sup>\*</sup> Load limits exist depending upon piston speed when locked, mounting direction and operating pressure.

### **Lock Specifications**

Bore size (mm)	32	40	50	63	80	100			
Locking action		Spri	ng locking	(Exhaust	locking)				
Unlocking pressure	0.25 MPa or more								
Lock starting pressure	0.20 MPa or less								
Max. operating pressure			1.0	0 MPa					
Locking direction			Both	directions					
Holding force N	552	882	1370	2160	3430	5390			

<sup>\*</sup> Be sure to select cylinders in accordance with the procedures on page 694.

For cases with auto switches, refer to the table of minimum strokes for **Standard Stroke** /mounting of auto switches (page 716).

Bore size (mm)	Standard stroke (mm)
32	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500
50	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600
63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600
80	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800
100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800

<sup>\*</sup> Intermediate strokes other than the above are produced upon receipt of order. Spacers are not used for intermediate strokes.

### **Stopping Accuracy**

(mm)

Look type	Piston speed (mm/s)											
Lock type	100	300	500	1000								
Spring locking	±0.3	±0.6	±1.0	±2.0								

Condition: Lateral, Supply pressure P = 0.5 MPa

Load mass ..... Upper limit of allowed value

Solenoid valve for locking mounted on the unlocking port

Maximum value of stopping position dispersion from 100 measurements



-X□

CLJ2

CLM2

CLG1

CL<sub>1</sub>

MLGC

CNG

MNB

CNA

CNS

CLS

CLQ

RLQ

MLU

MLGP

ML1C



### **Mounting Bracket Part No.**

Bore size (mm)	32	40	50	63	80	100
Foot (1)	MB-L03	MB-L04	MB-L05	MNB-L*	MB-L08	MB-L10
Flange	MNB-F03*	MNB-F04*	MNB-F05*	MNB-F06*	MB-F08	MB-F10

Note 1) When ordering foot bracket, order 2 pieces per cylinder.

Note 2) Accessories for each mounting bracket are as follows.

Foot, Flange: Body mounting bolts

Note 3) All are common to the MB series air cylinders, except the sections marked with a \*.

### **Rod Boot Material**

Symbol	Rod boot material	Max. ambient temperature
J	Nylon tarpaulin	70°C
K	Heat resistant tarpaulin	110°C *

<sup>\*</sup> Maximum ambient temperature for the rod boot itself.

### Accessory

Mou	nting	Basic style	Foot style	Rod side flange style
Standard equipment	Rod end nut	•	•	•
Option	With rod boot	•	•	•

### **Double Rod Mass/Aluminum Tube**

							(kg)
Bore size (	mm)	32	40	50	63	80	100
	Basic style	1.26	1.82	2.91	4.24	7.23	10.70
Basic mass	Foot style	1.36	1.94	3.09	4.50	7.66	11.29
	Flange style	1.50	2.14	3.44	4.98	8.68	14.01
Additional mass per each 50 mm of stroke	All mounting brackets	0.15	0.24	0.34	0.35	0.61	0.84
Agggggg	Single knuckle	0.15	0.23	0.26	0.26	0.60	0.83
Accessory	Double knuckle (With pin)	0.22	0.37	0.43	0.43	0.87	1.27

(Example) MNBWB32-100-D (Basic type, ø32, 100 st)


Basic mass-----1.26 (Basic style, ø32)


Additional mass ······0.11/50 stroke


 Cylinder stroke ----- 100 stroke  $1.26 + 0.11 \times 100/50 = 1.48 \text{ kg}$ 

# Cylinder with Lock Double Acting, Double Rod Series MNBW

### Construction

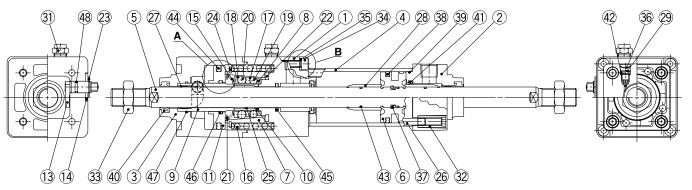

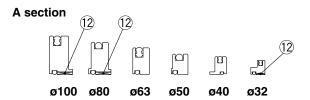

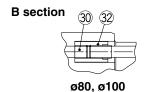

**Component Parts** 

Cor	nponen	t P	arts						
No.	De	escri	ption	Material	Note				
1	Rod cover	r A		Aluminum alloy	Hard anodized and metallic painted				
2	Rod cover	r B		Aluminum die-casted	Chromated and metallic painted				
3	Cover			Aluminum alloy	Hard anodized and metallic painte				
4	Cylinder t	ube		Aluminum alloy	Hard anodized				
5	Piston roc	i		Carbon steel	Hard chrome plated				
6	Piston			Aluminum alloy	Chromated				
7	Taper ring	ı		Carbon steel	Heat treated				
8	Ball retain	er		Special resin					
9	Piston gui	ide		Carbon steel	Zinc chromated				
10	Brake sho	e ho	older	Special steel	Heat treated				
11	Release	ø32	, ø80, ø100	Aluminum alloy	Chromated				
	piston	ø40	, ø50, ø63	Aldifilliant alloy	Hard anodized				
12	Release p	isto	n bushing	Steel + Special resin	ø32, ø80, ø100 only				
13	Unlocking	, car	n	Chromium molybdenum steel	Glossy chromated				
14	Washer			Carbon steel	Colorless zinc chromated				
15	Retainer p	re-	ø32	Steel wire	Zinc chromated				
	load sprin	g	ø40 to ø100	Stainless steel wire					
16	Brake spr	ing		Steel wire					
17	Clip A			Stainless steel	Zinc chromated				
18	Clip B			Stainless steel					
19	Steel ball	Α		Carbon steel					
20	Steel ball	В		Carbon steel					
21	Tooth ring	j		Stainless steel					
22	Bumper			Polyurethane rubber					
23	Type C retaining	ring fo	r unlocking cam shaft	Carbon steel					
24	Type C retain	ning r	ng for taper ring	Carbon steel					
25	Brake sho	е		Babbitt					
26	Tie-rod			Carbon steel	Zinc chromated				
27	Bushing			Copper alloy					
28	Cushion r	ing		Aluminum alloy	Anodized				

Cor	Component Parts													
No.	Description	Material	Note											
29	Cushion valve	Steel wire	Nickel plated											
30	Unit holding tie-rod	Carbon steel	Chromated ø80, ø100 only											
31	BC element													
32	Tie-rod nut	Carbon steel	Nickel plated											
33	Rod end nut	Carbon steel	Nickel plated											
34	Hexagon socket head cap screw	Chromium molybdenum steel	Nickel plated ø32 to ø63											
35	Spring washer for hex. socket head cap screw	Steel wire	Nickel plated ø32 to ø63											
36	Retaining ring	Spring steel												
37	Piston holder	Urethane												
38	Piston seal	NBR												
39	Cylinder tube gasket	NBR												
40	Rod seal A	NBR												
41	Cushion seal	NBR												
42	Cushion valve seal	NBR												
43	Piston gasket	NBR												
44	Release piston seal	NBR												
45	Rod seal B	NBR												
46	Release piston gasket	NBR												
47	Piston guide gasket	NBR												
48	Unlocking cam gasket	NBR												

### **Replacement Parts: Seal Kit**

Bore size (mm)	Kit no.	Contents						
32	MBW32-PS							
40	MBW40-PS							
50	MBW50-PS	A set of 38, 39, 40 and 41 above						
63	MBW63-PS	7, 56, 61, 63, 63, 63, 63, 63, 63, 63, 63, 63, 63						
80	MBW80-PS							
100	MBW100-PS							

\* As a general rule, the lock section of Series MNBW is replaced as a unit, and therefore, the replacement seal kits are for the cylinder section only. These can be ordered using the order number for each bore size.

CLJ2

CLM2 CLG1

CL1

MLGC

CNG

MNB

CNA

ONA

CNS

CLS

CLQ RLQ

MLU

MLGP

ML1C


**D**-□


-X□

 <sup>\*</sup> Seal kit includes a grease pack (ø32 to ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g). Order with the following part number when only the grease pack is needed.
 Grease pack part number: GR-S-010 (10 g), GR-S-020 (20 g)

### **Dimensions**

### Basic style (B): MNBWB

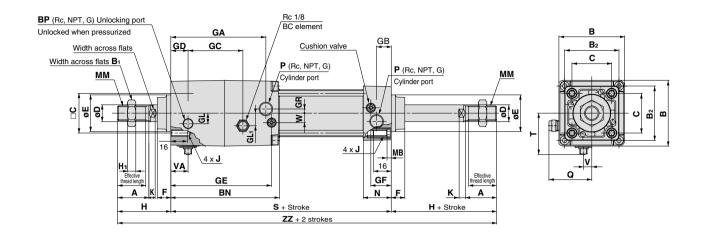

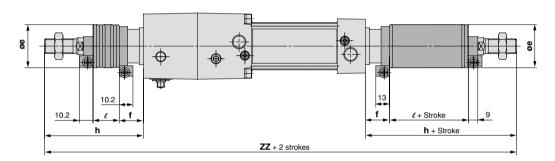

With rod boot

(mm) Bore size Stroke range Effective thread length Α В В1 H1 B2 BN BP С D Ee<sub>11</sub> F GΑ GB GC GD GL GL<sub>1</sub> (mm) (mm) (mm) Up to 500 19.5 1/8 32.5 45.5 8.5 Up to 500 1/8 52.5 16.5 58.5 Up to 600 120.5 1/4 46.5 104 5 15.5 Up to 600 134.5 1/4 56.5 119.5 17.5 16.5 Up to 800 1/4 Up to 800 1/4 37.5 25 

E	Bore size (mm)	GR	GE	GF	J	МВ	K	ММ	N	Р	Q	н	s	Т	٧	VA	w	ZZ
	32	4	88.5	18.3	M6 x 1.0	4	6	M10 x 1.25	27	1/8	37	47	154	34	6.5	13	6.5	248
	40	4	96.5	19.5	M6 x 1.0	4	6	M14 x 1.5	27	1/4	41.5	51	161	39.5	8	16.5	9	263
	50	5	111.2	22.4	M8 x 1.25	5	7	M18 x 1.5	31.5	1/4	47.5	58	183	47	9	20	10.5	299
	63	9	123.5	20.7	M8 x 1.25	5	7	M18 x 1.5	31.5	3/8	55	58	197	55.5	8.5	23	12	313
	80	11.5	157	26	M10 x 1.5	5	10	M22 x 1.5	38	3/8	61	72	245	61.5	10.5	33	14	389
	100	17	177	26	M10 x 1.5	5	10	M26 x 1.5	38	1/2	68	72	265	69.5	10.5	37.5	15	409


With Rod Boot

Note) ZZ: Dimensions for cylinders with a rod boot on both sides.

Bore				l													r	1					ZZ Note)									
size (mm)	е	f		51 to 100					401 to 500			701 to 800										701 to 800					201 to 300					701 to 800
32	36	23	12.5	25	37.5	50	75	100	125	_	_		73	86	98	111	136	161	186	_	_	-	300	326	350	376	426	476	526			_
40	41	23	12.5	25	37.5	50	75	100	125	_	ı	_	81	94	106	119	144	169	194	l	l	ı	323	349	373	399	449	499	549	_	_	_
50	51	25	12.5	25	37.5	50	75	100	125	150	_	_	89	102	114	127	152	177	202	227	_	_	361	387	411	437	487	537	587	637	_	_
63	51	25	12.5	25	37.5	50	75	100	125	150	ı	_	89	102	114	127	152	177	202	227	l	ı	375	401	425	451	501	551	601	651	_	_
80	56	29	12.5	25	37.5	50	75	100	125	150	175	200	101	114	126	139	164	189	214	239	264	289	447	473	497	523	573	623	673	723	773	823
100	61	29	12.5	25	37.5	50	75	100	125	150	175	200	101	114	126	139	164	189	214	239	264	289	467	493	517	543	593	643	693	743	793	843

# Cylinder with Lock Double Acting, Double Rod Series MNBW

### **Dimensions**

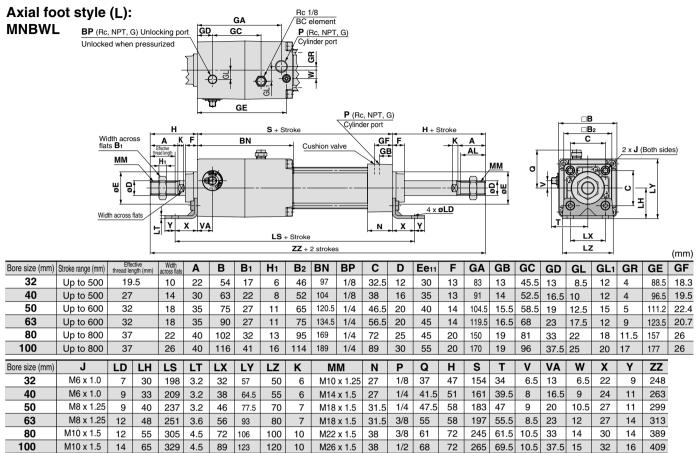


<sup>\*</sup> Refer to page 712 for cylinders with a rod boot



Unlocked when pressurized

BP (Rc, NPT, G) Unlocking port

**MNBWF** 

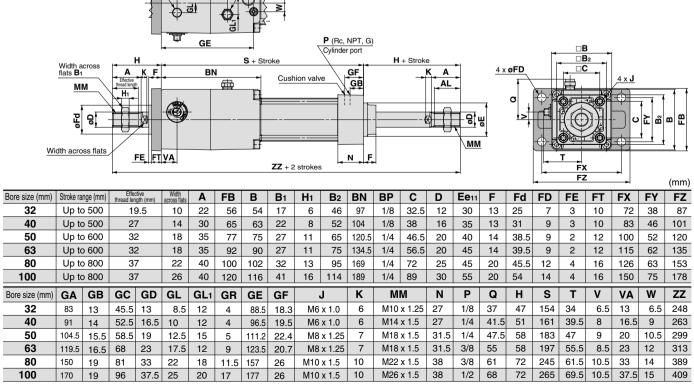

Rc 1/8

GR

BC element

**P** (Rc, NPT, G)

GA

GC

GD



409

**D**-□

-X□

MLGC CNG

CLJ2

CLM<sub>2</sub>

CLG1

CL<sub>1</sub>

MNB

CNA

CNS

CLQ

RLQ

MLU


MLGP

ML1C


<sup>\*</sup> Refer to page 712 for cylinders with a rod boot.

### Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

<Band mounting style> D-A3□/G39/K39

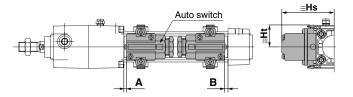

### **D-A44**

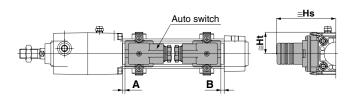

### <Tie-rod mounting style>


**D-A9**□/**A9**□**V D-Z7**□/**Z80** 

D-M9□/M9□V D-Y59/Y69/Y7P/Y7PV D-M9□W/M9□WV D-Y7□W/Y7□WV/Y7BAL


D-M9

AL/M9

AVL

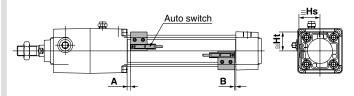


D-A5□/A6□ D-A59W

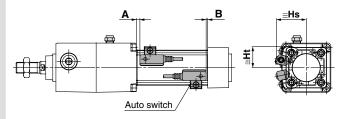


**D-F5**□/**J**5□

D-F5 W/J59W/F5BAL


D-F59F/F5NTL

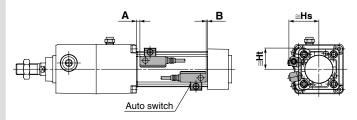

### D-P3DW□

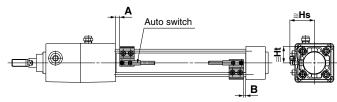

### **D-P4DWL**

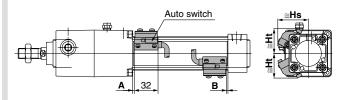

### Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

12.5 | 10 | 3

12.5 | 10

0

0

3

4

4.5 2

4.5 2

7.5

6

6

4

4

4

4

2.5

4

4

1.5

1.5

5.5

5.5

Auto Sw																(mm)				
Auto switch model	D-A9 D-A9 D-A9 A	9□ 9□V	D-M9				D-A59W		D-F5 D-J5 D-F5 D-F5 D-F5	9W 5□ 5□ 5BA	D-F	5NT	D-A D-A D-G D-K	.3□ .44 .39	D-Z7[ D-Z80 D-Y59 D-Y7[ D-Y7] D-Y7[ D-Y7] D-Y7[	0 9	D-P3	DW□	D-P4	1DW
(mm)	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В
32	6.5	4	10.5	8	0.5	0	4.5	2	7	4.5	12	9.5	1.5	0	4	1.5	6	3	3.5	1
40				_				_	_					_				_		

7.5 5

7.5

10.5

6.5 | 10.5 | 9

Note) Adjust the auto switch after confirming the operating conditions in the actual setting

5

0 5

2.5 8

2.5

2.5

8.5

8.5

12.5 4

12.5

Auto	Switch	Mounting	Heiaht

4.5

4.5

8.5 14

7

10

50

63

80

100

1	m	m	

Auto switch model	D-A9 D-M9 D-M9 D-M9	9□ 9□W	D-A	9□V	D-M9 D-M9 D-M9	□WV	D-A	6□	D-F5 D-F5 D-F5 D-F5 D-F5 D-F5	5□ 59F 5□W 59W 5BA	D-A D-G D-K	39	D-A	<b>\44</b>	D-Z7 D-Z8 D-Y8 D-Y7 D-Y7	80 59□ 7P 7□W	D-Y6 D-Y7 D-Y7	PV	D-P3	DW□	D-P4	1DW
(mm)	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht
32	24.5	23	27.5	23	30.5	23	35	24.5	32.5	25	67	27.5	77	27.5	25.5	23	26.5	23	34	23	38	31
40	28.5	25.5	31.5	25.5	34	25.5	38.5	27.5	36.5	27.5	71.5	27.5	81.5	27.5	29.5	26	30	26	38	26	42	33
50	33.5	31	36	31	38.5	31	43.5	34.5	41	34	77	_	87		33.5	31	34.5	31	42	31	46.5	39
63	38.5	36	40.5	36	43	36	48.5	39.5	46	39	83.5	ı	93.5	I	39	36	40	36	50	36	51.5	44
80	46.5	45	49	45	52	45	55	46.5	52.5	46.5	92.5	_	103	_	47.5	45	48.5	45	56	45	58	51.5
100	54	53.5	57	53.5	59.5	53.5	62	55	59.5	55	103	_	113.5	_	55.5	53.5	56.5	53.5	63.5	53.5	65.5	60.5

### **Operating Range**

(mm)

		В	ore siz	ze (mn	າ)	
Auto switch model	32	40	50	63	80	100
D-A9□/A9□V	7	7.5	8.5	9.5	9.5	10.5
D-M9□/M9□V D-M9□W/M9□WV D-M9□A/M9□AV	4	4.5	5	6	6	6
D-Z7□/Z80	7.5	8.5	7.5	9.5	9.5	10.5
D-A5□/A6□	9	9	10	11	11	11
D-A59W	13	13	13	14	14	15
D-A3□/A44	9	9	10	11	11	11
D-Y59□/Y69□ D-Y7P/Y7□V D-Y7□W/Y7□WV D-Y7BA	5.5	5.5	7	7.5	6.5	5.5
D-F5□/J5□ D-F5□W/J59W D-F5BA/F5NT D-F59F	3.5	4	4	4.5	4.5	4.5
D-G39/K39	9	9	10	11	11	11
D-P3DW□	4.5	5	5	5.5	4	6.5
D-P4DW	4	4	4	4.5	4	4.5

 $<sup>\</sup>ast$  Since this is a guideline including hysteresis, not meant to be guaranteed.

(Assuming approximately ±30% dispersion.)

There may be the case it will vary substantially depending on an ambient environment.



# **Minimum Stroke for Auto Switch Mounting**


Auto switch model	No. of auto switches mounted	ø32, ø40, ø50, ø63	ø80, ø100			
	2 (Different surfaces, same surface), 1	15				
D-A9□	n	$15 + 40 \frac{(n-2)}{2}$ (n = 2, 4, 6, 8···)				
D 40=1/	2 (Different surfaces, same surface), 1		10			
D-A9□V	n	10 + 30 (n=2, 4	2			
D-M9□	2 (Different surfaces, same surface), 1		15			
D-M9□W D-M9□AL	n	15 + 40 \frac{(n-2)}{2} (n=2, 4, 6, 8)				
D-M9□V	2 (Different surfaces, same surface), 1	10				
D-M9□WV D-M9□AVL	n	$10 + 30 \frac{(n-2)}{2}$ (n=2, 4, 6, 8···)				
	2 (Different surfaces)	35				
	2 (Same surface)	100				
D-A3□ D-G39	n (Different surfaces)	35 ± 30 (n_2)				
D-K39	n (Same surface)	100 + 10 (n = 2,	` '			
	1		10			
	2 (Different surfaces)		35			
	2 (Same surface)	55				
D-A44	n (Different surfaces)	35 + 30 (n-2) (n = 2, 3, 4···)				
	n (Same surface)	55 + 50 (n-2) (n = 2, 3, 4···)				
	1	10				

		n: No	. of auto switches (mm)			
Auto switch model	No. of auto switches mounted	ø32, ø40, ø50, ø63	ø80, ø100			
<b>D-A5</b> □	2 (Different surfaces, same surface), 1	15	20			
D-A6□	n (Same surface)	$15 + 55 \frac{(n-2)}{2}$ (n=2, 4, 6, 8)	$20 + 55 \frac{(n-2)}{2}$ (n=2, 4, 6, 8···)			
	2 (Different surfaces, same surface)	20	25			
D-A59W	n (Same surface)	20 + 55 \frac{(n-2)}{2} (n=2, 4, 6, 8)	25 + 55 (n-2) (n=2, 4, 6, 8···)			
	1	15	25			
D-F5□/J5□	2 (Different surfaces, same surface)	15	25			
D-F5□W D-J59W	n (Same surface)	15 + 55 (n-2)	25 + 55 <u>(n-2)</u>			
D-F5BAL D-F59F	Tr (Garrio Garriago)	(n=2, 4, 6, 8···)	(n=2, 4, 6, 8···)			
D-F5NTL	1	10	25			
D-Z7□ D-Z80	2 (Different surfaces, same surface), 1		15			
D-Y59□ D-Y7P	n		$15 + 40 \frac{(n-2)}{2}$			
D-Y7□W		(n=2, 4,	6, 8…)			
D-Y69□	2 (Different surfaces, same surface), 1	10				
D-Y7PV D-Y7□WV	n	10 + 30	-			
		(n=2, 4,	6, 8…)			
	2 (Different surfaces, same surface), 1	2	0			
D-Y7BAL	n	20 + 45	(n-2)			
		(n=2, 4,	6, 8…)			
	2 (Different surfaces, same surface), 1	1	5			
D-P3DW□	n	15 + 50	) <u>(n-2)</u>			
		(n=2, 4, 6, 8···)				
	2 (Different surfaces, same surface), 1	1	5			
D-P4DWL	n	15 + 65	<u>(n-2)</u>			
		(n=2, 4, 6, 8···)				

# Cylinder with Lock Series MNB

### **Auto Switch Mounting Bracket Part No.**

Auto quitale mandal	Bore size (mm)									
Auto switch model	ø32	ø40	ø50	ø63	ø80	ø100				
D-A9□/A9□V D-M9□/M9□V D-M9□W/M9□WV D-M9□AL/M9□AVL	BMB5-032	BMB5-032	BA7-040	BA7-040	BA7-063	BA7-063				
D-A3□/A44 D-G39/K39	BMB2-032	BMB2-040	BMB1-050	BMB1-063	BMB1-080	BMB1-100				
D-A5□/A6□ D-A59W D-F5□/J5□ D-F5□W/J59W D-F5□F D-F5BAL D-F5NTL	BT-03	BT-03	BT-05	BT-05	BT-06	BT-06				
D-P3DW□	BMB9-032S	BMB9-032S	BMB9-050S	BMB9-050S	BA9T-063S	BA9T-063S				
D-P4DWL	BMB3T-040	BMB3T-040	BMB3T-050	BMB3T-050	BMB3T-080	BMB3T-080				
D-Z7□/Z80 D-Y59□/Y69□ D-Y7P/Y7PV D-Y7□W D-Y7□WV D-Y7BAL	BMB4-032	BMB4-032	BMB4-050	BMB4-050	BA4-063	BA4-063				

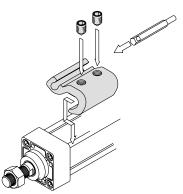

 The above figure shows the mounting example of D-A9□(V)/M9□(V)/M9□W(V)/ M9□A(V)L.

#### [Mounting screws set made of stainless steel]

The following set of mounting screws made of stainless steel is also available. Use it in accordance with the operating environment. (Please order the auto switch mounting bracket separately, since it is not included.)

BBA1: For D-A5/A6/F5/J5 types

D-F5BAL auto switch is set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, BBA1 is attached.

Note 1) Refer to page 1821 for the details of BBA1.

Note 2) When using D-M9□A(V)L/Y7BAL, do not use the steel set screws which is included with the auto switch mounting brackets above (BMB5-032, BA7-□□□, BMB4-□□□, BA4-□□□). Order a stainless steel screw set (BBA1) separately, and select and use the M4 x 6L stainless steel set screws included in the BBA1.

Besides the models listed in How to Order, the following auto switches are applicable. For detailed specifications, refer to pages 1719 to 1827.

Auto switch type	Model	Electrical entry (Fetching direction)	Features
	D-A93V, A96V	Grommet (Perpendicular)	_
Reed	D-A90V	Groninet (Ferpendicular)	Without indicator light
need	D-A53, A56, Z73, Z76	Grommet (In-line)	_
	D-A67, Z80	Grommet (in-line)	Without indicator light
	D-M9NV, M9PV, M9BV		
	D-Y69A, Y69B, Y7PV		_
	D-M9NWV, M9PWV, M9BWV	Grommet (Perpendicular)	Diagnostic indication
	D-Y7NWV, Y7PWV, Y7BWV		(2-color indication)
	D-M9NAVL, M9PAVL, M9BAVL		Water resistant (2-color indication)
Solid state	D-F59, F5P, J59		
Solid State	D-Y59A, Y59B, Y7P		_
	D-F59W, F5PW, J59W		Diagnostic indication
	D-Y7NW, Y7PW, Y7BW	Grommet (In-line)	(2-color indication)
	D-F5BAL, Y7BAL		Water resistant (2-color indication)
	D-F5NTL		With timer
	D-P5DWL		Magnetic field resistant (2-color indication)

\* With pre-wired connector is available for solid state auto switches. For details, refer to pages 1784 and 1785.

\* Normally closed (NC = b contact), solid state auto switch (D-F9G/F9H/Y7G/Y7H type) are also available. For details, refer to pages 1746 and 1748.

CLM2

CLJ2

CLG1

CL1

MLGC

CNG

MNB

CNA

CNS

CLQ

RLQ

MLU

MLGP

ML1C







Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions and pages 3 to 11 for Actuator and Auto Switch Precautions.

### **Design of Equipment and Machinery**

## ⚠ Warning

 Construct so that the human body will not come into direct contact with driven objects or the moving parts of the cylinders with lock.

Devise a safe structure by attaching protective covers that prevent direct contact with the human body, or in cases where there is a danger of contact, provide sensors or other devices to perform an emergency stop, etc., before contact occurs.

2. Use a balance circuit, taking cylinder lurching into consideration.

In cases such as an intermediate stop, where a lock is operated at a desired position within the stroke and air pressure is applied from only one side of the cylinder, the piston will lurch at high speed when the lock is released. In such situations, there is a danger of causing human injury by having hands or feet, etc. caught, and also a danger for causing damage to the equipment. In order to prevent this lurching, a balance circuit such as the recommended pneumatic circuits (page 719) should be used.

#### Selection

# **⚠** Warning

 When in the locked state, do not apply a load accompanied by an impact shock, strong vibration or turning force, etc.

Use caution, because an external action such as an impacting load, strong vibration or turning force, may damage the locking mechanism or reduce its life.


2. Consider stopping accuracy and the amount of over-run when an intermediate stop is performed.

Due to the nature of a mechanical lock, there is a momentary lag with respect to the stop signal, and a time delay occurs before stopping. The cylinder stroke resulting from this delay is the overrun amount. The difference between the maximum and minimum overrun amounts is the stopping accuracy.

- Place a limit switch before the desired stopping position, at a distance equal to the overrun amount.
- The limit switch must have a detection length (dog length) of the overrun amount +  $\Omega$ .
- SMC's auto switches have operating ranges from 8 to 14 mm (depending on the auto switch model).

When the overrun amount exceeds this range, self-holding of the contact should be performed at the auto switch load side.

\* For stopping accuracy, refer to page 697.

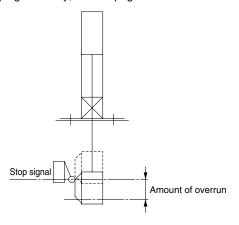

### Selection

# **Marning**

3. In order to further improve stopping accuracy, the time from the stop signal to the operation of the lock should be shortened as much as possible.

To accomplish this, use a device such as a highly responsive electric control circuit or solenoid valve driven by direct current, and place the solenoid valve as close as possible to the cylinder.

4. Note that the stopping accuracy will be influenced by changes in piston speed.

When piston speed changes during the course of the cylinder stroke due to variations in the load or disturbances, etc., the dispersion of stopping positions will increase. Therefore, consideration should be given to establishing a standard speed for the piston just before it reaches the stopping position.

Moreover, the dispersion of stopping positions will increase during the cushioned portion of the stroke and during the accelerating portion of the stroke after the start of operation, due to the large changes in piston speed.

5. The holding force (max. static load) indicates the maximum capability to hold a static load without loads, vibration and impact. This does not indicate a load that can be held in ordinary conditions.

Select the most suitable bore sizes for the operating conditions in accordance with the selection procedures. The Model Selection (pages 694 and 695) is based on use at the intermediate stop (including emergency stops during operation). However, when the cylinder is in a locked state, kinetic energy does not act upon it. Under these conditions, use the load mass at the maximum speed (V) of 100 mm/s shown in graphs (5) to (7) on page 695 depending on the operating pressure and select models.

#### Mounting


## **Marning**

 Be certain to connect the rod end to the load with the lock released.

If connected in the locked state, a load greater than the turning force or holding force, etc. may operate on the piston rod and cause damage to the lock mechanism. Series MNB is equipped with an emergency unlocking mechanism, however, when connecting the rod end to the load, this should be done with the lock released. This can be accomplished by simply connecting an air line to the unlocking port and supplying air pressure of 0.25 MPa or more.

2. Do not apply offset loads to the piston rod.

Particular care should be taken to match the load's center of gravity with the center of the cylinder shaft. When there is a large discrepancy, the piston rod may be subjected to uneven wear or damage due to the inertial moment during locking stops.

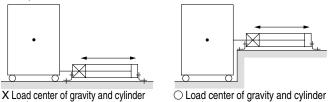

shaft center are not matched. shaft center are matched.

Note) Can be used if all of the generated moment is absorbed by an effective guide.





Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions and pages 3 to 11 for Actuator and Auto Switch Precautions.

### Mounting

### **⚠** Caution

1. Use the hexagon wrenches shown below when replacing brackets.

Bore size (mm)		Bolt	Width across flats	Tightening torque (N-m)	
32, 40		MB-32-48-C1247	4	5.1	
50,	63	MB-50-48-C1249	5	11	
80, 100	Foot	MB-80-48AC1251	6	25	
80, 100	Others	MB-80-48BC1251	6	25	

2. When replacing the head side bracket, the tie-rod nut on the cylinder body also loosens.

After retightening the tie-rod nut at the proper tightening torque (Refer to Adjustment 1. below.), install the bracket.

3. Mounting between air cylinder Series CA1 and cylinder with lock Series CNA has no interchangeability.

### **Adjustment**

# **Marning**

1. Do not open the cushion valve beyond the stopper.

As a retaining mechanism for the cushion valve, a crimped section ( $\emptyset$ 32 head cover) or retaining ring is installed ( $\emptyset$ 40 to  $\emptyset$ 100), and the cushion valve should not be opened beyond that point.

If not operated in accordance with the above precautions, the cushion valve may be ejected from the cover when air pressure is supplied.

Bore size (mm)	Cushion valve	Hexagon wrench			
32, 40	2.5	JIS 4648 Hexagon wrench key 2.5			
50, 63	3.0	JIS 4648 Hexagon wrench key 3			
80, 100	4.0	JIS 4648 Hexagon wrench key 4			

2. Use the air cushion at the end of cylinder stroke.

If this is not done, the tie-rod or piston assembly will be damaged.

## **⚠** Caution

1. Adjust the cylinder's air balance.

Balance the load by adjusting the air pressure in the rod and head sides of the cylinder with the load connected to the cylinder and the lock released. Lurching of the cylinder when unlocked can be prevented by carefully adjusting this air balance.

2. Adjust the mounting positions of the detectors on auto switches, etc.

When intermediate stops are to be performed, adjust the mounting positions of detectors on auto switches, etc., taking into consideration the overrun amount with respect to the desired stopping positions.

### **Pneumatic Circuit**

## **Marning**

1. Be certain to use an pneumatic circuit which will apply balancing pressure to both sides of the piston when in a locked stop.

In order to prevent cylinder lurching after a lock stop, when restarting or when manually unlocking, a circuit should be used to which will apply balancing pressure to both sides of the piston, thereby canceling the force generated by the load in the direction of piston movement.

2. Use a solenoid valve for unlocking which has a large effective area, as a rule 50% or more of the effective area of the cylinder drive solenoid valve.

The larger the effective area is, the shorter the locking time will be (the overrun amount will be shorter), and stopping accuracy will be improved.

Place the solenoid valve for unlocking close to the cylinder, and no farther than the cylinder drive solenoid valve.

The shorter the distance from the cylinder (the shorter the piping), the shorter the overrun amount will be, and stopping accuracy will be improved.

 Allow at least 0.5 seconds from a locked stop (intermediate stop of the cylinder) until release of the lock.


When the locked stop time is too short, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.

When restarting, control the switching signal for the unlocking solenoid valve so that it acts before or at the same time as the cylinder drive solenoid valve.

If the signal is delayed, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.

### 6. Basic circuit


1) [Horizontal]

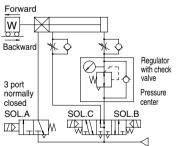

SOL.A	SOL.B	SOL.C	Action	
ON	ON	OFF	Forward	
OFF	OFF	OFF	Locked stop	05.00
ON	OFF	OFF	Unlocked	0.5 s or more 0 to 0.5 s
ON	ON	OFF	Forward	▼ 0 10 0.5 8
ON	OFF	ON	Backward	
OFF	OFF	OFF	Locked stop	0500000
ON	OFF	OFF	Unlocked	0.5 s or more 0 to 0.5 s
ON	OFF	ON	Backward	<b>→</b> 0 10 0.5 S

2) [Vertical]

[Load in the direction of rod extension] [Load in the direction of rod retraction]

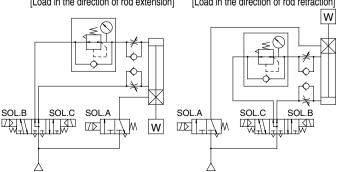

CLM2

CLJ2

CL1 MLGC

CNG

MNB

CNA

CNS

CLS CLQ

RLQ

MLU

MLGP

ML1C

D-□

-X□




Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions and pages 3 to 11 for Actuator and Auto Switch Precautions.

### **Pneumatic Circuit**


# **⚠** Caution

1. 3 position pressure center solenoid valve and regulator with check valve can be replaced with two 3 port normally open valves and a regulator with relief function.

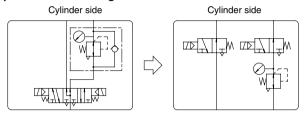


### [Example]

1. [Horizontal]

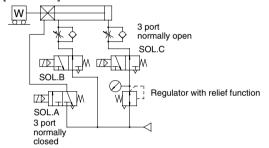

2. [Vertical]

[Load in the direction of rod extension] [Load in the direction of rod retraction]

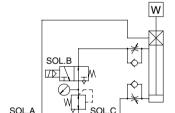

**Manually Unlocking** 

w

# \land Warning

- 1. Never operate the unlocking cam until safety has been confirmed. (Do not turn to the FREE side.)
  - When unlocking is performed with air pressure applied to only one side of the cylinder, the moving parts of the cylinder will lurch at high speed causing a serious hazard.
  - When unlocking is performed, be sure to confirm that personnel are not within the load movement range and that no other problems will occur if the load moves.
- 2. Before operating the unlocking cam, exhaust any residual pressure which is in the system.
- Take measures to prevent the load from dropping when unlocking is performed.
  - Perform work with the load in its lowest position.
  - Take measures for drop prevention by strut, etc.

### **Manually Unlocking**

### **⚠** Caution

The unlocking cam is an emergency unlocking mechanism only.

During an emergency when the air supply is stopped or cut off, this is used to alleviate a problem by forcibly pushing back the release piston and brake spring to release the lock.


- When installing the cylinder into equipment or performing adjustments, etc., be sure to apply air pressure of 0.25 MPa or more to the unlocking port, and do not perform work using the unlocking cam.
- 3. When releasing the lock with the unlocking cam, it must be noted that the internal resistance of the cylinder will be high, unlike normally unlocking with air pressure.

Bore size (mm)	Cylinder internal resistance (N)	Cam unlocking torque (standard) (N•m)	Width across flats (mm)
32	69	2.0	5.5
40	108	5.9	7
50	275	11.8	8
63	432	12.8	10
80	686	20.6	10
100	765	23.5	12

4. Do not turn the unlocking cam (the arrow or mark on the unlocking cam head) past the position marked FREE.

If it is turned too far there is a danger of damaging the unlocking cam.

5. For safety reasons, the unlocking cam is constructed so that it cannot be fixed in the unlocked condition.

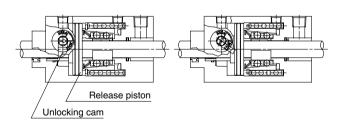

Locked state

Manually unlocked state

#### [Principle]

If the unlocking cam is turned counterclockwise with a tool such as an adjustable angle wrench, the release piston is pushed back and the lock is released. Since the lever will return to its original position when released and become locked again, it should be held in this position for as long as unlocking is needed.



Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions and pages 3 to 11 for Actuator and Auto Switch Precautions.

### **Maintenance**

### **⚠** Caution

#### 1. The lock units for Series MNB are replaceable.

To order replacement lock units for Series MNB, use the order numbers given in the table below.


Bore size (mm)	Lock unit part no.
32	MNB 32D-UA
40	MNB 40D-UA
50	MNB 50D-UA
63	MNB 63D-UA
80	MNB 80D-UA
100	MNB100D-UA

#### 2. How to replace lock unit


1) Loosen the tie-rod nuts (4 pcs.) on the cylinder head cover side by using a hexagon wrench.

For the applicable hexagon wrench, refer to the table below.


Bore size (mm)	Tie-rod nut socket width across flats (mm)
32, 40	6
50, 63	8
80, 100	10

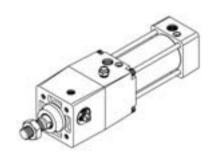


2) Remove the tie-rods, head cover and cylinder tube.

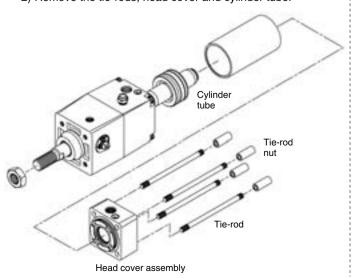


Apply 0.3 MPa or more of compressed air to the unlocking port, and pull out the piston rod assembly.

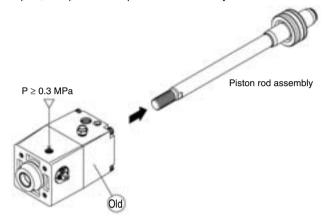

4) Similarly, apply 0.3 MPa or more of compressed air to the unlocking port of the new lock unit, and replace the new lock unit's temporary axis with the previous piston rod assembly.

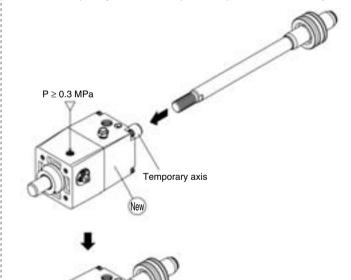

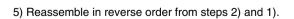



CLJ2

CLM2

CLG1

CL<sub>1</sub>

MLGC

CNG

MNB

CNA

CNS

CLS

CLQ

RLQ

MLU

MLGP

ML1C

