# NDEX

	21-VQ1000 How to Order, Manifold Options	P. 4
	21-VQ1000/2000 <b>F</b> kit (D-sub connector)	P. 10
	<sup>10</sup> - <b>VQ1000/2000</b> P kit (Flat ribbon cable)	P. 14
	<sup>10</sup> -VQ1000/2000 <b>J</b> kit (Flat ribbon cable)	P. 18
	와 <b>VQ1000/2000</b> <b>G</b> kit (Flat ribbon cable with terminal block)	P. 22
	<sup>10</sup> -VQ1000/2000 T kit (Terminal block box)	P. 26
	21: <b>VQ1000/2000</b> L kit (Lead wire)	P. 30
	와 <b>VQ1000/2000</b> S kit (Serial transmission) EX510	P. 34
	가 <b>VQ1000/2000</b> S kit (Serial transmission) EX120/123/124	P. 38
Relation of the second	한 <b>VQ2000</b> M kit (Circular connector)	P. 44
	한 <b>VQ2000</b> Sub-plate Single Unit	P. 47
	21-VQ1000/2000 Construction 21-VQ1000/2000 Exploded View of Manifold	P. 54 P. 58
		· · · · · · · · · · · · · · · · · · ·




## **Plug-in Unit**

**Base Mounted** 

# Series 21-VQ1000 (6

Note) For CE compliant models, DC-type only

## **How to Order Manifold**

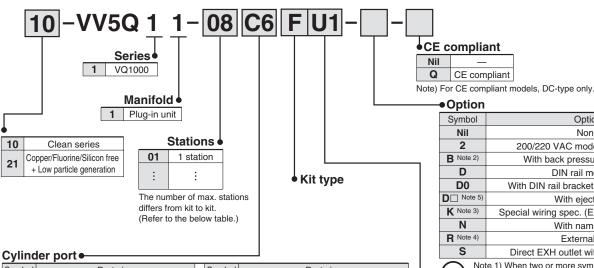

cymus porce							
Symbol	Port size						
C3	With ø3.2 One-touch fitting						
C4	With ø4 One-touch fitting						
C6 With ø6 One-touch fitting							
M5	M5 thread						
CM Note 1)	Mixed sizes and with port plug						
L3	Top ported elbow with ø3.2 One-touch fitting						
L4 Top ported elbow with ø4 One-touch							
16	Top ported elbow with ø6 One-touch fitting						

Symbol Port size Top ported elbow M5 thread L<sub>5</sub> **B3** Bottom ported elbow with ø3.2 One-touch fitting **B4** Bottom ported elbow with ø4 One-touch fitting **B6** Bottom ported elbow with ø6 One-touch fitting **B**5 Bottom ported elbow M5 thread LM Note Elbow port, mixed sizes Mixed size for different types of piping, option installed

Note 1) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet. Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Inch-size One-touch fittings are also available. Refer to page 50 for details.

Note 4) M5 fittings for M5 thread are attached without being incorporated.

Simple specials are available with SMC Simple Specials System. Refer to Best Pneumatics No. (1) for details on applicable models. Option Symbol Nil None 2 200/220 VAC models (F/L kit only) B Note 2) With back pressure check valve ח DIN rail mounting D0 With DIN rail bracket (Without DIN rail) D☐ Note 5) With ejector unit K Note 3) Special wiring spec. (Except double wiring) With name plate R Note 4) External pilot S Direct EXH outlet with built-in silencer

CE compliant

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS Note 2) Models with a suffix "-B" have check valves for


prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) Specify the wiring specifications by means of the manifold specification sheet. (Except L kit)

Note 4) Indicate "R" for the valve with external pilot.

Note 5) : Station. Example: D08: The number of stations that may be displayed is longer than the manifold number of stations

## Kit type/Electrical entry/Cable length •

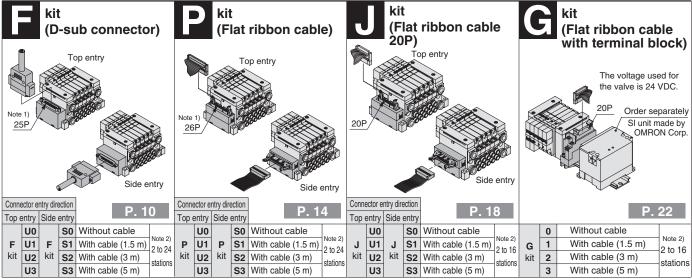

Note 1) Besides the above, F/P kit with different number of pins are available. Refer to page 48 for details Note 2) Refer to page 49 for details




## Base Mounted Plug-in Unit Series 21-VQ1000

## **How to Order Valves**


Note) For CE compliant models, DC-type only. [Option]

## **How to Order Manifold Assembly**

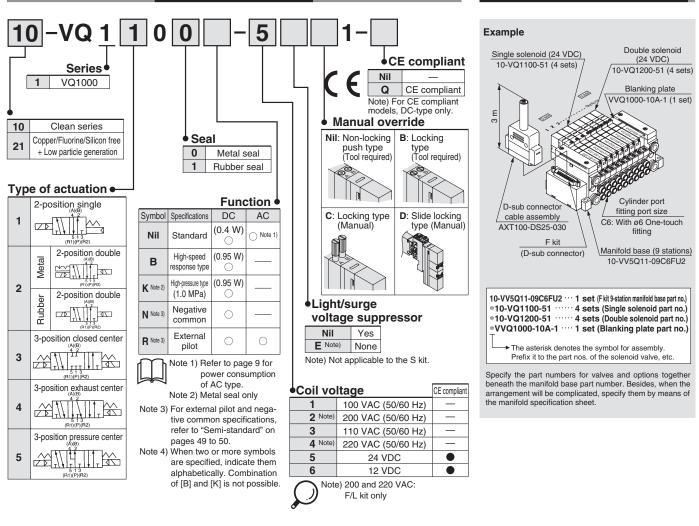

## **∆** Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

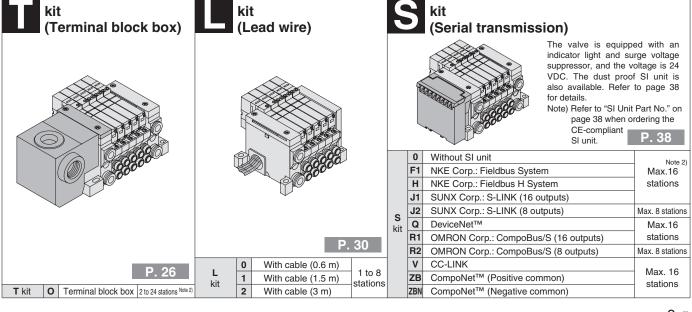


## **Plug-in Unit**

**Base Mounted** 

# Series 21-VQ2000 (€

models, DC-type only.

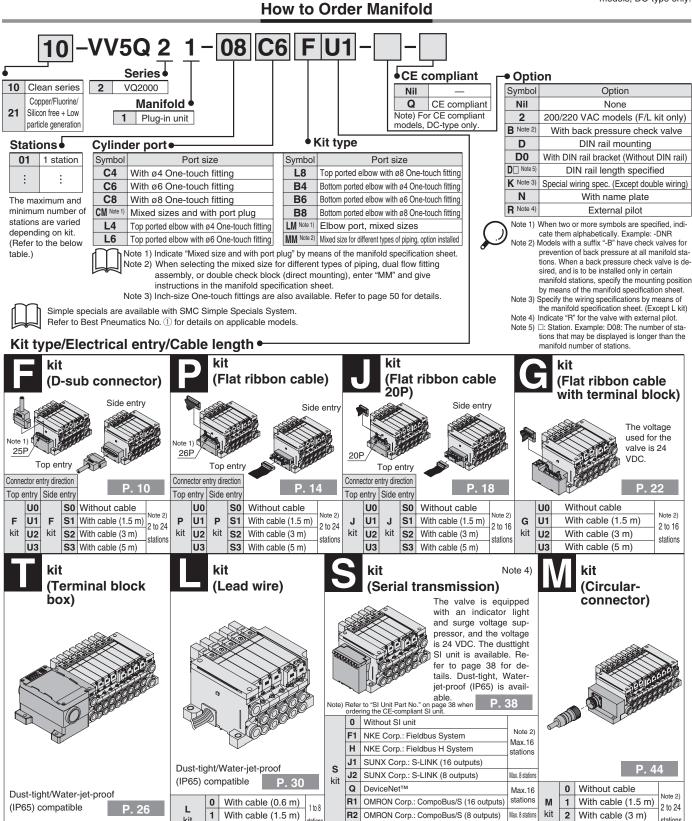

Note 1) Besides the above, F/P kit with different number of pins are available Refer to page 48 for details.

kit

2 With cable (3 m)

Note 2) Refer to page 49 for details.

O Terminal block box 2 to 20 stations Note 2

Note 3) Refer to the pages on respective kits for IP65 type. (T/L/S kit) Note 4) Serial transmission system with IP65 enclosure applicable to input/output is also available. Refer to page 42 for details.

stations

3 With cable (5 m)



## Base Mounted Plug-in Unitt Series 21-VQ2000


How to Order Valves


Note) For CE compliant models, DC-type only.

[Option only.]

# nt **( E** [Option]

## **How to Order Manifold Assembly**

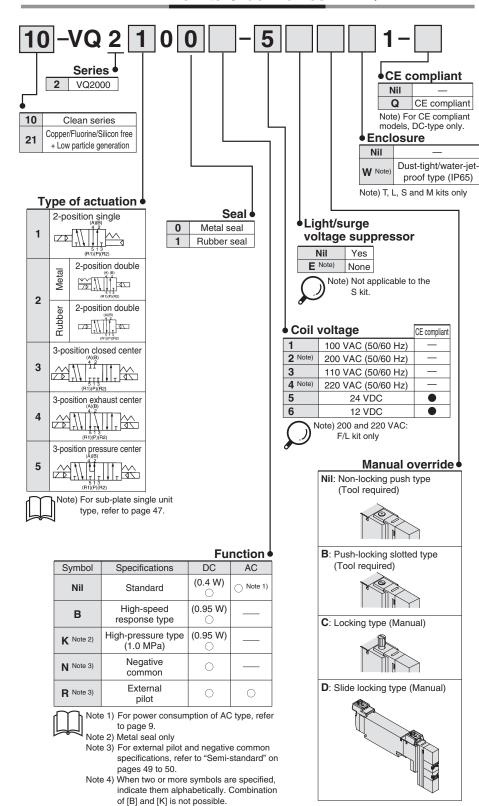

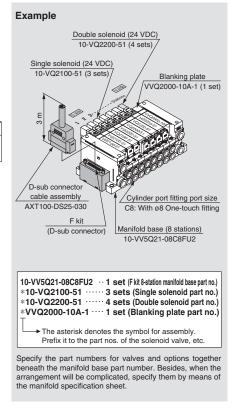


## **⚠** Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


## <sup>10</sup>-VQ1000: Manifold Options

P. 58 to 59


Blanking plate assembly VVQ1000-10A-1

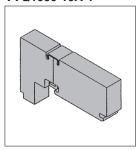


Individual SUP spacer VVQ1000-P-1- $^{C6}_{N7}$ 

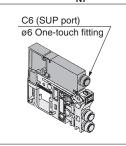


Individual EXH spacer VVQ1000-R-1-R<sub>07</sub>

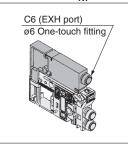

SUP block plate VVQ1000-16A

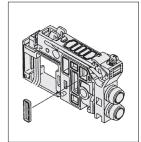


EXH block base assembly VVQ1000-19A-F

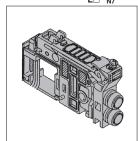


Back pressure check valve Name plate [-N] assembly [-B] VVQ1000-18A




VVQ1000-NC-Station (1 to Max. stations)

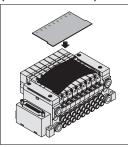

Blanking plug KQ2P-□

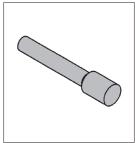


DIN rail mounting bracket [-D/-D0/-D□] VVQ1000-57A

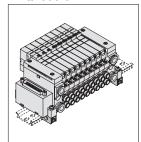


## 10-VQ2000: Manifold Options

P. 60 to 61


Blanking plate assembly VVQ2000-10A-1

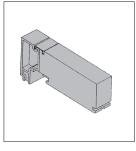


Individual SUP spacer VVQ2000-P-1-<sup>C8</sup><sub>N9</sub>

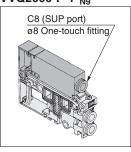


Individual EXH spacer VVQ2000-R-1-C8

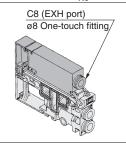

SUP block plate VVQ2000-16A

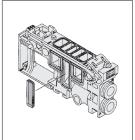


**EXH** block plate VVQ2000-19A

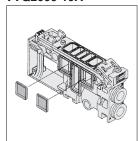


Back pressure check valve assembly [-B] VVQ2000-18A




Name plate [-N] VVQ2000-N-Station (1 to Max. stations)

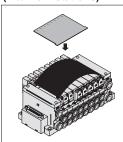

Blanking plug KQ2P-Ŭ

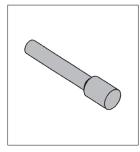

DIN rail mounting bracket [-D/-D0/-D□] VVQ2000-57A

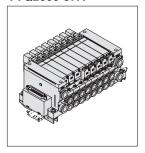




# **Plug-in Unit**

Base Mounted

# Series 21-VQ1000/2000

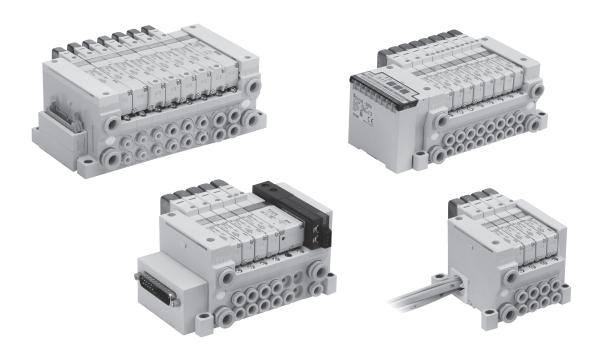

#### Model

Model														
				Flow-rate characteristics Note 1)				Respo	nse time (ms)	Note 2)				
Series		Type of actuation	YIODAI		1 → 2/4 (P -	→ A/B)		$2/4 \rightarrow 3/5 \text{ (A/B} \rightarrow \text{R1/R2)}$		Standard:	High-speed response:	AC	Mass (g)	
					C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv	0.4 W	0.95 W	ΛΟ	,
	_	Single	Metal seal	<sup>10</sup> -VQ1100	0.70	0.15	0.16	0.72	0.25	0.18	15 or less	12 or less	29 or less	67
	sition	Sirigie	Rubber seal	<sup>10</sup> - <sub>21</sub> -VQ1101	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	34 or less	07
	od-	Single Double	Metal seal	<sup>10</sup> - <sub>21</sub> -VQ1200	0.70	0.15	0.16	0.72	0.25	0.18	13 or less	10 or less	13 or less	
	CA	Double	Rubber seal	<sup>10</sup> -VQ1201	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	20 or less	
V04000		Closed	Metal seal	<sup>10</sup> -VQ1300	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
VQ1000	_	center	Rubber seal	<sup>10</sup> - <sub>21</sub> -VQ1301	0.70	0.20	0.16	0.65	0.42	0.18	33 or less	25 or less	47 or less	1
	sition	Exhaust center	Metal seal	<sup>10</sup> - <sub>21</sub> -VQ1400	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	77
	od-		Rubber seal	<sup>10</sup> -VQ1401	0.70	0.20	0.16	1.0	0.30	0.25	33 or less	25 or less	47 or less	
	က	Pressure	Metal seal	<sup>10</sup> -VQ1500	0.70	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
		center	Rubber seal	<sup>10-</sup> <sub>21-</sub> VQ1501	0.85	0.20	0.21	0.65	0.42	0.18	33 or less	25 or less	47 or less	
	_	Single	Metal seal	<sup>10</sup> - <sub>21</sub> -VQ2100	2.0	0.15	0.46	2.6	0.15	0.60	29 or less	22 or less	49 or less	95
	sitior		Rubber seal	<sup>10</sup> -VQ2101	2.2	0.28	0.55	3.2	0.30	0.80	31 or less	24 or less	51 or less	95
	od-	Daubla	Metal seal	<sup>10</sup> -VQ2200	2.0	0.15	0.46	2.6	0.15	0.60	20 or less	15 or less	20 or less	
	CA	Double	Rubber seal	<sup>10</sup> -VQ2201	2.2	0.28	0.55	3.2	0.30	0.80	26 or less	20 or less	26 or less	
V00000		Closed	Metal seal	<sup>10</sup> -VQ2300	2.0	0.15	0.46	2.0	0.18	0.46	38 or less	29 or less	58 or less	
VQ2000	_	center	Rubber seal	<sup>10</sup> -VQ2301	2.0	0.28	0.49	2.2	0.31	0.60	44 or less	34 or less	64 or less	105
	3-position	Exhaust	Metal seal	<sup>10</sup> -VQ2400	2.0	0.15	0.46	2.6	0.15	0.60	38 or less	29 or less	58 or less	105
	sod-	center	Rubber seal	<sup>10</sup> -VQ2401	2.0	0.28	0.49	3.2	0.30	0.80	44 or less	34 or less	64 or less	
	m	Pressure	Metal seal	<sup>10</sup> -VQ2500	2.4	0.17	0.57	2.0	0.18	0.46	38 or less	29 or less	58 or less	
		center	Rubber seal	<sup>10</sup> -VQ2501	3.2	0.28	0.80	2.2	0.31	0.60	44 or less	34 or less	64 or less	



Note 1) The values are given for port size C6: (10-VQ1000), C8: (10-VQ2000) without back pressure check valve.

Note 2) As per JIS B 8375-1981 (Supply pressure 0.5 MPa; with indicator light/surge voltage suppressor; clean air

The response time is subject to the pressure and quality of the air.) The values at the time of ON are given for double types.



## Base Mounted Plug-in Unit *Series* 21-*VQ1000/2000*

## **Standard Specifications**

	Valve type		Metal seal Rubber seal		
	Fluid		Air, Inert gas	Air, Inert gas	
	Maximum operating	oressure	0.7 MPa (High-pressure type: 1.0 MPa)	0.7 MPa	
us		Single	0.1 MPa	0.15 MPa	
atio	Minimum	Double	0.1 MPa	0.1 MPa	
Valve specifications	operating pressure	3-position	0.1 MPa	0.2 MPa	
sbe		4-position		0.15 MPa	
Ne Ne	Ambient and fluid ter	nperature	-10 to 50	o°C Note 1)	
Va	Lubrication		Not required		
	Manual override		Push type, Locking type (Tool required, Manual) semi-standard		
	Impact/Vibration resi	stance Note 2)	150/30 m/s <sup>2</sup>		
	Enclosure		Dust-protected; Dust-tight, Water-jet-proof (IP65) Note 4)		
	Coil rated voltage		12 , 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)		
us us	Allowable voltage flu	ctuation	±10% of rated voltage		
atio	Coil insulation type		Equivalent to Class B		
ific		24 VDC	0.4 W DC (17 mA), 0.9	5 W DC (40 mA) Note 3)	
sbec		12 VDC	0.4 W DC (34 mA), 0.9	5 W DC (80 mA) Note 3)	
Electrical specifications	Power consumption	100 VAC	Inrush 0.96 VA (10 mA),	Holding 0.96 VA (10 mA)	
	(Current)	110 VAC	Inrush 1.0 VA (9 mA),	Holding 1.0 VA (9 mA)	
		200 VAC	Inrush 1.26 VA (6 mA),	Holding 1.26 VA (6 mA)	
		220 VAC	Inrush 1.38 VA (6 mA), Holding 1.38 VA (6 mA)		

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance ······ No malfunction occurred when it is tested in the axial direction and at the right

angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Value for high-speed response, high-voltage type (0.95 W) Note 4) Dust-tight, Water-jet-proof (IP65) is available on T/L/S/M kit of the VQ2000.


## **Manifold Specifications**


JIS symbol 2-position single

2-position double

			P	iping specification		Note 2)	Applicable	5-station
Series	Base model	Connection type	Piping	Port size Note 1)		Applicable stations	solenoid valve	mass
			direction	1(P), 3(R)	4(A), 2(B)	Stations		(g)
<sup>10-</sup> <sub>21-</sub> VQ1000	VV5Q11	F kit-D-sub connector P kit-Flat ribbon cable J kit-Flat ribbon cable (20P) G kit-Flat ribbon cable with terminal block T kit-Terminal block box L kit-Lead wire S kit-Serial transmission	Side	C8 (ø8)  Option: Direct EXH outlet with built-in silencer	C3 (ø3.2) C4(ø4) C6 (ø6) M5 (M5 thread)	F/P/T kit 2 to 24 stations J/G/S kit 2 to 16 stations L kit 1 to 8 stations	VQ1□00 VQ1□01	643 (Single) 754 (Double, 3-position)
<sup>10-</sup> <sub>21-</sub> VQ2000	VV5Q21-□□□	F kit-D-sub connector P kit-Flat ribbon cable J kit-Flat ribbon cable (20P) G kit-Flat ribbon cable with terminal block T kit-Terminal block box L kit-Lead wire S kit-Serial transmission M kit-Circular connector	Side	C10 (ø10)  Option: Direct EXH outlet with built-in silencer	C4 (ø4) C6 (ø6) C8 (ø8)	F/P kit 2 to 24 stations  J/G/S kit 2 to 16 stations  L kit 1 to 8 stations  T kit 2 to 20 stations	VQ2□00 VQ2□01	1076 (Single) 1119 (Double, 3-position)

Note 1) Inch-size one-touch fittings are also available. Refer to page 50 for details. Note 2) Refer to page 49 for details.

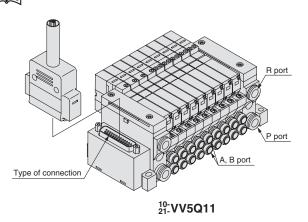


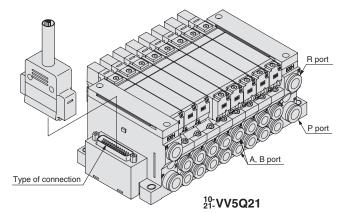



## Series <sup>10</sup>-VQ 1000/2000 Kit (D-sub connector)



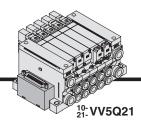

- D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as semi-standard) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance
- Maximum stations are 24.

## with the available mounting space.

## **Manifold Specifications**

	Р				
Series	Piping	P	Applicable stations		
	direction	1(P), 3(R)	4(A), 2(B)		
<sup>10-</sup> <sub>21-</sub> VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations	
10- 21- VQ2000	Side	C10	C4, C6, C8	Max. 24 stations	

## D-sub Connector (25 Pins)


## Cable Assembly ●



The D-sub connector cable assembly can be ordered individually or \included in a specific manifold model no. Refer to "How to Order Manifold.",

Note 1) Types with 15 pins are also available. Refer to page 48 for details.

Note 2) Lengths other than the above are also available. Please contact SMC for details.

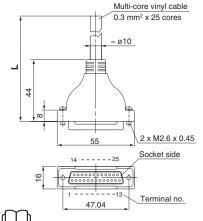

#### D-sub connector cable assembly

Cable length ( <b>L</b> )	Assembly part no.	Note
1.5 m	AXT100-DS25-015	0-1-05
3 m	AXT100-DS25-030	Cable 25 cores x 24AWG
5 m	AXT100-DS25-050	X 2-7AVVG
		0= :

- \* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.
- Cannot be used for transfer wiring.

#### Connector manufacturers' example

- Fuiitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Flectric Co. Ltd.

#### Electrical characteristics

Item	Property	
Conductor resistance Ω/km, 20°C	65 or less	
Voltage limit V, 1 min, AC	1000	
Insulation resistance MΩ/km, 20°C	5 or more	

Note) The min. bending radius of the D-sub connector cable assembly is 20 mm.

#### Wire color by terminal no. of D-sub connector cable assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None


#### How to Order Manifold


Note) Refer to page 49

for details.

Note) For CE compliant models, DC-type only.



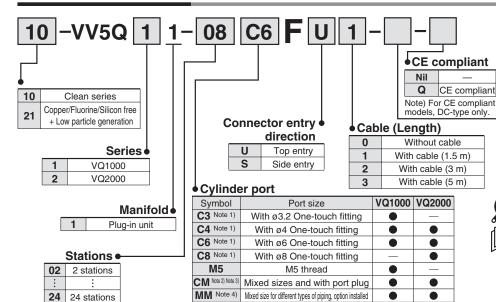

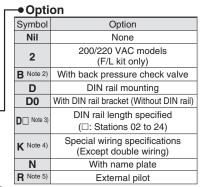

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 2) Models with a suffix "-B" have check valves for pre-

vention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed

is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet. Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet

Note 1) Insert E (100 ported) of D (bottom ported) for sloom type.


Example) B6 (Bottom ported elbow with 60 One-touch fitting)


Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 50 for details




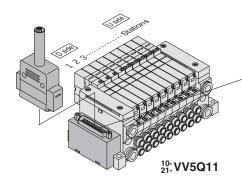

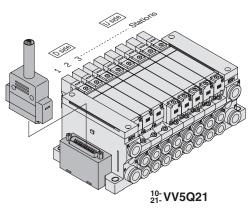

The total number of stations is tabulated starting from station one on the D-side.

## Electrical Wiring Specifications

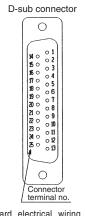

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 49 for details.

D-sub connector assembly 015 AXT100-DS25- 030 Wire color 050

			Terr	minal no		Polarity	Lead wire color	Dot ma	ırkir
	,	\ <u>SOL</u>	.A_	1	(-)	(+)	Black	Nor	1e
	Station 1	$\triangle^{\vee}$ sol	B	14	(-)	(+)	Yellow	Blac	ck
	· ·	$\triangle^{\vee}$ sol	A	2	(-)	(+)	Brown	Nor	1e
	Station 2	\\ <sup>∨</sup> soι	B	15	(-)	(+)	Pink	Blac	ck
		^\ <sup>v</sup> sol	A。	3	(-)	(+)	Red	Nor	пе
	Station 3	^\ <sup>v</sup> sol	В	16	(-)	(+)	Blue	Whi	te
	(	^\_\_\_\SOL	A	4	(-)	(+)	Orange	Nor	1e
	Station 4	^\ <u>sol</u>	B	17	(-)	(+)	Purple	Nor	1e
		$\triangle^{\vee}$ sol	A。	5	(-)	(+)	Yellow	Nor	пе
	Station 5	$\bigwedge^{\vee}$ sol	B	18	(-)	(+)	Gray	Nor	пе
	0	^\ <sup>v</sup> sol	A	6	(-)	(+)	Pink	Nor	пе
	Station 6	^\ <sup>v</sup> sol	B	19	(-)	(+)	Orange	Blac	ck
		^\ <sup>v</sup> sol	A。	7	(-)	(+)	Blue	Nor	1e
	Station 7	^\_\_\_\SOL	B	20	(-)	(+)	Red	Whi	te
		∧ <sup>∨</sup> so∟		8	(-)	(+)	Purple	Whi	te
	Station 8	^\ <u>sol</u>	B	21	(-)	(+)	Brown	Whi	te
	(	^\ <sup>v</sup> sol	A。	9	(-)	(+)	Gray	Blac	ck
ı	Station 9	^ <sup>∨</sup> so∟	B	22	(-)	(+)	Pink	Red	b
		^\ <sup>v</sup> sol	A。	10	(-)	(+)	White	Blac	ck
;	Station 10	^\ <sup>v</sup> sol	В。	23	(-)	(+)	Gray	Red	b
F		^\ <sup>v</sup> sol	A。	11	(-)	(+)	White	Red	b
	Station 11	^\_\_\_\SOL	B	24	(-)	(+)	Black	Whi	te
	Ctation 40 (	^\ <u>sol</u>	$\overline{}$	12	(-)	(+)	Yellow	Red	t
	Station 12	$\sqrt{\text{SOL}}$	B	25	(-)	(+)	White	Nor	1e
;		V ۵۵۰			(+)	(-) N	ote) Orange	Re	d

Positive

COM spec

Note) When using the negative common specifications, use valves for negative common. (Refer to page 49.) Refer to "Semi-standard" on page 49 for details.

## **How to Order Valves**

Series •

VQ1000

VQ2000

Clean series

Copper/Fluorine/Silicon free

+ Low particle generation

2-position single

2-position double

3-position closed center

4 3-position exhaust center **5** 3-position pressure center

Type of actuation ●

10

3

Note) For CE compliant models, DC-type only.



CE compliant

Note) For CE compliant models, DC-type only.

CE compliant

## **How to Order Manifold Assembly**

COM spec

Specify the part numbers for valves and options together beneath the manifold base part number.

#### <Example>

D-sub connector kit with cable (3 m)

VV5Q11-09C6FU2 ···1 set-Manifold base part no.

\*10-VQ1100-51 ······2 sets-Valve part no. (Stations 1 to 2) \*10-VQ1200-51 ..... 4 sets-Valve part no. (Stations 3 to 6)

\*10-VQ1300-51 ·····2 sets-Valve part no. (Stations 7 to 8) \*VVQ1000-10A-1 ····1 set-Blanking plate part no. (Station 9)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

Slide locking type (Manual) Light/surge voltage suppressor

Non-locking push type (Tool required)

Locking type (Tool required)

Locking type (Manual)

voitage supp							
Nil	Yes						
Е	None						

Nil

Manual override

B

C

D

• Co	CE compliant	
1	100 VAC (50/60 Hz)	_
2	200 VAC (50/60 Hz)	_
3	110 VAC (50/60 Hz)	_
4	220 VAC (50/60 Hz)	_
5	24 VDC	•
6	12 VDC	•

## Seal •

0	Metal seal
1	Rubber seal

Note 1) Refer to page 9 for power consumption of AC type.

DC

(0.4 W

(0.95 W)

(0.95 W)

AC

O<sup>Note 1</sup>

Function

Symbol Specifications

Standard

High-speed

response type

High-pressure type

(1.0 MPa)

Negative

common

pilot

Note 2) Metal seal only

Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 49 to 50.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.


## **⚠** Caution


Use the standard (DC) specification when continuously energizing for long periods of time.



## 10-VV5Q11

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

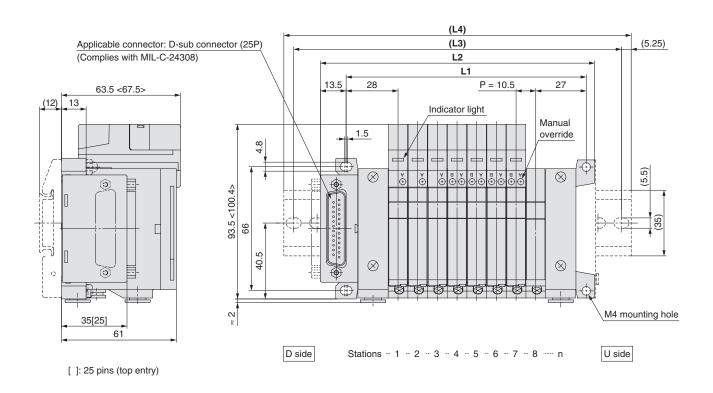

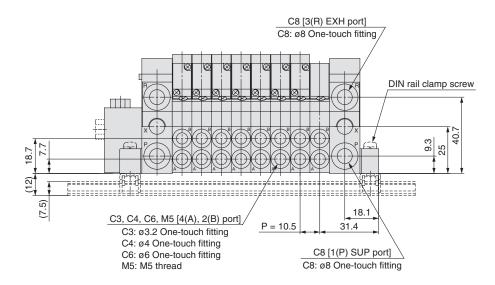



Dimens	Dimensions														+ 44.5	, L2 =	10.5n +	62.5	n: Sta	tion (M	laximur	n 24 st	ations)
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2	83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5	241	251.5	262	272.5	283	293.5	304	314.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7) L2 = 10.5n + 46.3 + (Number of ejector units x 26.7)L4 is L2 plus about 30.




<>: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

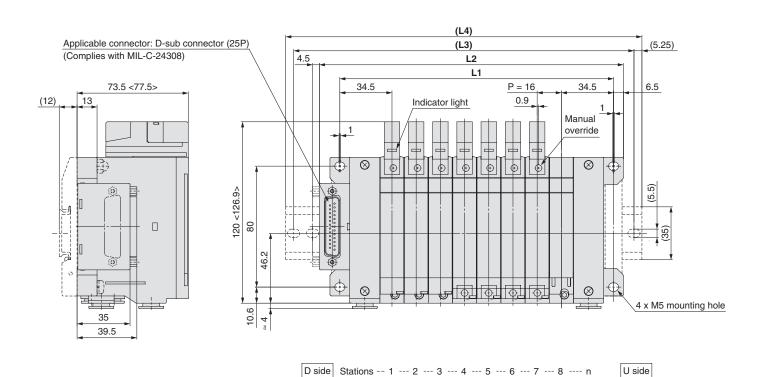


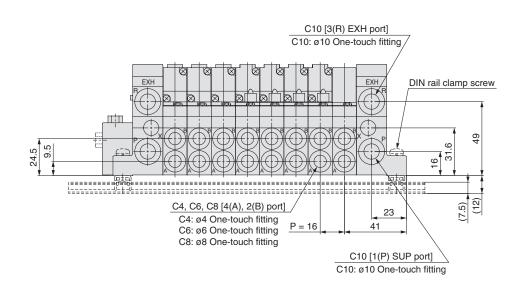

Dimens	Dimensions														= 16n +	+ 53, L2	2 = 16r	+ 73	n: Sta	tion (M	laximur	n 24 st	ations)
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441	457
(L3)	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5
(L4)	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498

## Series 21-VQ1000/2000 kit (Flat ribbon cable)

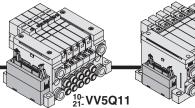

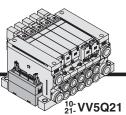

- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable (26P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.


## **Manifold Specifications**

	Р	iping specifi	cations	
Series	Piping	P	ort size	Applicable stations
	direction	1(P), 3(R)	4(A), 2(B)	Old Horizon
<sup>10-</sup> <sub>21-</sub> VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations
<sup>10-</sup> <sub>21-</sub> VQ2000	Side	C10	C4, C6, C8	Max. 24 stations

## Flat Ribbon Cable (26 Pins)

## AXT100-FC26-to

Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold."

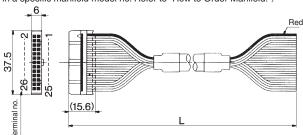

#### Flat Ribbon Cable Connector Assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	0.11.00
3 m	AXT100-FC26-2	Cable 26 cores x 28AWG
5 m	AXT100-FC26-3	X ZOAWG

- \* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.
- \* Cannot be used for transfer wiring


#### Connector manufacturers' example

for details

- Hirose Electric Co., Ltd. Fujitsu Limited Sumitomo 3M Limited
  - Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Cable Assembly

Note 1) Other than the above model, 10P, 16P, 20P are also available. Refer to page 48 for details. Note 2) Lengths other than the above are also available. Please contact SMC for details.

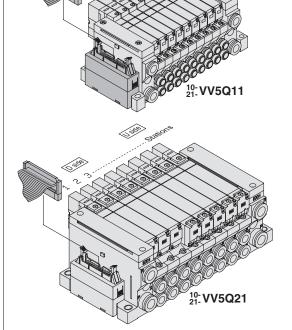


The total number of stations is tabulated starting from one on the D-side.

> For CE compliant models, DC-type only. Note) For CE compliant



## **How to Order Manifold**

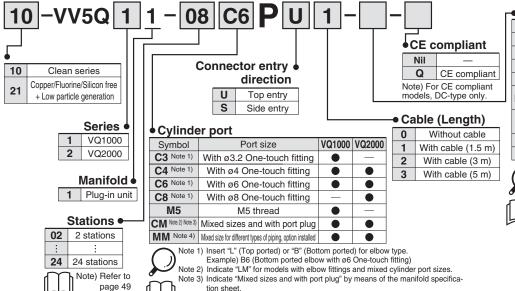

<ul><li>Option</li></ul>	l
Symbol	Option
Nil	None
B Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ Note 3)	DIN rail length specified (□: Stations 02 to 24)
K Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R Note 5)	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS

Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.




Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give


Note 5) Inch-size one-touch fittings are available. Refer to "Semi-standard" on page

instructions in the manifold specification sheet.

50 for details.



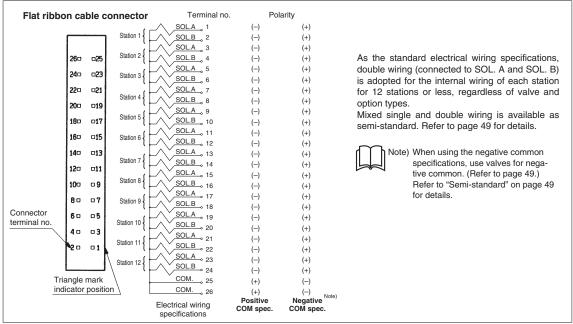

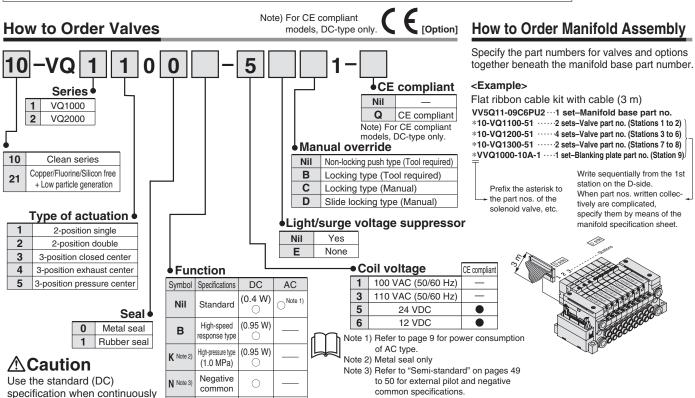

External

0

0

energizing for long periods of


time.


Note 4) When two or more symbols are speci-

fied, indicate them alphabetically. Com-

bination of [B] and [K] is not possible.

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

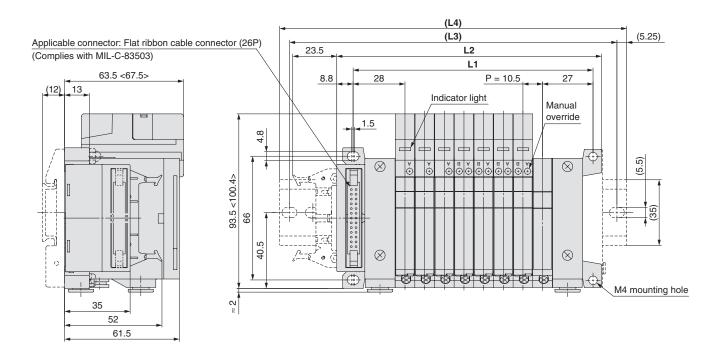

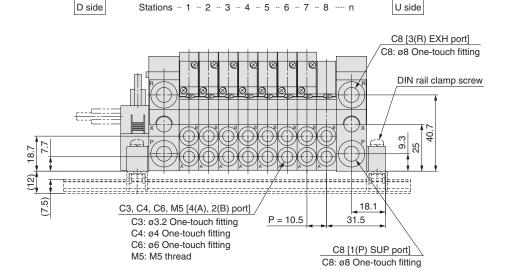

Dimer	sions											Formu	ıla L1 =	= 10.5n	+ 44.5	, L2 =	10.5n +	57.5	n: Sta	tion (N	laximuı	m 24 st	ations)
	n 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2	78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236	246.5	257	267.5	278	288.5	299	309.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)


L2 = 10.5n + 41.3 + (Number of ejector units x 26.7)


L4 is L2 plus about 30.



## 10-VV5Q21

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

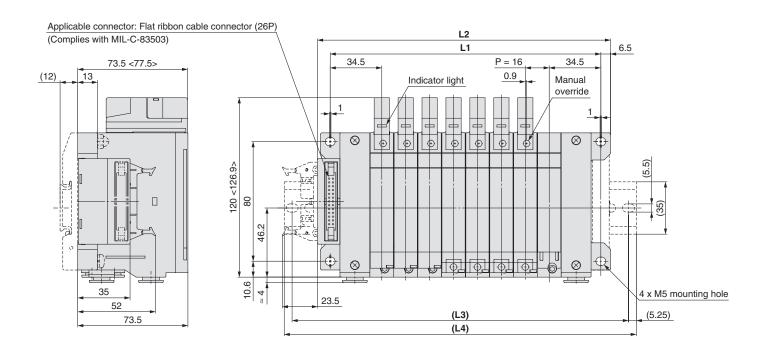

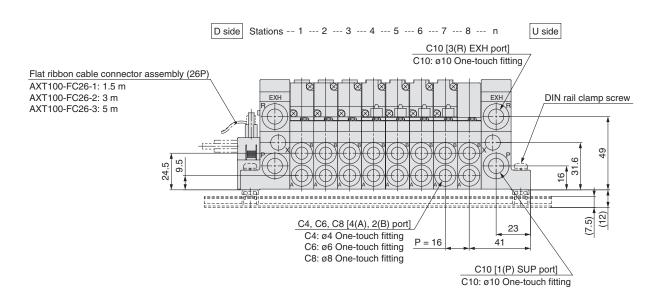

Dimens	Dimensions														= 16n -	+ 53, L2	2 = 16n	+ 68	n: Sta	tion (M	aximur	n 24 st	ations)
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340	356	372	388	404	420	436	452
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350	362.5	387.5	400	412.5	425	450	462.5	475
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5



## Series 21-VQ1000/2000 kit (Flat ribbon cable)

- 10- VV5Q21 10: VV5Q11
- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable connectors (20P) conforming to MIL standard permits the use of connector put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

## **Manifold Specifications**


Cable Assembly •

	Р	iping specifi	cations	
Series	Piping	P	ort size	Applicable stations
	direction	1(P), 3(R)	4(A), 2(B)	Stations
<sup>10</sup> -VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations
<sup>10-</sup> <sub>21-</sub> VQ2000	Side	C10	C4, C6, C8	Max. 16 stations

## Flat Ribbon Cable (20 Pins)

## AXT100-FC20-to

Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold."/

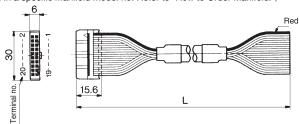

#### Flat Ribbon Cable Connector Assembly


Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	0.11.00
3 m	AXT100-FC20-2	Cable 20 cores x 28AWG
5 m	AXT100-FC20-3	X 20AVVQ

- \* For other commercial connectors, use a 20 pins with strain relief conforming to MIL-C-83503.
- \* Cannot be used for transfer wiring.

#### Connector manufacturers' example

- Hirose Electric Co., Ltd.
- · Japan Aviation Electronics Industry, Ltd. • J.S.T. Mfg. Co., Ltd.
- Sumitomo 3M Limited • Fujitsu Limited
- · Oki Electric Cable Co., Ltd.
- Note) Lengths other than the above are also available. Please contact SMC for details.

# 10: VV5Q11

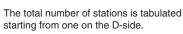

Symbol Nil

ח

D<sub>0</sub>


K Note 4)

N

## (Option)

10: VV5Q21

## How to Order Manifold

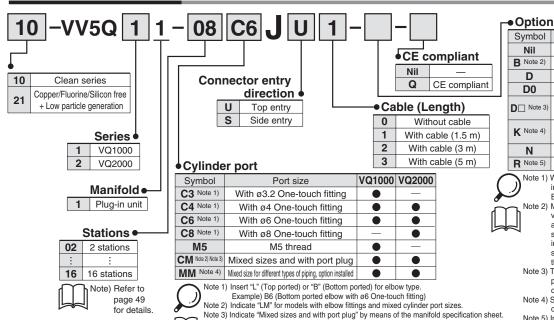

R Note 5) External pilot Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations. specify the mounting position by means of the manifold specification sheet.

None

With back pressure check valve

DIN rail mounting

With DIN rail bracket (Without DIN rail)

DIN rail length specified

(□: Stations 02 to 16)

Special wiring specifications

(Except double wiring)

With name plate

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.


Note 4) Specify the wiring specifications by means of the manifold specification sheet.


Note 5) Indicate "R" for the valve with external pilot.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 50 for details.





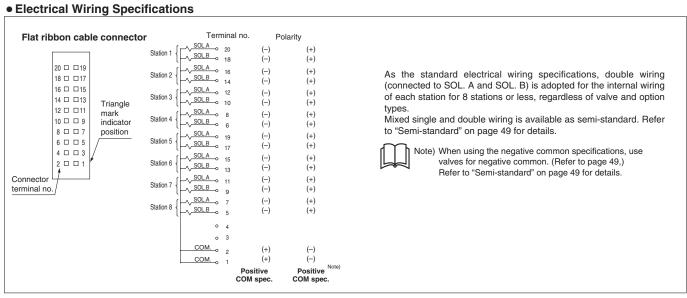


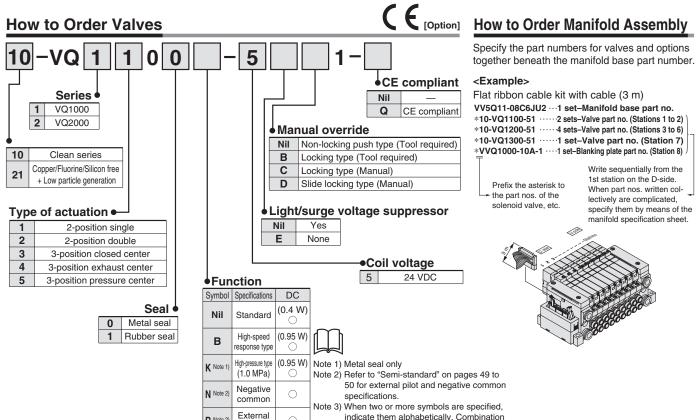

of [B] and [K] is not possible.

pilot

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-JS].

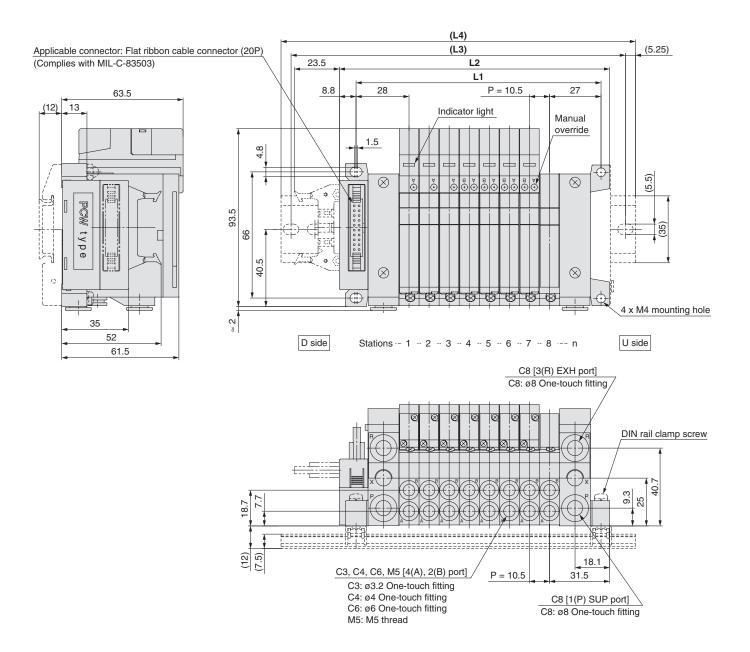


Dimens	sions							Formula	a L1 = 10.5	n + 44.5, L	.2 = 10.5n	+ 57.5 r	: Station (N	/laximum 1	6 stations)
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5


With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)L2 = 10.5n + 41.3 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.



The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-JS].

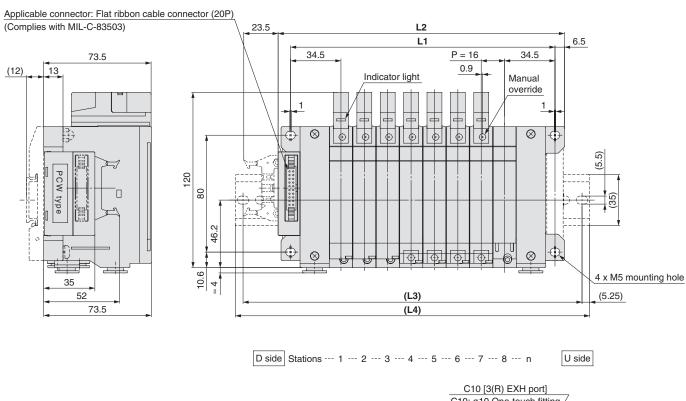

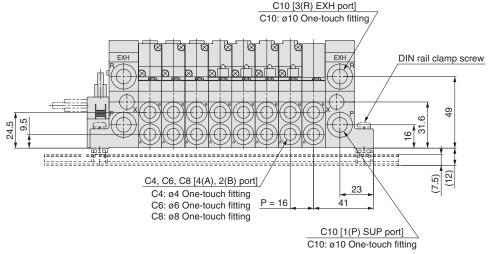

Dimens	sions			3, L2 = 16	n + 68 n	: Station (N	/laximum 1	6 stations)							
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5



# Series 21-VQ1000/2000 kit (Flat ribbon cable with terminal block)

- 10: VV5Q11 10: VV5Q21
- Terminal block for power supply equipped with a 20 pins flat ribbon cable connection for rationalized connection of valves.
- Solenoid valves and power supply can be connected by the same cable to a specific output unit that requires power supply from the output section to the internal circuit.
- Maximum stations are 16.

## **Manifold Specifications**


	Р	Applicable stations			
Series	Piping Port size				
	direction	1(P), 3(R)	4(A), 2(B)		
<sup>10-</sup> <sub>21-</sub> VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations	
<sup>10-</sup> <sub>21-</sub> VQ2000	Side	C10	C4, C6, C8	Max. 16 stations	

## Flat Ribbon Cable (20 Pins)

### Cable Assembly •

### AXT100-FC20-to

Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold.",

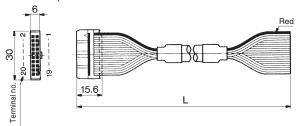

#### Flat Ribbon Cable Connector Assembly

Cable length ( <b>L</b> )	Assembly part no.	Note
1.5 m	AXT100-FC20-1	0-61-00
3 m	AXT100-FC20-2	Cable 20 cores x 28AWG
5 m	AXT100-FC20-3	X ZOAVVO

- \* For other commercial connectors, use a 20 pins type with strain relief conforming to MIL-C-83503.
- \* Cannot be used for transfer wiring.

#### Connector manufacturers' example

- Hirose Electric Co., Ltd. Sumitomo 3M Limited
- Japan Aviation Electronics
- Industry, Ltd.

**C4** Note 1)

**C6** Note 1)


C8 Note 1)


**M5** 

- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable


Fujitsu Limited

Note) Lengths other than the above are also available. Please contact SMC for details.

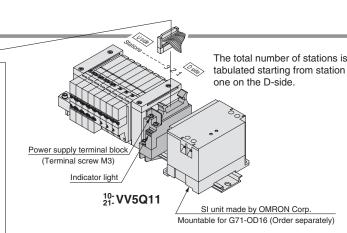

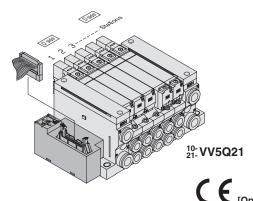

## **How to Order Manifold**

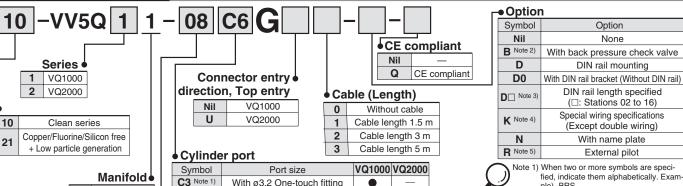

Manifold • Plug-in unit

Stations • 02 2 stations 16 Note) 16 stations Note) Refer to page 49

for details

CM Note 2) Note 3) Mixed sizes and with port plug MM Note 4) Mixed size for different types of piping, option installed Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

With ø3.2 One-touch fitting

With ø4 One-touch fitting

With ø6 One-touch fitting

With ø8 One-touch fitting

M5 thread

Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet. Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold

specification sheet Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 50 for details.



•


Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.


Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.


#### Connector Assembly

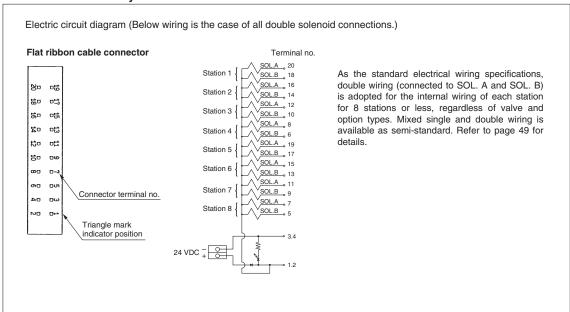

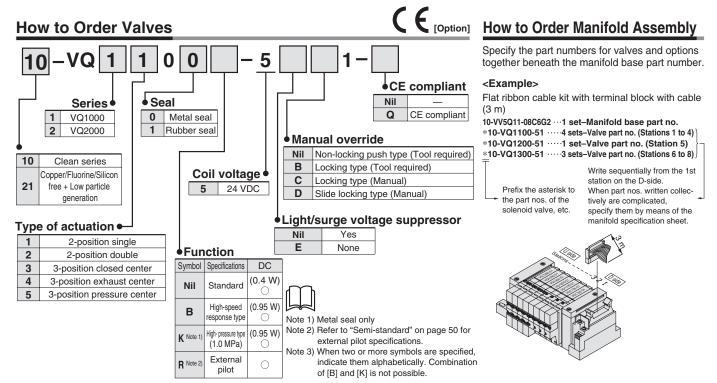

## 10-VV5Q11

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

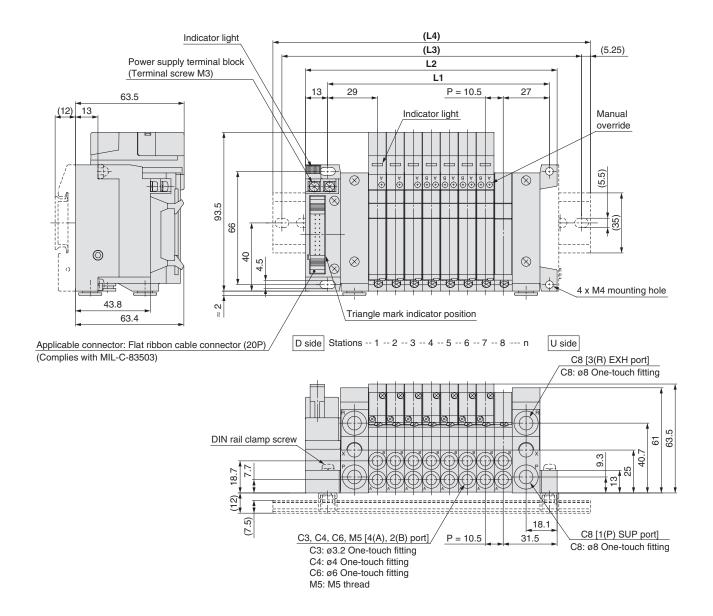

Dimensions						Formula L1 = 10.5n + 45.5, L2 = 10.5n + 63 n: Station (Maximum 16 stations)									
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5
L2	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273


With ejector unit: Formula  $L1 = 10.5n + 29.7 + (Number of ejector units \times 26.7)$   $L2 = 10.5n + 46.8 + (Number of ejector units \times 26.7)$ 


L4 is L2 plus about 30.



## 10-VV5Q21

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

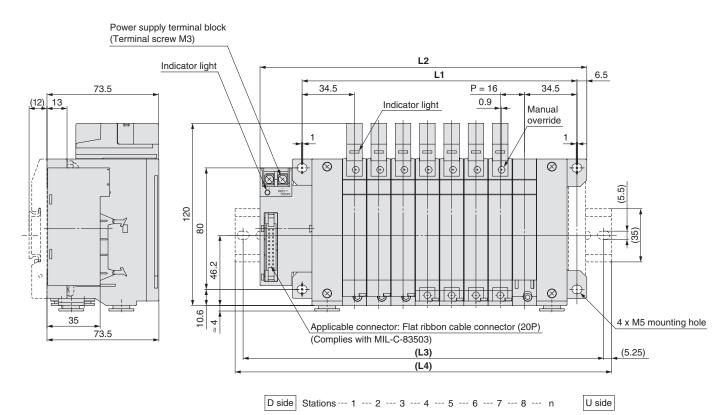

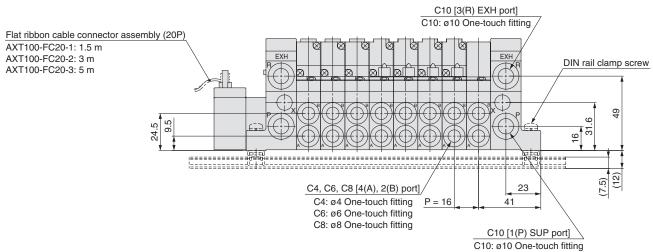

Dimensions									Formula L1 = 16n + 53, L2 = 16n + 87				n: Station (Maximum 16 stations)		
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	119	135	151	167	183	199	215	231	247	263	279	295	311	327	343
(L3)	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	362.5
(L4)	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373

## Series 21-VQ1000/2000 kit (Terminal block box)

IP65 compliant

10: VV5Q11

Electrical entry


- This kit has a small terminal block inside a junction box. The electrical entry port {10. VQ1000: G 1/2, 10. VQ2000: G 3/4} permits connection of conduit fittings.


  ■ Maximum stations: 24 (½1. VQ1000), 20 (½1. VQ2000)
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

## **Manifold Specifications**

	F	Piping specifi	Amaliaalda	
Series	Piping	P	ort size	Applicable stations
	direction	1(P), 3(R)	4(A), 2(B)	Stations
10-VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations
10-VQ2000	Side	C10	C4, C6, C8	Max. 20 stations

## Terminal Block Connection (10-VQ1000) ●

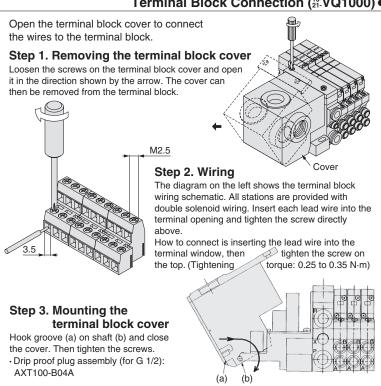

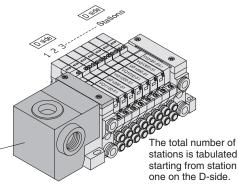


10- VV5Q21

2 x G 3/4

Electrical entry


## Electrical Wiring Specifications: <sup>10</sup>/<sub>21</sub>VQ1000

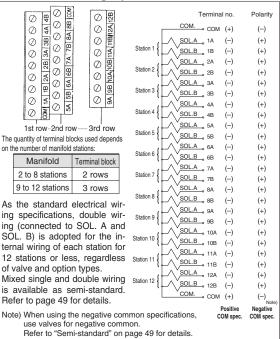

Note) For CE compliant models, DC-type only.



## How to Order Manifold

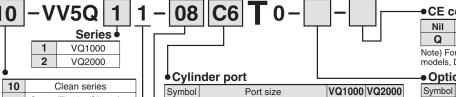

C4 Note 1)

C6 Note 1)

C8 Note 1)

With ø3.2 One-touch fitting

With ø4 One-touch fitting

With ø6 One-touch fitting

With ø8 One-touch fitting

M5 thread

CM Note 2) Note 3) Mixed sizes and with port plug

Copper/Fluorine/Silicon free + Low particle generation

## **Manifold** Plug-in unit

Ctations

Stat	ions	•
02	2 stations	1
:	:	
24 Note 1)	24 stations	1

Note 1) VQ2000: Max. 20 stations Refer to page 49 for details.



"	,	wiked size for different types of piping, option installed		
)		Insert "L" (Top ported) or "B" (Bottom Example) B6 (Bottom ported elbow w     Indicate "LM" for models with elbow fit	rith ø6 One-t	ouch fitting)

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-

standard" on page 50 for details

## CE compliant

Nil	_
Q	CE compliant
	r CE compliant

Option

Symbol	Option	VQ1000	VQ2000
Nil	None	•	•
<b>B</b> Note 2)	With back pressure check valve	•	•
D	DIN rail mounting	•	•
D0	With DIN rail bracket (Without DIN rail)	•	•
D□ Note 4)	DIN rail length specified (□: Stations 02 to 24)	•	•
K Note 4)	Special wiring spec. (Except double wiring)	•	•
N	With name plate	•	•
R Note 5)	External pilot	•	
W	Enclosure: Dust-tight, Water-jet-proof (IP65)		

Note 1) When two or more symbols are specified, indicate them alphabetically. Exam-

ple) -BRS Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet. Note 5) Indicate "R" for the valve with external pilot.



Open the terminal block cover to connect the wires to the terminal block.

## Step 1. Removing the terminal block cover


Loosen mounting screws (4 pcs.) on the terminal block cover and remove the cover. 


Cover

#### Step 2. Wiring

Loosen screws on the terminal block, connect wiring and complete it by tightening screws.(Tightening torque: 0.5 to 0.7 N·m)

The diagram on the right shows the terminal block wiring. All stations are provided with double wiring regardless of the valves which are mounted.

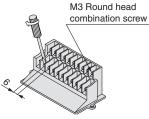

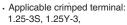

- 1.25Y-3N, 1.25Y-3.5
- (for G 3/4): AXT100-B06A

Series

VQ1000

VQ2000

Clean series

Copper/Fluorine/Silicon free

+ Low particle generation

2-position single

2-position double

3-position closed center

3-position exhaust center

3-position pressure center

0

Type of actuation ●

2

10

21


2

3

4

5

• Special Wiring Specifications: 10- VQ2000

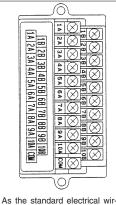

ing specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 10 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard.

Note) When using the negative common specifications, use valves for negative common.

Refer to page 49 for details.

Refer to "Semi-standard" on page 49 for details.

SOL.A\_ 2A (-) (+)Station 2 SOL.B 2B (+) SOL.A 3A (-)(+)Station 3 SOL.B 3B (-) (+)SOL.A 4A (+)SOL.B 4B (+) SOL.A 5A (-)(+)Station 5 SOL.B 5B (+) SOL.A 6A (+)SOL.B 6B (-) (+) SOL.A 7A (+)Station 7 SOL.B 7B (+)SOL.A 8A (+) Station 8 SOL.B 8B (-)(+)SOL.A 9A (-)(+) Station 9 SOL.B 9B (+)SOL.A 10A (-)(+) Station 10 SOL.B 10B (+)СОМ. Note)

Terminal no.

SOL.A 1A

SOL.B 1B

Station 1

Polarity

(-)

(+)

(+)

COM spec.

COM spec.

· Name plate: VVQ5000-N-T · Drip proof plug assembly

## Step 3. Mounting the terminal block cover

Securely tighten the screws after confirming that the gasket is installed correctly. (Tightening torque: 0.7 to 1.2 N·m)

## How to Order Valves

Note) For CE compliant models, DC-type only.



CE compliant

Note) For CE compliant models, DC-type only.

Dust-protected

(IP65)

CE compliant

Q

## **How to Order Manifold Assembly**

Specify the part numbers for valves and options together beneath the manifold base part number.

#### <Example>

Terminal block box kit

VV5Q11-08C6T0 ···1 set-Manifold base part no. \*10-VQ1100-51 ···· 2 sets-Valve part no. (Stations 1 to 2)

\*10-VQ1200-51 ····· 4 sets-Valve part no. (Stations 3 to 6) \*10-VQ1300-51 ·····1 set-Valve part no. (Station 7)

\*VVQ1000-10A-1 ··1 set-Blanking plate part no. (Station 8)

Dust-tight, Water-jet-proof Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

Nil

W Note)

#### Manual override

**Enclosure** 

Nil	Non-locking push type (Tool required)
В	Locking type (Tool required)
С	Locking type (Manual)
D	Slide locking type (Manual)

Note) VQ2000 only

## Light/surge voltage suppressor

Nil	Yes
Е	None

Function

Seal

Metal seal

Rubber seal

Full	CHOH			
Symbol	Specifications	DC	AC	
Nil	Standard	(0.4 W)	O <sup>Note 1)</sup>	
В	High-speed response type	(0.95 W)	_	   1
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W)		
N Note 3)	Negative common	0		
R Note 3)	External pilot	0	0	

Coil voltage CE compliant 1 100 VAC (50/60 Hz) 3 110 VAC (50/60 Hz) 5 24 VDC 6 12 VDC

Note 1) Refer to page 9 for power consumption of AC type.

Note 2) Metal seal only

Note 3) Refer to "Semi-standard" on pages 49 to 50 for external pilot and negative common specifications.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

## **⚠** Caution

Use the standard (DC) specification when continuously energizing for long periods of



ш

₹

Ω. ₹

₹

₹ **5** 

ഗ

호 ⋝

Sub-plate Single Unit

Semi-standard

Construction


View of Manifold Exploded

Optional Parts

Safety Instructions

Specific Product Precautions

< >: AC
The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

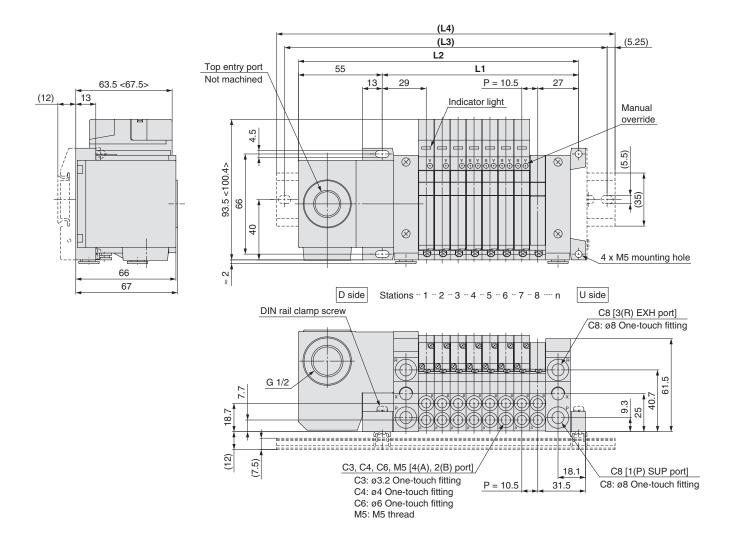

<b>Dimensions</b> Formula L1 = 10.5n + 45.5, L2 = 10.5n + 105 n											n: Station (Maximum 24 stations)												
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5	224	234.5	245	255.5	266	276.5	287	297.5
L2	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	304.5	315	325.5	336	346.5	357
(L3)	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5
(L4)	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398


With ejector unit: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)L2 = 10.5n + 88.8 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.



## 10-VV5Q21

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

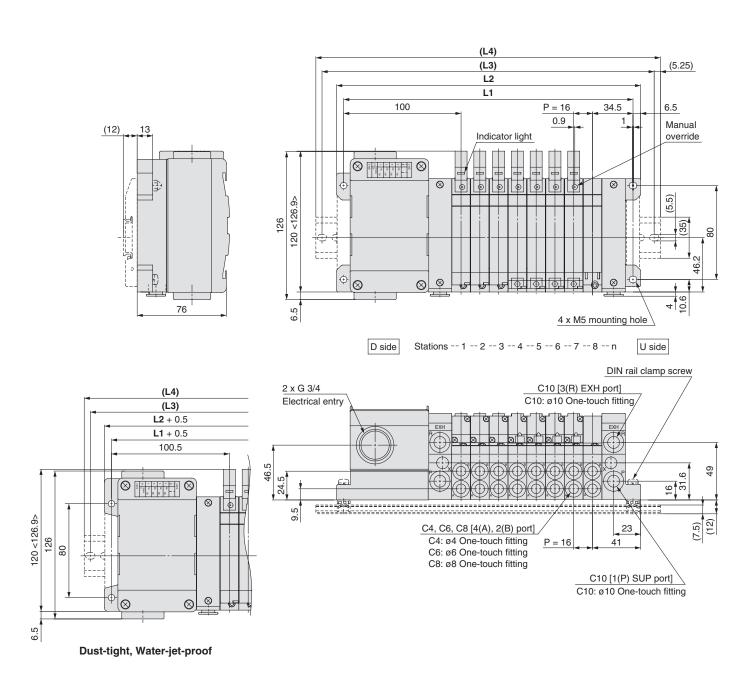

Dimens	<b>Dimensions</b> Formula L1 = 16n + 118.5, L2 = 16n + 131 n: Station (Maximum 20 stations													stations)					
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	150.5	166.5	182.5	198.5	214.5	230.5	246.5	262.5	278.5	294.5	310.5	326.5	342.5	358.5	374.5	390.5	406.5	422.5	438.5
L2	163	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419	435	451
(L3)	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475
(L4)	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5

## Series <sup>10-</sup><sub>21-</sub>VQ1000/2000 kit (Lead wire)

## IP65 compliant

- Direct electrical entry. Models with one or more stations are available.
- (SUP) and (EXH) ports are provided on one side for further space savings.
- Maximum stations are 8.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (21-Series VQ2000)

## Wiring Specifications: Positive COM ●


Three lead wires are attached to each station regardless of the type of valve which is mounted. The red wire is for COM connection. Lead wire color Lead wire color <u>SOL.A</u> (−) Black Black ⊸ COM. (+) Red -- сом. (+) Red <u>SOL.B</u> (−) White White Single solenoid Double solenoid Black: A side solenoid (-) Red: COM (+) Station number Cable 3 cores x 24AWG White: B side solenoid (-) (Not used for single solenoid) Use any of the below cable lead wire assembly to change the lead wire length: Lead wire assembly with connector Lead wire length Part no. VVQ1000-84A-6-\* 0.6 m 1.5 m VVQ1000-84A-15-\* VVQ1000-84A-30-\*

## **Manifold Specifications**

10: VV5Q11

_	F					
Series	Piping	Р	ort size	Applicable stations		
	direction	1(P), 3(R)	4(A), 2(B)			
<sup>10-</sup> <sub>21-</sub> VQ1000	Side	C8	C3, C4, C6, M5	Max. 8 stations		
10- 21- VQ2000	Side	C10	C6, C8	Max. 8 stations		

10: VV5Q21

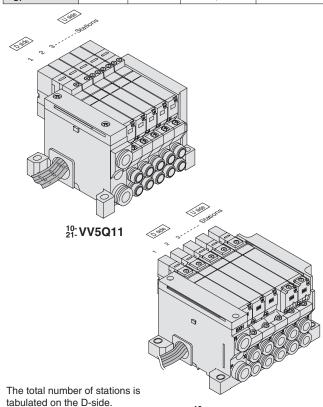

CE compliant

Note) For CE compliant

modéls, DC-type only.

CE compliant

Nil

Q

## **How to Order Manifold**

3 m

For negative common


specifications, refer to

"Semi-standard" on

page 49.

\* Station number 1 to 8

10: VV5Q21 Note) For CE compliant models, DC-type only.

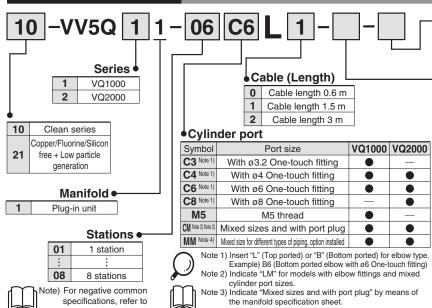

Symbol	Option	VQ1000	VQ2000
Nil	None		
2	200/220 VAC models (F/L kit only)	•	•
B Note 2)	With back pressure check valve	•	•
D	DIN rail mounting	•	•
D0	With DIN rail bracket (Without DIN rail)	•	•
D Note 3)	DIN rail length specified (□: Stations 02 to 08)	•	•
N	With name plate	•	•
R Note 4)	External pilot	•	•
W	Enclosure: Dust-tight, Water-iet-proof (IP65)	_	•

e: Dust-tight, Water-jet-proof (IP65) Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of

back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet. Note 3) The number of stations that may be displayed is longer


than the manifold number of stations

Note 4) Indicate "R" for the valve with external pilot.


Note 4) When selecting the mixed size for different types of piping, dual

ter "MM" and give instructions in the manifold specification sheet. Note 5) Inch-size One-touch fittings are available. Refer to

flow fitting assembly, or double check block (direct mounting), en-

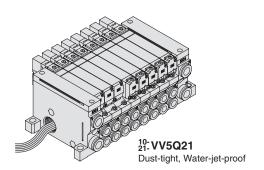

#### Wiring Specifications: Negative COM (Semi-standard)

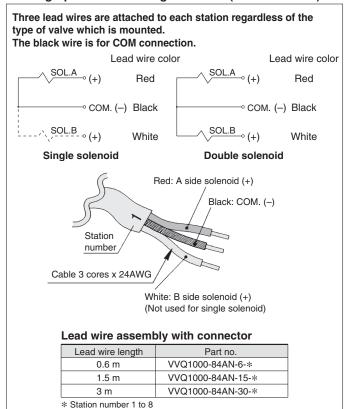



Note) For CE compliant models, DC-type only. ative common. For negative common specifications, refer to "Semistandard" on page 49.

[Option]

## **How to Order Manifold Assembly** Specify the part numbers for valves and options

together beneath the manifold base part number.

#### <Example>

Lead wire kit with cable (3 m)


Note) When using the negative common specifications, use valves for neg-

VV5Q11-06C6L2 ··· 1 set-Manifold base part no. \*10-VQ1100-51 ···· 2 sets-Valve part no. (Stations 1 to 2) \*10-VQ1200-51 ····· 2 sets-Valve part no. (Stations 3 to 4) \*10-VQ1300-51 ·····1 set-Valve part no. (Station 5)

\*VVQ1000-10A-1 ··1 set-Blanking plate part no. (Station 6)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos, written collectively are complicated, specify them by means of the manifold specification sheet.

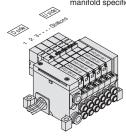

1	0	VQ 1	1	0		]-[	5				1-	
	1 2 Typ	Series • VQ1000 VQ2000  e of actu	ation	0 1 F	Se Metal se Rubber s	eal					Nil — Q CE complian Note) For CE complian On the complex compl	liant iant
	1	2	2-positio	on single						<b>♦</b> Enclo	sure	
	2									Nil	Dust-protected	
	3			losed cent khaust cen						W Note)	Dust-tight, Water-jet-p (IP65)	roof
	5	3-pos		essure cer	nter	<u> </u>				$\bigcap^{N}$	ote) VQ2000 only	
	10 21 C	opper/Fluorine/S			le generati	on			● Ma	anual o	verride	
					Func	tion 🌢	_		Nil	Non-loc	king push type (Tool requ	ired)
			Symbol	Specifications	DC	AC			В	Lockin	g type (Tool required)	
			Nil	Standard	(0.4 W)	O <sup>Note 1)</sup>			D		g type (Manual) ocking type (Manual)	
			В	High-speed response type	(0.95 W)			•Li	aht/	surge	voltage suppres	sor
			K Note 2)	High-pressure type (1.0 MPa)	(0.95 W)			N	il	Yes None	gs ouppies	
					1		1 I	_		INOTIE		

Note 1) Refer to page 9 for power consumption of AC type. Note 2) Metal seal only

Negative common External

R Note 3)

Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 49 to 50.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

◆Coil voltage CE compliant										
1	100 VAC (50/60 Hz)	_								
2	200 VAC (50/60 Hz)									
3	110 VAC (50/60 Hz)	_								
4	220 VAC (50/60 Hz)	_								
5	24 VDC	•								
6	12 VDC	•								


## **⚠Caution**


Use the standard (DC) specification when continuously energizing for long periods of time.




## 10-VV5Q11

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

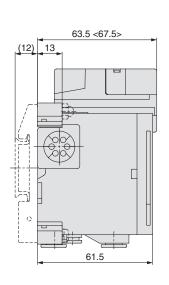

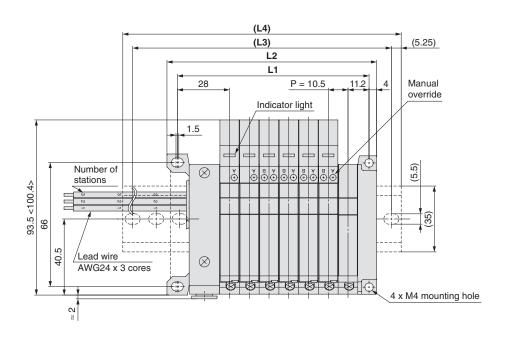


D side Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- n U side

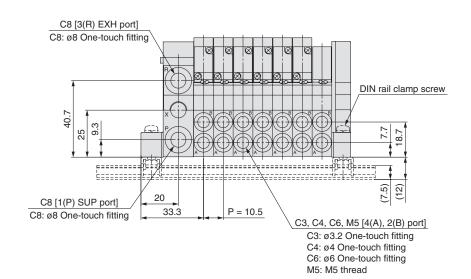

#### Formula L1 = 10.5n + 28.5, L2 = 10.5n + 38**Dimensions** n: Station (Maximum 8 stations) 8 2 3 4 5 6 L1 39 49.5 60 70.5 91.5 102 112.5 L2 48.5 59 69.5 80 90.5 101 111.5 122 (L3)75 87.5 87.5 100 112.5 125 137.5 150 (L4) 85.5 98 98 110.5 148 160.5 135.5


With ejector unit: Formula L1 = 10.5n + 28.5 + (Number of ejector units x 26.7) L2 = 10.5n + 38 + (Number of ejector units x 26.7)L4 is L2 plus about 30.

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

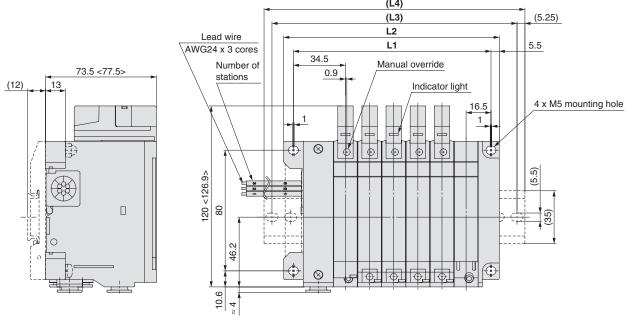

**Dust-tight, Water-jet-proof** 


D side Stations --- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- n U side

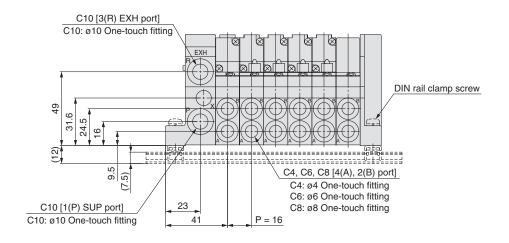


Formula L1 = 16n + 35, L2 = 16n + 47**Dimensions** n: Station (Maximum 8 stations) L1 L2 (L3)87.5 137.5 162.5 184.5 (L4) 110.5 135.5 160.5 210.5



## kit (Serial transmission) Base mounted plug-in manifold: For EX510 Gateway-type serial transmission system

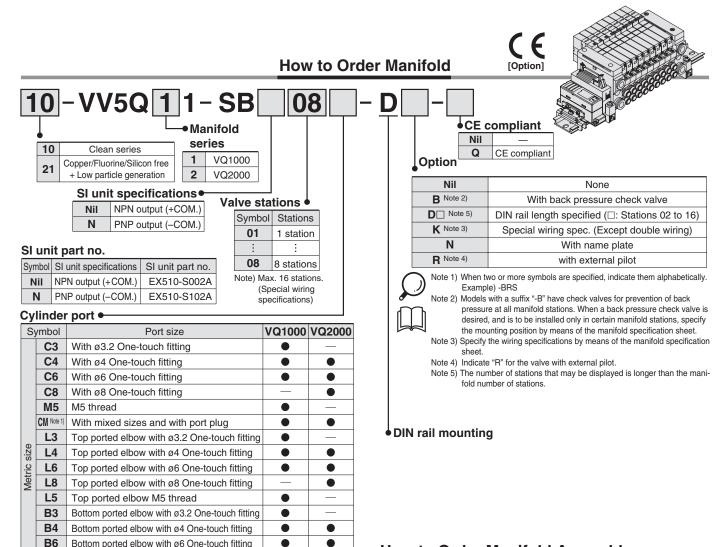

## **How to Order Manifold Assembly**

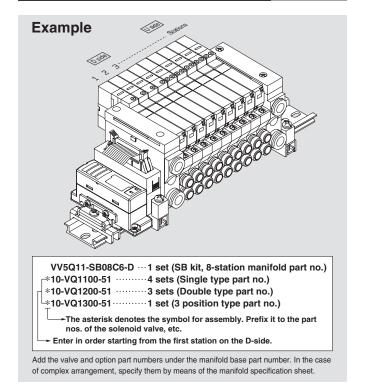

Note 1) Indicate "Mixed sizes and with port plug" in the manifold specification sheet.

Note 2) When selecting the mixed size for different types of piping, dual flow fitting
assembly, or double check block (direct mounting), enter "MM" and give
instructions in the manifold specification sheet.

Bottom ported elbow with Ø8 One-touch fitting

•

•

•

Bottom ported elbow M5 thread

Elbow port, mixed sizes

ø1/8" with One-touch fitting

ø5/32" with One-touch fitting

ø1/4" with One-touch fitting

ø5/16" with One-touch fitting

With mixed sizes and with port plug

**LN1** Top ported elbow with ø1/8" One-touch fitting

**LN3** Top ported elbow with Ø5/32" One-touch fitting

**LN9** Top ported elbow with Ø5/16" One-touch fitting

BN3 Bottom ported elbow with ø5/32" One-touch fitting

BN7 Bottom ported elbow with Ø1/4" One-touch fitting

BN9 Bottom ported elbow with ø5/16" One-touch fitting

MM Note 2) Mixed size for different types of piping, option installed

Bottom ported elbow UNF10-32 thread

L5T Top ported elbow UNF10-32 thread

BN1 Bottom ported elbow with ø1/8" One-touch fitting

Elbow port, mixed sizes

Top ported elbow with ø1/4" One-touch fitting

M5T UNF10-32 thread

Refer to Best Pneumatics No. ① for details on EX510 gateway-type serial transmission system.

**B8** 

**B**5

LM Note 1)

N1

**N3** 


**N7** 

N9

NM Note 1)

LN7

## **How to Order Valves**

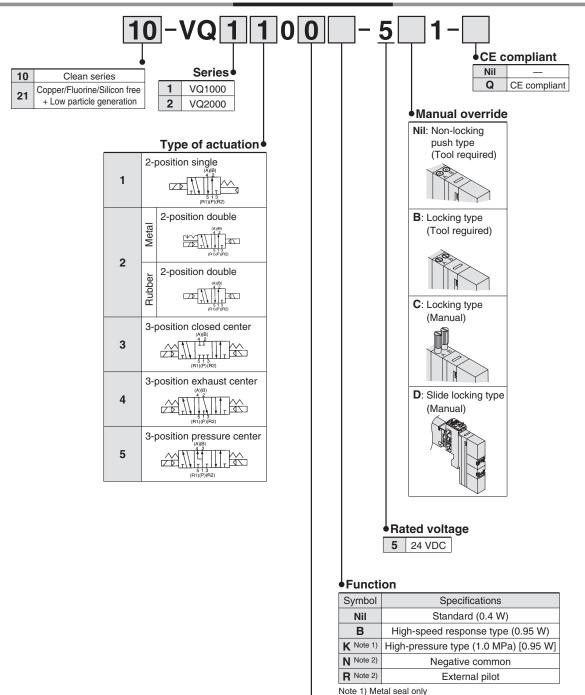


Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 49 to 50.

Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.


#### Seal

0	Metal seal
1	Rubber seal



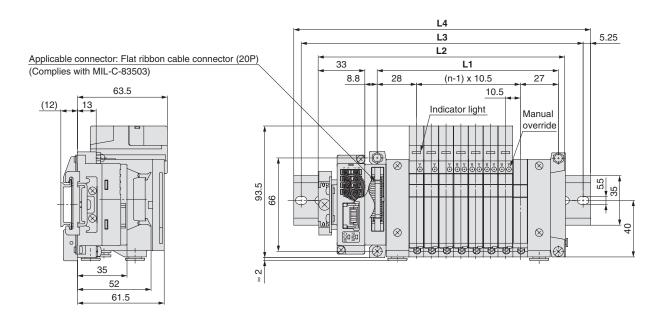


D side Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- 8 --- n U side

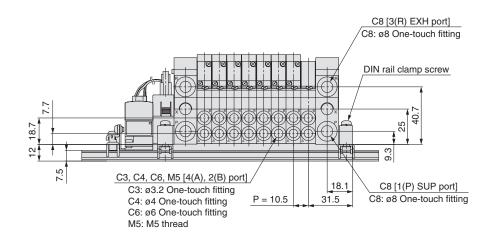


Dimen	Dimensions         Formula L1 = 10.5n + 44.5, L2 = 10.5n + 91         n: Station (Maximum 16 state)													stations)		
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	55	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	101.5	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259
L3	125	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5
L4	135.5	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298

# <sup>10</sup>-**VV5Q21**

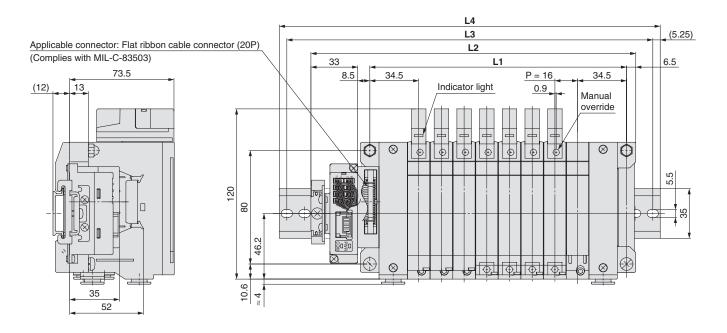

D side Stations -- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- 7 --- 8 --- n U side

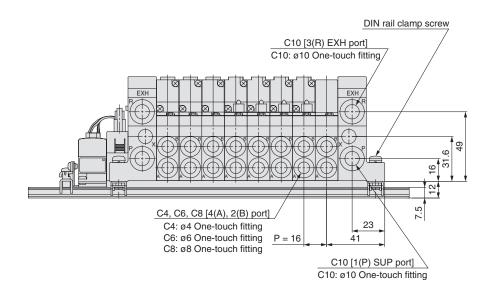

Dimer	Dimensions								Formula $L1 = 16n + 53$ , $L2 = 16n + 101$ n: Station (Maximum 16 stations)							
L	າ 1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	69	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	387.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	398

# Series <sup>10-</sup><sub>21-</sub>VQ1000/2000

kit (Serial transmission): For EX120/123/124 Integrated-type (Output) serial transmission system

### **IP65** compliant

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

### **Manifold Specifications**

		Р				
	Series	Piping	P	ort size	Applicable stations	
		direction	1(P), 3(R)	4(A), 2(B)		
	<sup>10-</sup> <sub>21-</sub> VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations	
	<sup>10-</sup> <sub>21-</sub> VQ2000	Side	C10	C4, C6, C8	Max. 16 stations	

Note) Refer to "SI Unit Part No." when ordering the CE-compliant SI unit.

Option

Symbol

Nil B Note 2)

D

D

☐ Note 3

K Note 4)

N

R Note 5)

CE compliant

CE compliant

Note) Refer to "SI Unit Part No." when

ordering the CE-compliant SI unit.

Nil

Option

With back pressure check valve

DIN rail mounting

DIN rail mounting

(□: Stations 02 to 16)

Special wiring specifications

(Except double wiring)


With name plate

With external pilot



VQ1000 VQ2000

### **How to Order Manifold**

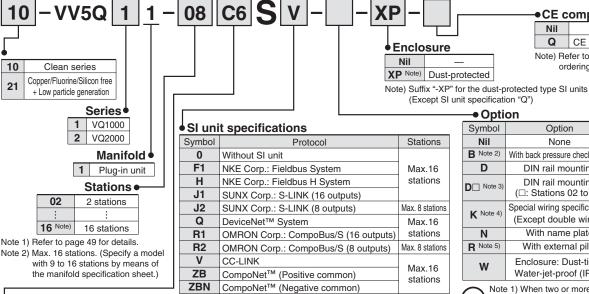

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 Note 1)	With ø3.2 One-touch fitting	•	_
C4 Note 1)	With ø4 One-touch fitting	•	•
<b>C6</b> Note 1)	With ø6 One-touch fitting	•	•
<b>C8</b> Note 1)	With ø8 One-touch fitting	_	•
M5	M5 thread	•	_
CM Note 2) Note 3)	Mixed sizes and with port plug	•	•
MM Note 4)	Mixed size for different types of piping, option installed	•	•

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type. Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate as "LM" for models with elbow fittings and mixed cylinder port sizes. Note 3) Indicate "Mixed sizes and with port

plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet. Note 5) Inch-size One-touch fittings are avail-

able. Refer to "Semi-standard" on page details

Enclosure: Dust-tight, Water-jet-proof (IP65) Note 1) When two or more symbols are specified, indicate them alphabetically.

Example) -BRS. Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

# SI Unit Part No.


(With	out option W [Dust-prote	ected (-XP) is includ	<b>ed.])</b> 50 for
Symbol	Protocol	SI unit part no.	CE compliant
F1	NKE Corp , Fieldbug Custom	Standard: EX120-SUW1	
г	NKE Corp.: Fieldbus System	Dust-protected: EX120-SUW1-XP	
н	NKE Corp.: Fieldbus H System	Standard: EX120-SUH1	
- "	NKE Corp.: Fleidbus H System	Dust-protected: EX120-SUH1-XP	
J1	SUNX Corp.: S-LINK	Standard: EX120-SSL1	
01	(16 outputs)	Dust-protected: EX120-SSL1-XP	
J2	SUNX Corp.: S-LINK	Standard: EX120-SSL2	
UZ	(8 outputs)	Dust-protected: EX120-SSL2-XP	
Q	DeviceNet™	Standard: EX120-SDN1	
G	Devicemet	Dust-protected: No part no.	
R1	OMRON Corp.: CompoBus/S	Standard: EX120-SCS1	
111	(16 outputs)	Dust-protected: EX120-SCS1-XP	
R2	OMRON Corp.: CompoBus/S	Standard: EX120-SCS2	
112	(8 outputs)	Dust-protected: EX120-SCS2-XP	
V	CC-LINK	Standard: EX120-SMJ1	
•	CC-EIIVK	Dust-protected: EX120-SMJ1-XP	
ZB	CompoNet™ (Positive common)	Standard: EX120-SCM1	
20	Componer (Fositive common)	Dust-protected: No part no.	
ZBN	CompoNet™ (Negative common)	Standard: EX120-SCM3	
ZDN	Componer (ivegative common)	Dust-protected: No part no.	

### SI Unit Part No. (With option W)

	in the second control operation in y		
Symbol	Protocol	SI unit part no.	CE compliant
F1	NKE Corp.: Fieldbus System	EX123D-SUW1	_
Н	NKE Corp.: Fieldbus H System	EX123D-SUH1	_
J1	SUNX Corp.: S-LINK (16 outputs)	EX123D-SSL1	_
J2	SUNX Corp.: S-LINK (8 outputs)	EX123D-SSL2	_
Q	DeviceNet™ System	EX124D-SDN1	•
R1	OMRON Corp.: CompoBus/S (16 outputs)	EX124D-SCS1	•
R2	OMRON Corp.: CompoBus/S (8 outputs)	EX124D-SCS2	•
٧	CC-LINK	EX124D-SMJ1	•

Refer to Best Pneumatics No. ① for details on the EX120/123/124 integrated-type (Output) serial transmission system. \* Refer to SMC Information (08-E543) for details on CompoNet™

# Base Mounted Plug-in Unit Series 21-VQ1000/2000

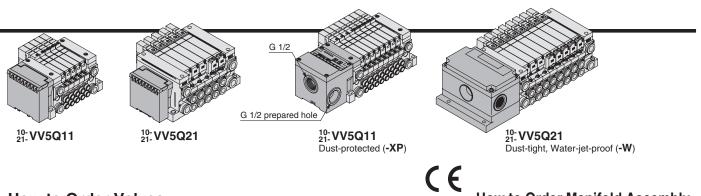

Locking type (Manual)


24 VDC;

With indicator light/

surge voltage suppressor

Slide locking type (Manual)



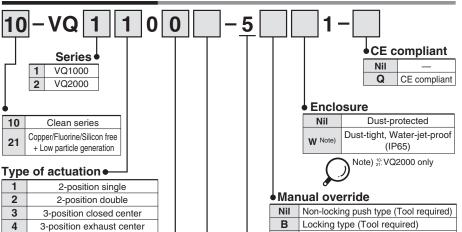

3-position pressure center

5

Seal 

 Metal seal
 Rubber seal

# How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

### <Example>

VV5Q11-08C6SV ···1 set-Manifold base part no.


\*10-VQ1100-51 ····2 sets-Valve part no. (Stations 1 to 2)

\*10-VQ1200-51 ····4 sets-Valve part no. (Stations 3 to 6)

\*10-VQ1300-51 ····1 set-Valve part no. (Station 7)

\*VVQ1000-10A-1 ··1 set-Blanking plate part no. (Station 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D-side.
When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

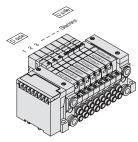

### Function

Symbol	Specifications	DC						
Nil	Standard	(0.4 W)						
В	High-speed response type	(0.95 W)						
K Note 1)	High- pressure type (1.0 MPa)	(0.95 W)						
N Note 2)	Negative common	0						
R Note 2	External pilot	0						

Coil voltage

5



Note 1) Metal seal only


Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 49 to 50.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.





# Series 21-VQ1000/2000 kit (Serial transmission): For EX120 Integrated-type (Output) serial transmission system


10-VV5Q11

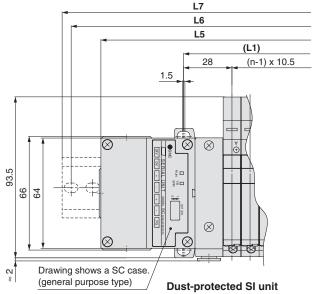

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

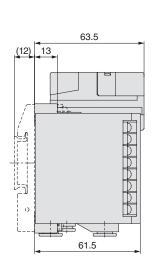

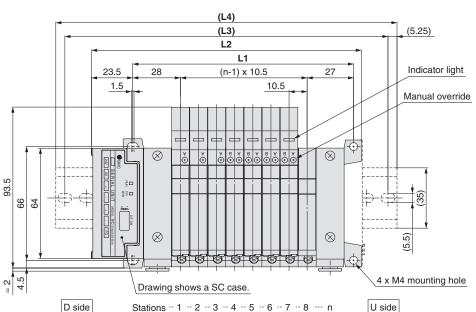

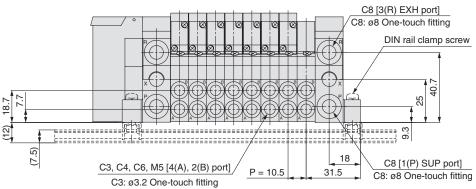

C4: ø4 One-touch fitting C6: ø6 One-touch fitting


M5: M5 thread

Dust-protected SI unit: L5 = 10.5n + 97, L6 = L3 + 25, L7 = L4 + 25Formula L1 = 10.5n + 44.5, L2 = 10.5n + 72.5 n: Station (Maximum 16 stations)

											- ,			(		/
	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
ı	L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
ı	L2	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5
(I	L3)	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
(I	L4)	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273

**Dimensions** 

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

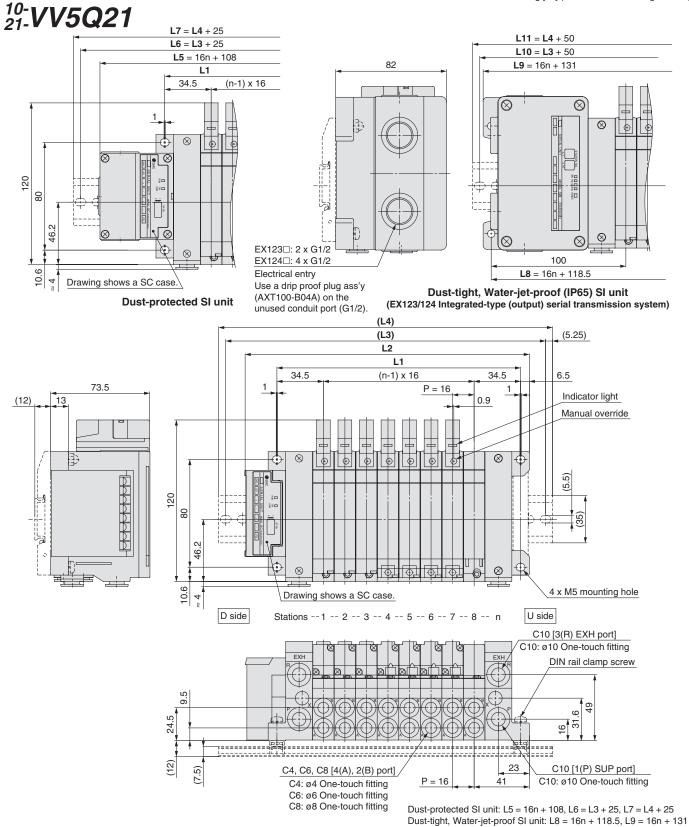

L10 = L3 + 50, L11 = L4 + 5083 n: Station (Maximum 16 stat

Dimens	Dimensions									Formula L1 = 16n + 53, L2 = 16n + 83 n: Station (Maximum 16 stations					
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	115	131	147	163	179	195	211	227	243	259	275	291	307	323	339
(L3)	137.5	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
(L4)	148	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373

kit (Serial transmission): For EX240 Integrated-type (I/O) serial transmission system IP65 compliant

### VQ2000 only

 The serial transmission system reduces wiring work, while minimizing wiring and saving space.

### **How to Order Manifold**

-VV5Q21 - 08 C6 S D QW 1 VQ2000 Plug-in series Stations 1 station 10 Clean series Copper/Fluorine/Silicor 16 stations free + Low particle generation

Cylinder port •

Symbol	Port size				
C4 Note 1)	With ø4 one-touch fitting				
<b>C6</b> Note 1)	With ø6 one-touch fitting				
<b>C8</b> Note 1)	With ø8 one-touch fitting				
CM Note 2) Note 3)	Mixed sizes and with port plug				
MM Note 4)	Mixed size for different types of piping, option installed				

SI unit mounting D: D side mounting

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for Example) B6 (Bottom ported elbow with ø6 one-touch

fitting) Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.

Note 5) Inch-size one-touch fittings are available. Refer to "Semi-standard" on page 50 for details.

Refer to Best Pneumatics No. 1) for details on the EX240 integrated-type (I/O) serial transmission system.

**♦**CE compliant Nil CE compliant

**Enclosure** IP65 (Dust-tight, Water-jet-proof)

Symbol Option									
Nil None									
B With back pressure check valve									
K Special wiring spec. (Except double wiring									
N With name plate									
R External pilot									

Note) When two or more symbols are specified, indicate them alphabetically. Example: -BNR

negative common. Select valves for

Note 4) When two or more symbols are spec-

ified, indicate them alphabetically.

Combination of [B] and [K] is not pos-

negative common.

Input block type

PNP sensor input (+COM) or without SI unit/input block NPN sensor input (-COM)

Number of input blocks


Nil	Without SI unit						
0	Without input block						
1 With 1 pc. input block							
2	2 With 2 pcs. input blocks						
3	With 3 pcs. input blocks						
4	With 4 pcs. input blocks						

### Model

0W Without SI unit							
	QW	DeviceNet™	+COM.				
	NWN	PROFIBUS-DP	-COM.				

Note) Only +COM is available for DeviceNet™. Order a mounting valve with +COM. Since PROFIBUS is -COM only, order –COM for valves to be mounted.

### **How to Order Manifold**

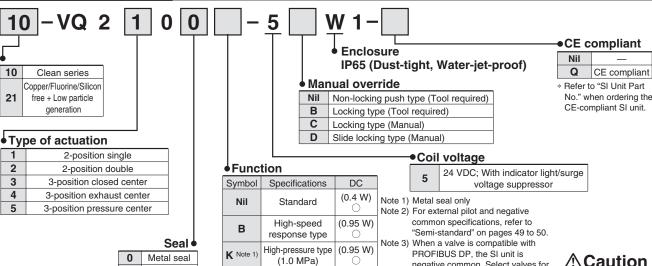

Negative

common

External

pilot

Note 2)

Note) For external pilot and negative common specifications, refer to 'Semi-standard" on pages 49 to 50


Rubber seal



 $\bigcirc$ 


Use the standard (DC) specification when continuously energizing for long periods of time.

10-VV5Q21 (Serial transmission kit: EX240)

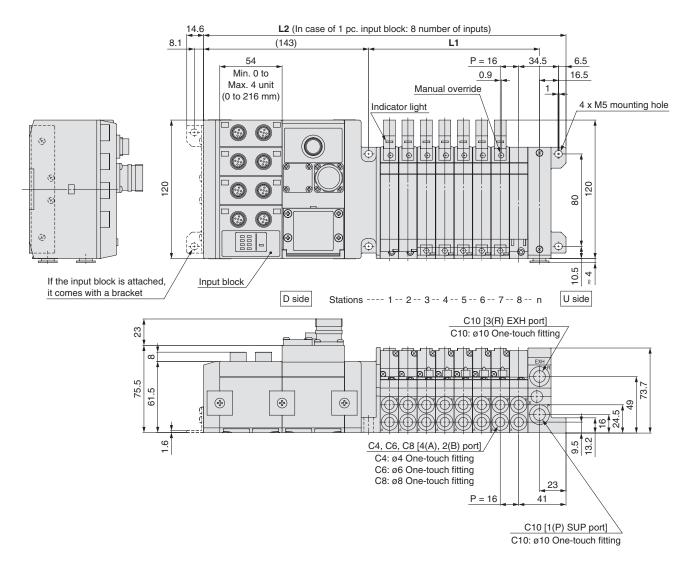

Formula L1 = 16n + 36.5 L2 = 16n + 186 (In case of 1 pc. DI unit, 54 mm will be added for increasing every 1 pc.)

Dimens	Dimensions  n: Station (Maximum 24 stations)																						
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	68.5	84.5	100.5	116.5	132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5	308.5	324.5	340.5	356.5	372.5	388.5	404.5	420.5
L2	218	234	250	266	282	298	314	330	346	362	378	394	410	426	442	458	474	490	506	522	538	554	570

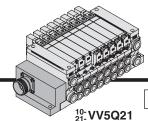

VQ2000 only

- MIL flat cable connector reduces installation labor for electrical connection.
- Manifold and connectors, both compliant with the IP65 rating (Dust-tight, Water-jet-proof), provide a high-degree of protection for the electrical parts.
- Maximum stations are 24.

### **Manifold Specifications**


	Pi	ping specifica				
Series	Piping	Port	t size	Applicable stations		
	direction	1(P), 3(R)	4(A), 2(B)	314110113		
<sup>10-</sup> <sub>21-</sub> VQ2000	Side	C10	C4, C6, M8	Max. 24 stations		

### **Circular Connector (26 Pins)**

### Cable Assembly ●

### AXT100-MC26-030 050

Circular connector cable assembly included in a specific manifold model no. Refer to "How to Order Manifold."

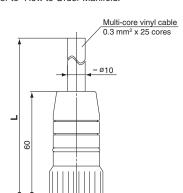

### Circular connector cable assembly

Cable length ( <b>L</b> )	Assembly part no.	Note
1.5 m	AXT100-MC26-015	0-61-05
3 m	AXT100-MC26-030	Cable 25-core
5 m	AXT100-MC26-050	X Z4AWG

\* Cannot be used for transfer wiring.

### Electrical characteristics

Item	Property						
Conductor resistance Ω/km, 20°C	65 or less						
Voltage limit V, 1 min, AC	1000						
Insulation resistance MΩ/km, 20°C	5 or more						

Note) The minimum bending radius of the circular connector cable is 20 mm.

# Circular connector cable assembly terminal no.

l erminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

Socket side


Note) Lengths other than the above are also available. Please contact SMC for details.

Plug terminal no.

### **How to Order Manifold**

Note) For CE compliant models, DC-type only.



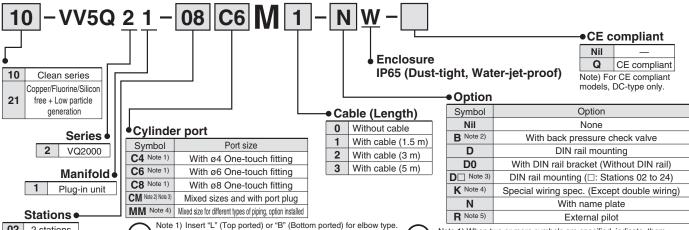

 Stations

 02
 2 stations

 ⋮
 ⋮

 24
 24 stations

 Note) Refer to page 49

for details.

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

Example) B6 (Bottom ported elbow with ø6 one-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed

cylinder port sizes.


Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping,

ote 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.

Note 5) Inch-size one-touch fittings are available. Refer to "Semi-standard" on page 50 for details.



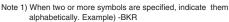


Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.


Note 5) Indicate "R" for the valve with external pilot.



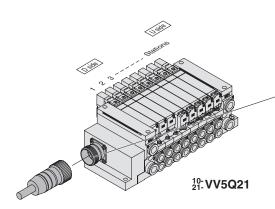

The total number of stations is tabulated starting from station one on the D-side


### Electrical Wiring Specifications

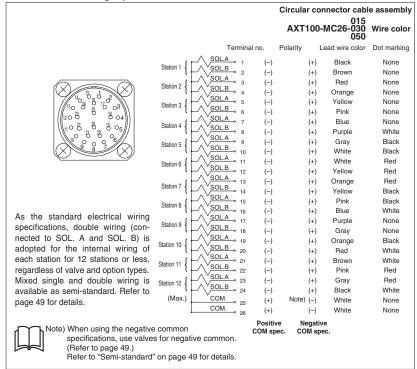

### **How to Order Valves**

Note) For CE compliant models, DC-type only.



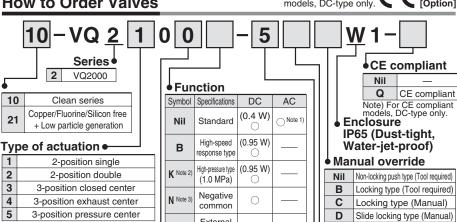

### **⚠** Caution

0

Use the standard (DC) specification when continuously energizing for long periods of time.

Seal •

Metal seal

Rubber seal

External

Note 1) For power consumption of AC type, refer to page 9. Note 2) Metal seal only

Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 49 to 50.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

# **How to Order Manifold Assembly**

Specify the part numbers for valves and options together beneath the manifold base part number.

### <Example>


Circular connector kit with cable (3 m)

VV5Q21-09C6M2-W ···1 set-Manifold base part no. \*10-VQ2100-51 ·····3 sets-Valve part no. (Stations 1 to 3)

\*10-VQ2200-51 ·····3 sets-Valve part no. (Stations 4 to 6) \*10-VQ2300-51 ·····2 sets-Valve part no. (Stations 7 to 8) \*VVQ2000-10A-1 ··1 set-Blanking plate part no. (Station 9)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos, written collectively are complicated, specify them by means of the manifold specification sheet.

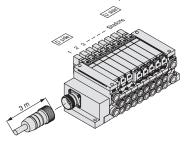



Light/surge voltage

100 VAC (50/60 Hz)

110 VAC (50/60 Hz)

24 VDC

12 VDC

CE compliant

•

Yes

suppressor

Coil voltage

Nil


1

3


5

# <sup>10</sup>-**VV5Q21**

< >: AC
The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

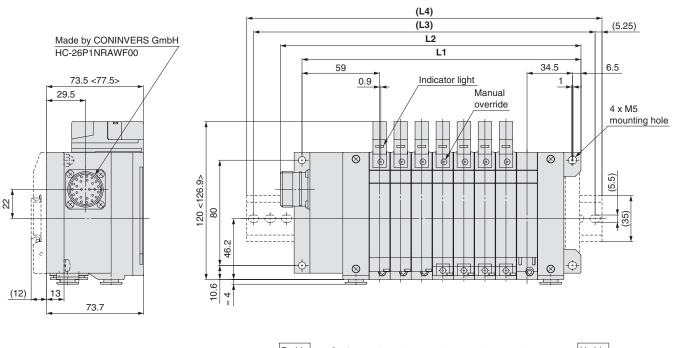

D side Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- 8 -- n U side

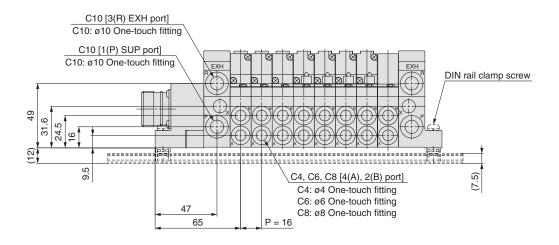

Dimens	sions					Formula L1 = 16n + 77.5, L2 = 16n + 100.5 n: Station (Maximum 12 stations)					
L n	2	3	4	5	6	7	8	9	10	11	12
L1	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5
L2	132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5
(L3)	162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5
(L4)	173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323

# **Sub-plate Single Unit**


VQ2000 Only

# Series 21-VQ2000


Note) For CE compliant models, DC-type only.




**How to Order** 

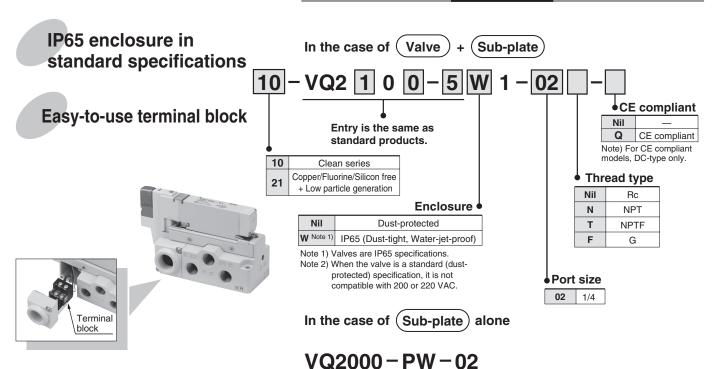

### **Dimensions**

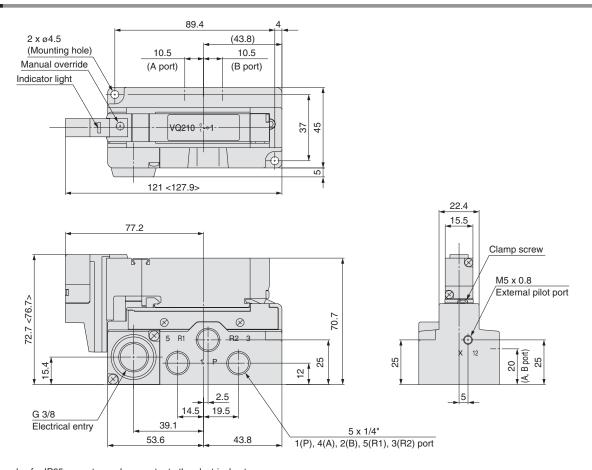

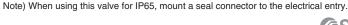





# Series 21-VQ1000/2000

### Semi-standard


### **Different Number of Connector Pins**

F and P kits with the following number of pins are available besides the standard number (F = 25P; P = 26P). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

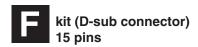

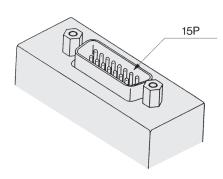

### **How to Order Manifold**

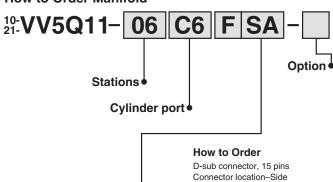


### Kit type/Electrical entry

Pins	Тор	entry	Side	entry
15P (Max. 7 stations)	<b>F</b> kit	UA	<b>F</b> kit	SA

Without cable

\* In the same way as the 25-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM.

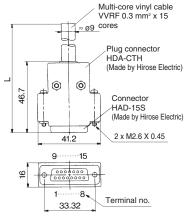

Wire Color Table by Terminal No. of D-sub Connector Cable Assembly


Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

### **D-sub Connector Cable Assembly**


	<del>_</del>
Cable length (L)	15P
1.5 m	AXT100-DS15-1
3 m	AXT100-DS15-2
5 m	AXT100-DS15-3

<sup>\*</sup> For other commercial connectors, use a type conforming to MIL-C-24308.

### kit (Flat ribbon cable) 10/16/20 pins

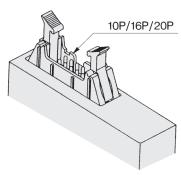

### **How to Order Manifold**

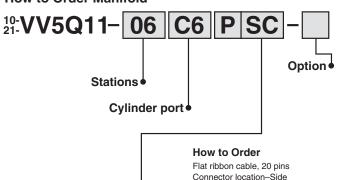


### Kit type/Electrical entry

Pins	Top e	entry	Side entry		
10P (Max. 4 stations)	D	UA	0	SA	
16P (Max. 7 stations)		UB	kit	SB	
20P (Max. 9 stations)	MI	UC	MI	SC	

Without cable

\* In the same way as the 26-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

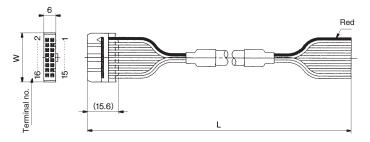

### **Flat Ribbon Cable Assembly**

Cable length (L)	10P	16P	20P
1.5 m	AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m	AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m	AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)	17.2	24.8	30

\* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.



### **Special Wiring Specifications**

In the internal wiring of F/P/J/G/T/S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

### 1. How to Order


Indicate an option symbol "-K", for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.



to be indicated alphabetically.

### 2. Wiring specifications

With the A side solenoid of the 1st station as no.1 (meaning, to be connected to no.1 terminal), without making any terminals vacant.

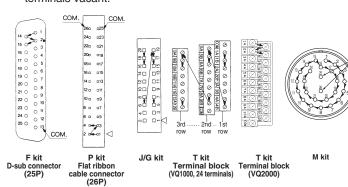

### 3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the max. number given in the following table.


Kit	F kit (D-sub connector)		connector) (Flat rib		kit on ca	ble)	J kit (Flat ribbon cable)	G kit (Flat ribbon cable with terminal block)
Туре	F s □ 25P	F <sub>s</sub> A 15P	P s □ 26P	PsC 20P	P <sub>s</sub> B 16P	P s A 10P	J <sup>U</sup> □ 20P	G□
Max. points	24	14	24	18	14	8	16	16

Kit	(Terr	T kit (Terminal block box)		S kit (Serial transmission)	M kit (Circular connector)	
Type	10-VQ1000	2 rows of terminal blocks	3 rows of terminal blocks	S□	M□	
		16	24			
Max. points	<sup>10</sup> -VQ2000	20		16	24	

### **Negative Common Specifications**


Specify the valve model no. as shown below for negative common specification.

The manifold no. shown below is for the T (10-VQ1000) and L (10-VQ1000/2000) kits. For other kits the standard manifold can be used. However, negative common is not compatible with S (except EX510 gateway-type, EX240 integrated-type and EX120/121/122 integrated-type (CompoNet™)) and G kits.

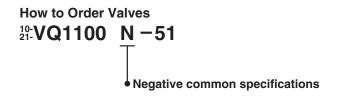


### **How to Order Manifold**

T kit (VQ1000):

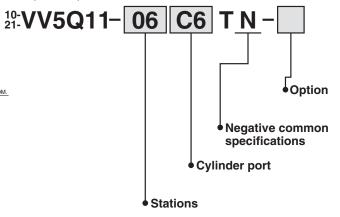

### L kit (VQ1000/2000):

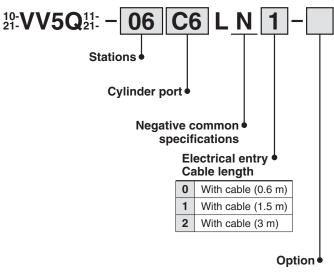



### Semi-standard

### **External Pilot Specifications**

When the supply air pressure is lower than the required minimum operating pressure (0.1 to 0.2 MPa) for the solenoid valve (or when the valve is used for vacuum), specify an external pilot model. Order a manifold or valve by suffixing the external pilot specification, "R". The X-port of the manifold base is equipped with one-touch fittings for external pilot.

VQ1000: C4 (ø4 one-touch fitting) VQ2000: C6 (ø6 one-touch fitting)

### **How to Order Manifold**

10-VV5Q11-08C6FU1-RS

Others, option symbols: to be indicated alphabetically.

### **How to Order Valves**




Note 1) When two or more functions are specified, indicate them alphabetically.

Note 2) Since the pilot EXH of this valve is released from the R1 passage, it is not
possible to vacuum from a part other than EXH pressure and SUP ports.

### **Inch-size One-touch Fittings**

The valve with inch-size one-touch fittings is shown below.

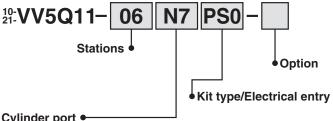

<u>Oy</u> iiiiaci	POIL -						
Syr	mbol	N1	N3	N7	N9	M5T	NM
Applicable tub	Applicable tubing O.D. (Inch)		ø5/32"	ø1/4"	ø5/16"	10-32UNF (M5 thread)	Mixed
4(A), 2(B)	VQ1000	•	•	•	_	•	•
port	VQ2000	_	•	•	•		•

Note) When inch-size fittings are selected for the cylinder port, inch-size fittings are selected on 1(P), 3(R) port, too.

1(P), 3(R) port size VQ1000 ...... ø5/16" (N9) VQ2000 ..... ø3/8" (N11)

### **DIN Rail Mounting**

Each manifold can be mounted on a DIN rail. Order it by indicating a DIN rail mounting option symbol, "-D". In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached.

### When DIN rail is unnecessary

(DIN rail mounting brackets only are attached.)

Indicate the option symbol, -D0, for the manifold part number.

### **How to Order Manifold**

### 10-VV5Q11-08C6FU1-D0S

Others, option symbols: to be indicated alphabetically.

 When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol "-D" for the manifold part number.

### **How to Order Manifold**

### 10:VV5Q11-08C6FU1-D09S

DIN rail for 9 stations

Others, option symbols: to be indicated alphabetically.

\*The number of stations that may be displayed is longer than the manifold number of stations.


### When changing to a DIN rail mounting.

Order brackets for mounting a DIN rail. (Refer to "Manifold Optional Parts" on pages 59 and 61.)

No. VVQ1000-57A (For VQ1000) VVQ2000-57A (For VQ2000) 2 pcs. per one set.

### When ordering DIN rail only DIN rail no.: AXT100-DR-□

\* As for  $\square$ , specify the number from the DIN rail table. Refer to the dimensions of each kit for L dimension.

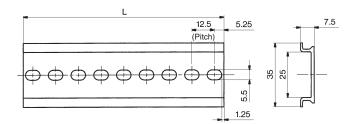

L Dir	nensi	on						L =	12.5 x	n + 10.5
No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

# Series <sup>10-</sup><sub>21-</sub>VQ1000/2000

# Construction

### 10-21-VQ1000 Plug-in Unit: Main Parts/Replacement Parts

# Metal seal 3 1 2 10 VQ1100 (A) (B) 4 2 10 VQ1200 (A) (B) 4 2 10 VQ1300 (A) (B) (A)

**Component Parts** 


No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly	_	

10- VQ1500 (A) (B)

5 1 3 (R1)(P)(R2)



Note) Refer to page 55 for "How to Order Pilot Valve Assembly".

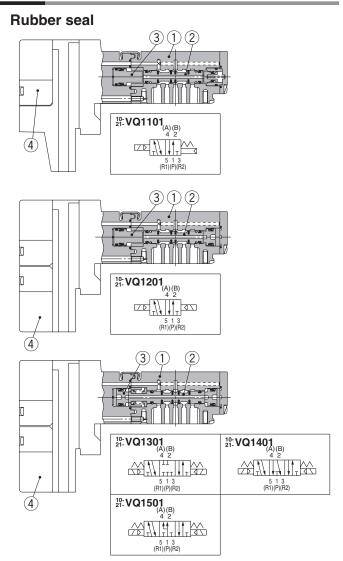

**Component Parts** 

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	
4	Pilot valve assembly	_	



Note) Refer to page 55 for "How to Order Pilot Valve Assembly".



# Series 21-VQ1000/2000

# 10-VQ2000 Plug-in Unit: Main Parts/Replacement Parts


# Metal seal 10-VQ2100 (A) (B) 4 2 10-21-VQ2200 (A) (B) 4 2 10-VQ2300 (A)(B) 4 2 10-21- VQ2400 (A)(B) 10-21-VQ2500 (A) (B) 4 2

**Component Parts** 

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly		



Note) Refer to page 55 for "How to Order Pilot Valve Assembly".

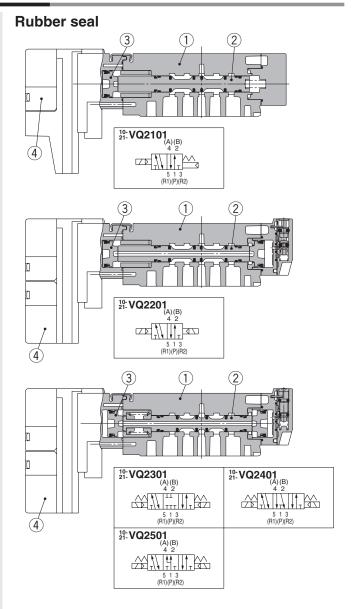

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	
4	Pilot valve assembly	_	




Note) Refer to page 55 for "How to Order Pilot Valve Assembly".



10-VQ1000 Plug-in Unit: Exploded View

(F/P/J/L/S kit)

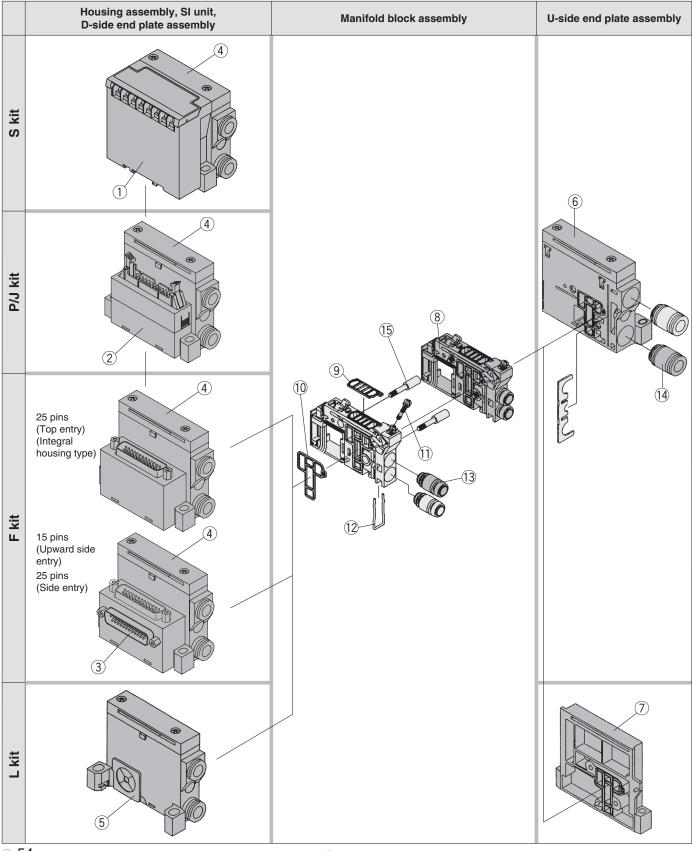

### <Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
	(SF1 kit)	EX120-SUW1(-XP) Note 2)	NKE Corp.: Fieldbus System (16 outputs)
	(SH kit)	EX120-SUH1(-XP) Note 2)	NKE Corp.: Fieldbus H System (16 outputs)
	(SJ1 kit)	EX120-SSL1(-XP) Note 2)	SUNX Corp.: S-LINK System (16 outputs)
(1)	(SJ2 kit)	EX120-SSL2(-XP) Note 2)	SUNX Corp.: S-LINK System (8 outputs)
	(SQ kit)	EX120-SDN1	DeviceNet™
	(SR1 kit)	EX120-SCS1(-XP) Note 2)	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	EX120-SCS2(-XP) Note 2)	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	EX120-SMJ1(-XP) Note 2)	CC-LINK
	(SZB kit)	EX120-SCM1	CompoNet™ (Positve common)
	(SZBN kit)	EX120-SCM3	CompoNet™ (Negative common)
(2)	P <sup>⊍</sup> s kit	AXT100-1-P <sub>S</sub> <sup>U</sup> □ Note 1)	Flat ribbon cable housing assembly $\square$ = Number of pins: 26/20/16/10
2	J <sup>⊍</sup> kit	AXT100-1-J U20 Note 1)	Flat ribbon cable housing assembly
3	FU kit	AXT100-1-FU15	D-sub connector housing assembly (Top entry) Number of pins: 15
(a)	FS kit	AXT100-1-FS□	D-sub connector housing assembly (Side entry) □ = Number of pins: 25/15

Note 1) Top entry connector for PU, JU while side entry connector for PS, JS. Note 2) Suffix "-XP" to the end of the part number for dust-protected SI unit. (Not available for S/SQ kit)

### <D-Side End Plate Assembly>

45 D-side end plate assembly no.

Electi	rical entry •		<ul><li>Optio</li></ul>	n
FU25	For F kit top entry 25 pins		Nil	0
F	For F kit other than above		R Note 1)	Е
P	For P kit		S Note 1)	
J	For J kit		<b>5</b> Mote 1)	b

VVQ1000-3A-1-□-□

Optio	11
Nil	Common EXH
R Note 1)	External pilot
S Note 1)	Direct EXH outlet with
5 140(6 1)	built-in silencer

Note 1) When both options are specified, indicate as RS.

Note 2) The housing assembly and SI unit of F/P/J/S kit are not included (except FU25). Separately place an order for ①, ②, ③.

# <Manifold Block Assembly> ® Manifold block assembly no.

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached

# Electrical entry e

VVQ1000-1A- □ - [

For L kit

For S kit

Fieci	rical entry •—	П	00	٠.
F0	Without lead wire		C3 C4	V
F1	F kit for 2 to 12 stations/Double wiring	H -	C6	V
F2	F kit for 13 to 24 stations/Double wiring	-	<u>Со</u> М5	N
F3	F kit for 2 to 24 stations/Single wiring	ľ	IVIJ	V
P1	P/J/S kit for 2 to 12 stations/Double wiring		C0	10
P2	P/J/S kit for 13 to 24 stations/Double wiring	L		(
P3	P/J/S kit for 2 to 24 stations/Single wiring			
L0□	L0 kit □: Stations (1 to 8)			
L1	L1 kit □: Stations (1 to 8)			
<b>L2</b> □	L2 kit □: Stations (1 to 8)			

Port size		
C3	With ø3.2 One-touch fitting	
C4	With ø4 One-touch fitting	
C6	With ø6 One-touch fitting	
M5	M5 thread	

M5 M5 thread

Without One-touch fitting

Without One-touch fitting
(With clip)

### <Replacement Parts for Manifold Block>

### **Replacement Parts**

No.	Part no.	Description	Material	Quantity
9	VVQ1000-80A-1	Gasket	HNBR	12
10	VVQ1000-80A-2	Packing	HNBR	12
11)	VVQ1000-80A-3	Clamp screw	Carbon steel	12
12	VVQ1000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

### <U-Side End Plate Assembly>

6 U-side end plate assembly no. (For F/P/J/S kit)

VVQ1000-2A-1-□

	<b>♦</b> Option					
	Nil Common EXH					
	R	External pilot				
	S Direct EXH outlet with built-in silence					
1	O <sub>N</sub>	ote) The <sup>1</sup> / <sub>2</sub> 's fitting assembly is included.				

7 U-side end plate assembly no. (For L kit)

### VVQ1000-2A-1-L

### <Fitting Assembly>

(13) Fitting assembly part no. (For cylinder port)

VVQ1000-50A-

Note) Purchasing order is available in units of 10 pieces.

VI OIL SIZE				
C3	Applicable tubing ø3.2			
C4	Applicable tubing ø4			
C6	Applicable tubing ø6			
M5	M5 thread			

(4) Fitting assembly part no. (For 1(P), 3(R) port)

VVQ1000-51A-<u>C8</u>

Applicable tubing ø8

Note) Purchasing order is available in units of 10 pieces.

### (5) Tie-rod assembly part no. (2 pcs./set)

### VVQ1000-TR-□

Note 1) Please order when eliminating manifold stations.

When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.

Note 2) □: Stations 02 to 24

Note 3) For S/P/J/F/L kit

### Pilot valve assembly

	Enclosure								
Function Coil voltage						oil voltage	Ť		Dust-tight,
Symbol	Specifications	DC	AC		1	100 VAC (50/60 Hz)	1	4	Water-jet-proof
Nil	Standard	(0.4 W)	Note 1)		2	200 VAC (50/60 Hz)			(IP65)
IVII	Sidiludiu		0		3	110 VAC (50/60 Hz)	П	В	Dust-protected
В	High-speed	(0.95 W)			4	220 VAC (50/60 Hz)			
Ь	response type				5	24 VDC			
К	High-pressure type	(0.95 W)			6	12 VDC			
I.	(1.0 MPa)								

Note 1) Refer to page 9 for power consumption of AC type. Note 2) Common to single solenoid and double solenoid



# <sup>10</sup>-VQ2000 Plug-in Unit: Exploded View

(F/P/J/L/G/S kit)

	Housing assembly and SI unit	D-side end plate assembly	Manifold block assembly	U-side end plate assembly
Skit	1			
P/J kit	2	000		7
Fkit	3	5		
G kit	4			
L kit		6		8

### <Housing Assembly and SI Unit> Housing assembly and SI unit no.

		, and or anic no.	
No.	Manifold	Part no.	Description
	(SF1 kit)	EX120-SUW1(-XP) Note 1) [EX123D-SUW1] Note 2)	NKE Corp.: Fieldbus System (16 outputs)
	(SH1 kit)	EX120-SUH1(-XP) Note 1) [EX123D-SUH1] Note 2)	NKE Corp.: Fieldbus H System (16 outputs)
	(SJ1 kit)	EX120-SSL1(-XP) Note 1) [EX123D-SSL1] Note 2)	SUNX Corp.: S-LINK System (16 outputs)
(1)	(SJ2 kit)	EX120-SSL2(-XP) Note 1) [EX123D-SSL2] Note 2)	SUNX Corp.: S-LINK System (8 outputs)
	(SQ kit)	EX120-SDN1 [EX124D-SDN1] Note 2)	DeviceNet™
	(SR1 kit)	EX120-SCS1(-XP) Note 1) [EX124D-SCS1] Note 2)	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	EX120-SCS2(-XP) Note 1) [EX124D-SCS2] Note 2)	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	EX120-SMJ1(-XP) Note 1) [EX124D-SMJ1] Note 2)	CC-LINK
	(SZB kit)	EX120-SCM1	CompoNet™ (Positve common)
	(SZBN kit)	EX120-SCM3	CompoNet™ (Negative common)
2	P <sub>s</sub> kit	<b>AXT100-1-P</b> <sup>U</sup> <sub>S</sub> □ Note 3)	Flat ribbon cable housing assembly □: Number of pins: 26/20/16/10
	J <sup>⊍</sup> s kit	AXT100-1-J <sup>U</sup> <sub>S</sub> 20 Note 3)	Flat ribbon cable housing assembly
3	Fs kit	AXT100-1-F <sup>U</sup> <sub>S</sub> □ Note 3)	D-sub connector housing assembly □: Number of pins: 25/15
4	G kit	AXT100-1-GU20	Flat ribbon cable housing assembly with terminal block

Note 1) Suffix "-XP" to the end of the part number for dust-protected SI unit.

Note 2) Dust-tight, Water-jet-proof (IP65)

Note 3) Top entry connector for FU, PU, JU while side entry connector for FS, PS, JS.

### <D-Side End Plate Assembly>

56 D-side end plate assembly no.

### VVQ2000-3A-1-□-Electrical entry

F	For F kit
Р	For P kit
J	For J kit
L	For L kit
G	For G kit
S	For S kit

Enclosure

W	Dust-tight, Water-jet-proof (IP65)		
Note) F/	P/J/G kit are available with "Nil" only.		
M kit is available with [W] only.			
S/L/T kit are selectable depending on the			
ma	anifold type.		

Dust-protected

### Option

Nil	Common EXH
R Note 1)	External pilot
S Note 1)	Direct EXH outlet with built-in silencer



Note 1) When both options are specified, indicate as RS.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included. Separately place an order for ①, ②, ③, ④.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

### <Manifold Block Assembly>

Manifold block assembly no.

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached

### <U-Side End Plate Assembly>

U-side end plate assembly no. (For F/P/J/G/T/S/M kit)

# VVQ2000-2A-1-□□

Option •				
Nil	Common EXH			
R	External pilot			
s	Direct EXH outlet			
3	with built-in silencer			

LIIC	Osuic
Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P/J/G kit are available with "Nil" only. M kit is available with [W] only. S/T kit are selectable depending on the manifold type.



Note 1) The 15's fitting assembly is included.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included. Separately place an order for 1, 2, 3, 4.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

### 8 U-side end plate assembly no. (For L kit)

VVQ2000-2A-1-L-□

Nil	Dust-protected						
W	Dust-tight, Water-jet-proof (IP65)						

Note) Select it depending on the manifold type.

### VVQ2000-1A- □ - □ - □ Electrical entry

**Replacement Parts** 

Part no.

VVQ2000-80A-1

VVQ2000-80A-2

VVQ2000-80A-3

VVQ2000-80A-4

No.

(10)

(11)

(12)

(13)

LICCE	riodi cita y
F0	Without lead wire
F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P/J/G/S kit for 2 to 12 stations/Double wiring
P2	P/J/G/S kit for 13 to 24 stations/Double wiring
P3	P/J/G/S kit for 2 to 24 stations/Single wiring
L0□	L0 kit □: Stations (1 to 8)
<b>L1</b> □	L1 kit □: Stations (1 to 8)
L2□	L2 kit □: Stations (1 to 8)
T1	T kit for 2 to 20 stations/Double wiring
T3	T kit for 2 to 20 stations/Single wiring
M1	M kit for 2 to 12 stations/Double wiring
M2	M kit for 13 to 24 stations/Double wiring
М3	M kit for 2 to 24 stations/Single wiring

### Dort ciza

Material

HNBR

**HNBR** 

Carbon steel

Stainless steel

- 1 (	n t Size
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
CO	Without One-touch fitting (With clip

Quantity

12

12

12

12

### Fnclosure

Nil	Dust-protected							
W	Dust-tight, Water-jet-proof (IP65)							
	· · · · · · · · · · · · · · · · · · ·							

Note) F/P/J/G kit are available with "Nil" only. M kit is available with [W] only.

S/L/T kit are selectable depending on the manifold type.

### <Fitting Assembly>

(4) Fitting assembly part no. (For cylinder port)

VVQ1000-51A-

Note) Purchasing order is available

—• Port size								
C4	Applicable tubing ø4							
C6	Applicable tubing ø6							
C8	Applicable tubing ø8							

(5) Fitting assembly part no. (For 1(P), 3(R) port)

VVQ2000-51A-C10

Applicable tubing ø10



Note) Purchasing order is available in units of 10 pieces.


in units of 10 pieces.

(2 pcs./set)

VVQ2000-TR- Note 1) Please order when eliminating manifold stations.

When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.

Note 2) □: Stations 02 to 24 Note 3) For S/P/J/F/L kit

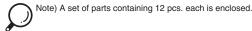

<Replacement Parts for Manifold Block>

Description

Gasket

Seal

Clamp screw

Clip




# Series 21-VQ1000

### 10:VQ1000: Manifold Optional Parts

# Blanking plate assembly VVQ1000-10A-1

JIS symbol


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

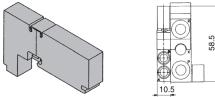

# Individual SUP spacer VVQ1000-P-1- $^{C6}_{N7}$

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.) \* Specify the spacer mounting position and SUP block plate


- \* Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)
- As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
- \* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

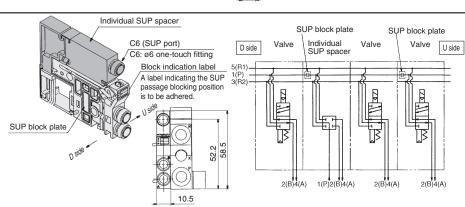

# Individual EXH spacer VVQ1000-R-1- $_{ m N7}^{ m C6}$

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.) Block both sides of the individual valve EXH station. (Refer to the application example.)

- \* Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set.
- An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold no. However, do not order an EXH block base assembly because it is attached to the spacer.
- When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer. As a standard, electric wiring is connected to the pos-
- \* As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

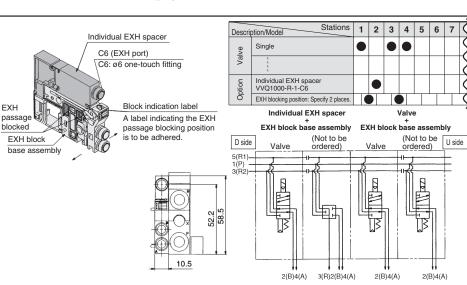

# SUP block plate VVQ1000-16A


When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

\* Specify the mounting position by means of the manifold specification sheet.

### <Block indication label>

Indication labels to confirm the blocking position are attached (Each for SUP passage and SUP/EXH passage blocking positions).

 When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

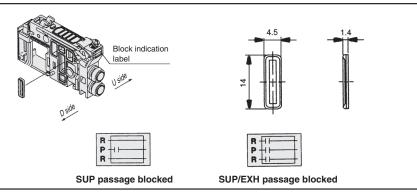

# EXH block base assembly

### VVQ1000-19A-F=-(C3/C4/C6/M5/N1/N3/N7)

### Manifold block assembly electrical entry


F0	Without lead wire						
F1	For F kit (2 to 12 stations)/Double wiring						
F2	For F kit (13 to 24 stations)/Double wiring						
F3	For F kit (2 to 24 stations)/Single wiring						
P1	For P, G, T, S kit (2 to 12 stations)/Double wiring						
P2	For P, G, T, S kit (13 to 24 stations)/Double wiring						
Р3	For P, G, T, S kit (2 to 24 stations)/Single wiring						
L0*	L0 kit )						
L1*	L1 kit * 1 to 8 stations						
L2*	L2 kit						

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

### <Block indication label>

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)

\* When ordering a EXH block base incorporated with a manifold, a block indication label is attached to the manifold.

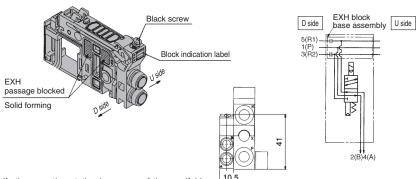

- Specify the mounting station by means of the manifold specification sheet.
- When ordering this option incorporated with a manifold, specify the EXH block base assembly part number with
- "\*" in front of it beneath the manifold part number.








SUP/EXH passage blocked


# Back pressure check valve assembly [-B] VVQ1000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

\* When ordering it being mounted on all manifold stations, suffix "-B" to the end of the manifold part number.

Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting station by means of the manifold specification sheet.

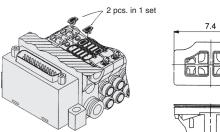

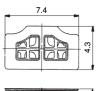

### (Precautions)

- The back pressure check valve assembly is the parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.
- When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.

### Name plate [-N] VVQ1000-N<sub>C</sub>-N-Station (1 to Max. stations)


It is a transparent resin plate for placing a label that indicates solenoid valve function, etc.


Insert it into the groove on the side of the end plate

and bend it as shown in the figure.

- When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n"
- \* When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

N: Standard NC: For mounting blanking plate with connector

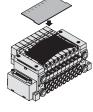

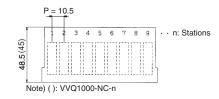


### Blanking plug (For one-touch fittings)

### KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.



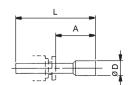

### Dimensions

Applicable fitting size <b>ød</b>	Model	Α	L	D	Applicable fitting size ød	Model	Α	L	D
3.2	KQ2P-23	16	31.5	3.2	1/8"	KQ2P-01	16	31.5	5
4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10

### Port plug VVQ0000-58A

The plug is used to block the cylinder port.

- \* When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting station and cylinder port mounting positions 4(A) and 2(B) by means of the manifold specification sheet.
- \* Gently screw an M3 screw in the port plug hole and pull it for removal.







# DIN rail mounting bracket [-D,-D0,-D□] VVQ1000-57A

This bracket is used for mounting the manifold on the DIN rail. \* When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

1 set of DIN rail mounting brackets for 1 manifold includes 2 brackets

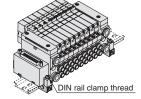

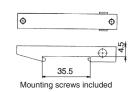







# Series 21-VQ2000

# 10-VQ2000: Manifold Optional Parts

### Blanking plate assembly JIS symbol VVQ2000-10A-1

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

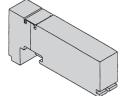

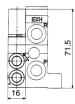


### **Individual SUP spacer** VVQ2000-P-1-C8

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is oc-

- ports for different pressures. (One station space is occupied.)
  Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)
  \* Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set.

  (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)
  \* As a standard, electric wiring is connected to the pos-
- As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
   If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

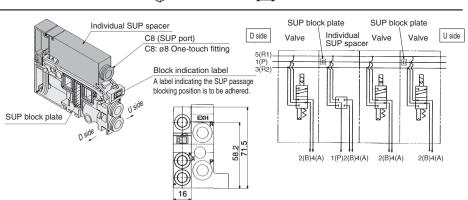

### Individual EXH spacer VVQ2000-R-1-C8

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)


Block both sides of the individual valve EXH station. (Refer to the application example.)

\* Specify the mounting position, as well as the EXH

block base or EXH block plate position by means of the manifold specification sheet

The block plate is used in one or two places for one set. (Two EXH block plates for blocking EXH station are attached to the individual EXH spacer.)

- \* As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted
- \* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

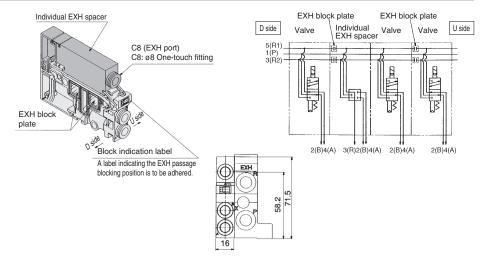


### SUP block plate VVQ2000-16A


When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under

\* Specify the mounting position by means of the manifold specification sheet

### <Block indication label>

Indication labels to confirm the blocking position are attached. (Each for SUP passage and SUP/EXH passage blocking positions)

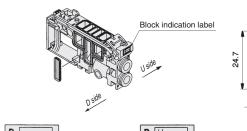

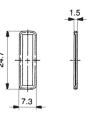



SUP passage blocked





When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.


### **EXH** block plate VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations configuration. It is also used in combination with an individual EXH spacer for individual exhaust.

\* Specify the mounting position by means of the manifold specification sheet.

### <Block indication label>


Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)

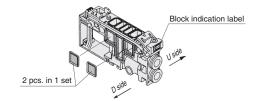





EXH passage blocked

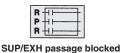




When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

### Back pressure check valve assembly [-B] VVQ2000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

\* When ordering assemblies incorporated with a manifold, add

- suffix "-B" to the end of the manifold part number. Note) When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position by means of the manifold specification sheet.

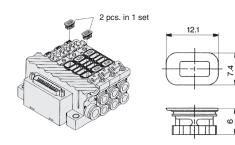

### (Precautions)

- 1. The back pressure check valve assembly is assembly parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.
- When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%


### Name plate [-N] VVQ2000-N-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc.

Insert it into the groove on the side of the end plate and bend it as shown in the figure.

\* When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.



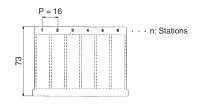


# Blanking plug (For One-touch fittings)

KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports.
Purchasing order is available in units of 10 pieces.



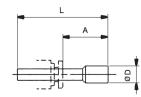

### **Dimensions**


Applicable fitting size ød	Model	Α	L	D	Applicable fitting size ød	Model	Α	L	D
4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10
10	KQ2P-10	22	43	12	3/8"	KQ2P-11	22	43	11.5


### DIN rail mounting bracket [-D,-D0,-D□] VVQ2000-57A

This bracket is used for mounting the manifold on the DIN rail.

\* When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

1 set of DIN rail mounting brackets for 1 manifold includes 2 brackets.

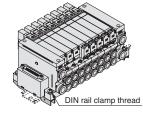

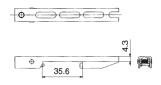





# Series 21-VQ1000/2000 Specific Product Precautions 1


Be sure to read before handling.


Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

### **Light/Surge Voltage Suppressor**

### **∧** Caution

The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

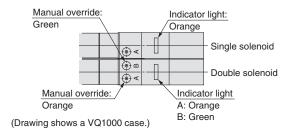

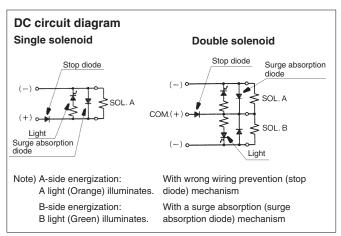


### **Manual Override**

# **⚠** Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve. Push type is standard. (Tool required) Locking type is semi-standard. (Tool required/Manual)

### ■ Push type (Tool required)

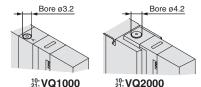


Push down on the manual override with a small screw-driver, etc. until it stops. Release the screwdriver and the manual override will return.

### ■ Locking type (Tool required) <Semi-standard>

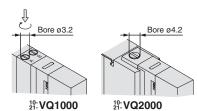

Push down on the manual override with a flat head screwdriver until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

### ■ Locking type (Manual) <Semi-standard>

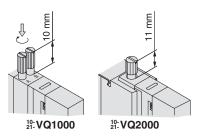

Push down on the manual override with a small flat head screwdriver or with your fingers until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

### **⚠** Caution

Do not apply excessive torque when turning the locking type manual override. (0.1  $N \cdot m$  or less)





# Series <sup>10</sup>-VQ1000/2000

# **Specific Product Precautions 2**


Be sure to read before handling.


Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

### **Manual Override**

# **⚠** Warning

■ Slide locking type (Manual) <Semi-standard>

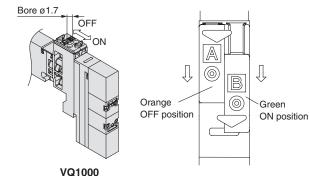


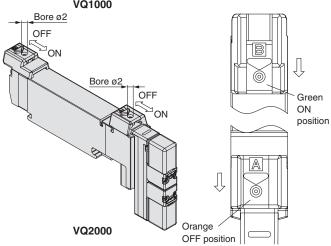

The manual override is locked by sliding it all the way to the pilot valve side (ON side) with a small flat head screwdriver or finger. Slide it to the fitting side (OFF side) to release it. In addition, it can also be used as a push type by using a screwdriver, etc., of  $\emptyset 1.7$  or less. ( $\emptyset 2$  or less for VQ2000).

### **How to Mount/Remove Solenoid Valves**

# **∧** Caution

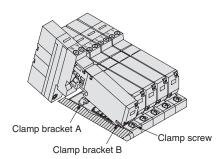

### Removing

- Loosen the clamp screw until it turns freely. (The screw is captive.)
- 2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

### How to Mount/Remove Solenoid Valves

# **A** Caution

### Mounting

- Press down on the clamp screw. Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp B.
- Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
- Tighten the clamp screw. (Proper tightening torque: VQ1000, 0.25 to 0.35 N⋅m; VQ2000, 0.5 to 0.7 N⋅m.)

### **⚠** Caution


Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.

### **Replacement of Cylinder Port Fittings**

### **↑** Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip. Take out the clip with a flat head screwdrier, etc., then replace the fittings.

For mounting, insert the fitting assembly until it strikes against the inside wall and then insert the clip to the specified position.

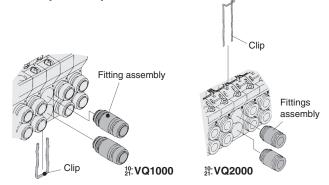

Applicable tubing O.D.	Fitting assembly part no.					
Applicable tubing O.D.	10- 21- <b>VQ1000</b>	10- 21- <b>VQ2000</b>				
Applicable tubing ø3.2	VVQ1000-50A-C3					
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4				
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6				
Applicable tubing ø8		VVQ1000-51A-C8				
M5	VVQ1000-50A-M5					
Applicable tubing ø1/8"	VVQ1000-50A-N1					
Applicable tubing ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3				
Applicable tubing ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7				
Applicable tubing ø5/16"		VVQ1000-51A-N9				

\* Refer to "Manifold Optional Parts" on pages 59 for other types of fittings.

### **⚠** Caution

- Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
- After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
- 3. Purchasing order is available in units of 10 pieces.





# Series 21-VQ1000/2000

# **Specific Product Precautions 3**

Be sure to read before handling.


Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

### How to Mount/Remove DIN Rail

# **⚠** Caution


### Removing

- Loosen the clamp screw on side (a) of the end plate on both sides.
- 2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

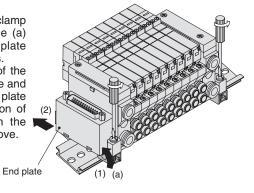

### Mounting

- Hook side (b) of the manifold base on the DIN rail.
- 2. Press down side
  (a) and mount the
  end plate on the
  DIN rail. Tighten
  the clamp screw
  on side (a) of the
  end plate. The
  proper tightening
  torque for screws
  is 0.4 to 0.6 N·m.

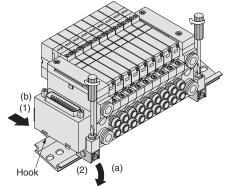

### **IP65 Enclosure**

# **⚠** Caution

Wiring connection for models conforming to IP65 should also have enclosures equivalent to or of stricter than IP65.

### **How to Calculate Flow Rate**

Refer to Best Pneumatics No. 1) for obtaining the flow rate.

