Fill the flow path with sulfurio

# Digital Flow Switch for Deionized Water and Chemicals

# Series PF2D



A single controller can monitor the flow rate of 4 different sensors.



# 4-channel Flow Monitor Series PF2D200

# **New PFA**

Tubing

# **Super PFA**


3 types of flow range

0.4 to 4 L/min (PF2D504) 1.8 to 20 L/min (PF2D520) 4.0 to 40 L/min (PF2D540)

Dust generation of 3 particles/cc or less (average number)


Karman vortex eliminates moving parts and allows low dust generation.

Particle characteristics (reference)

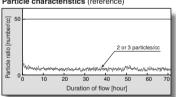


The data was obtained by performing an actual 10 minutes' supersonic cleaning using an average 16  $M\Omega\text{-cm}$  of deionized water at class 10000 clean room (1 L/min flow rate).

The diameter of the measured particles ranges from 0.1 to 0.5  $\mu$ m. The flow rate used during measuring is 100 cc/min.

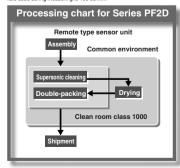

Swept flow characteristics
Tapered side seal minimizes dead volume
to reduce accumulation of liquid pool.

Swept flow characteristics (reference)

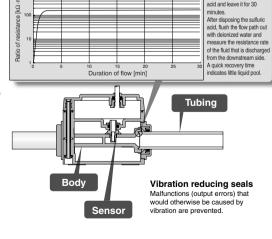

# For Deionized Water and Chemicals

# **Digital Flow Switch**

# Series PF2D



Remote Type Sensor Unit

PF2D5 20 - 13 -

Flow rate range

04 0.4 to 4 L/min 20 1.8 to 20 L/min 40 4 to 40 L/min

Applicable tubing size (inch)

11	3/8	PF2D504
13	1/2	PF2D520
19	3/4	PF2D540

Option (Refer to page 372.)

Nil None e-con connector (1 pc.) The cable and connector are shipped

unassembled. Output specifications

Symbol	Specification	Applicable monitor unit (monitor) model
1	Output for monitor unit + analog output (1 to 5 V)	Series PF2D200/300
2	Output for monitor unit + analog output (4 to 20 mA)	Series PF2D300

## **Specifications for Sensor Unit**

Model		del	PF2D504	PF2D520	PF2D540
Measured fluid			Liquid not to corrode nor erode deionized water and/or Teflon®. Viscosity: 3 mPa·s (3 cP) or less. Refer to "Applicable Fluids" on page 375.		
Dete	Detection method		Karman vortex		
Rate	d flow rang	ge	0.4 to 4 L/min	0.4 to 4 L/min 1.8 to 20 L/min Note 1) 4 to 40 L/m	
Oper	ating press	ure range Note 2)	0 to 1	MPa	0 to 0.6 MPa
Proo	f pressure	Note 3)	1.5 !	MPa	0.9 MPa
Ope	rating fluid	temperature		0 to 90°C	
Accı	ıracy Note 4)			±2.5% F.S. (with 25°C water)	
Repe	eatability			±1% F.S. (with 25°C water)	
Tem	perature cl	naracteristics		$\pm 5\%$ F.S. (0 to 50°C, 25°C reference)	
		Pulse output	Pulse output, N channel, open drain, output for monitor unit PF2D 300/301		
		r disc output	(Specifications: Maximum load current of 10 mA; Maximum applied voltage of 30 V)		
Outp	out		Voltage output Note 5) 1 to 5 V		
spec	ifications	Analog	Accuracy: $\pm 2\% F.S.$ , Min. load impedance: 100 k $\Omega$ or more (Output impedance: 1 k $\Omega$ )		
		output	Current output Note 6) 4 to 20 mA		
			Accuracy: $\pm 2\%$ F.S., Max. load impedance: 300 $\Omega$ or less (for 12 VDC), 600 $\Omega$ or less (for 24 VDC)		
Pow	er supply v	roltage	12 to 24 VDC ±10%		
Curr	ent consur	nption	20 mA or less (without load)		
=	Enclosur	е	IP65		
Environment	Operating t	temperature range	Operating: 0 to 50°C, Stored: –25 to 85°C in stock (with no condensation and freezing)		
E	Voltage r	esistance	1000 VAC for 1 minute between terminals and housing		
3	Insulation	n resistance	$50~\text{M}\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing		
Noise resistance		istance	1000 Vp-p, Pulse width: 1 μs, Rise time: 1 ns		
Weig	Weight		140 g (without lead wire) 225 g (without lead wire)		225 g (without lead wire)
Port	size		3/8 inch tubing	1/2 inch tubing	3/4 inch tubing
Wett	ed parts m	aterial	Body: New PFA, Sensor: New PFA, Tubing: Super PFA		

Note 1) 1.6 to 20 L/min (0.1 MPa) with viscosity of 1 mPa·s (1 cP) or less

Note 2) The operating pressure range drops according to the fluid temperature. See attached graph.

Note 3) 1.5 times of the maximum operating pressure and varying with fluid temperature.

Note 4) The system accuracy when combined with PF2D30 ...

Note 5) When the voltage output is selected

Note 6) When the current output is selected Note 7) The sensor unit conforms to the CE marking.

#### Made to Order

Series LQ1 fluoropolymer fittigs mounting type is also

Operating pressure [MPa] PF2D 504/520 0.5 PF2D 540: 20 80 90 100 Fluid temperature [°C]

## **How to Order**

Remote Type Monitor Unit

PF2D30 0 - A -M

Output specifications

0 NPN open collector 2 outputs 1 PNP open collector 2 outputs

 Unit specifications Nil With unit switching function Fixed SI unit Note)

Note) Fixed units: Instantaneous flow rate: L/min Accumulated flow: L

Mounting

A Panel mounting

## **Specifications for Monitor Unit**

Model		PF2D300/301			
Flow rate measurement range Note 1)		0.25 to 4.5 L/min	1.3 to 21.0 L/min	2.5 to 45 L/min	
Set flow rate range Note 1)		0.25 to 4.5 L/min	1.3 to 21.0 L/min	2.5 to 45 L/min	
Minin	num set unit Note 1)	0.05 L/min	0.1 L/min	0.5 L/min	
	ulated pulse flow rate exchange Pulse width: 50ms) Note 1)	0.05 L/pulse	0.1 L/pulse	0.5 L/pulse	
	(e 2) Instantaneous flow rate		L/min, gal (US)/min	•	
Displ units		L, gal (US)			
Accu	mulated flow range Note)		0 to 999999 L		
Accu	racy Note 3)		±2.5% F.S.		
Repe	atability		±0.5% F.S.		
Temperature characteristics			±1% F.S. (15 to 35°C, 25°C reference) ±2% F.S. (0 to 50°C, 25°C reference)		
Curre	nt consumption (No load)	60 mA or less			
Weig	ht	45 g			
Note 4) Output specifications	Switch output	NPN open collector (PF2D300)	Maximum load current: 80 mA Internal voltage drop: 1 V or less (with Maximum applied voltage: 30 V 2 outputs	n load current of 80 mA)	
Output spe		PNP open collector (PF2D301)	Maximum load current: 80 mA Internal voltage drop: 1.5 V or less (w 2 outputs	ith load current of 80 mA)	
	Accumulated pulse output	NPN open collector or PNP open collector (same as switch output)		switch output)	
ŧ	Enclosure		IP40		
E	Operating temperature range	Operating: 0 to 50°C, Stored: -25 to 85°C (with no condensation and freezing)		sation and freezing)	
- E	Voltage resistance	1000 VAC for 1 minute between terminals and housing			
Operating temperature range Voltage resistance Insulation resistance Noise resistance		50 M $\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing			
		1000 Vp-p, Pulse width: 1 μs, Rise time: 1 ns			
Indicator light		3-digits 7-segment LED			
Statu	s LED's	ON: when light is on, OUT1: Green; OUT2: Red			
Powe	er supply voltage	12 to 24 VDC ±10%			
Resp	onse time	1sec. or less			
Hyste	eresis	Hysteresis mode: adjustable (can be set from 0) Window comparator mode Note 5): fixed (3 digits)			

Note 1) The value varies depending on set flow range

Note 2) For digital flow switch with unit switching function. (Fixed SI unit [L/min or L] will be set for switch types without the unit switching function.)

Note 3) The system accuracy when combined with PF2D5□□.

Note 4) Switch output and accumulated pulse output can be selected using the control button operation during initial setting.

	1	2	3	4
Output 1	Switch output	Switch output	Accumulated pulse output	Accumulated pulse output
Output 2	Switch output	Accumulated pulse output	Switch output	Accumulated pulse output

Note 5) Window comparator mode: Since hysteresis (H) will reach 3 digits, keep P\_1 and P\_2 or n\_1 and n\_2 apart by 7 digits more. (In case of output OUT2, n\_1, 2 to be n\_3, 4 and P\_1, 2 to be P\_3, 4.) Note 6) The monitor unit conforms to the CE marking.

Note 7) Accumulated flow rate is reset when the power supply turns OFF.



## How to Order





PF2D20

Output specifications

0 NPN 4 outputs Accessory/Power supply output cable (2 m) PNP 4 outputs

Option 2 (Refer to page 372.) Nil None

Option 1 (Refer to page 372.)

Sensor connector (4 pcs.)

Unit specifications With unit switching function Note1) Nil Fixed SI unit Note2)

Note1) Under Japan's new Measurement Act, this is only for overseas sales (SI units are to be used inside Japan). Nil None Panel mount adapter В Front protective cover + Panel mount adapter

Note2) Fixed units: Instantaneous flow rate: L/min Accumulated flow: L

Connectable remote type sensor unit is PF2D5□□-□-1 (with analog output 1 to 5 V).

## **Specifications**

Model		Model	PF2D200/201			
Ар	Applicable flow rate sensor		PF2D504-□-1	PF2D520-□-1	PF2D540-□-1	
Flo	Flow rate measurement range Note 1)		0.25 to 4.50 L/min	1.3 to 21.0 L/min	2.5 to 45.0 L/min	
Se	flow rate	range Note 1)	0.25 to 4.50 L/min	1.3 to 21.0 L/min	2.5 to 45.0 L/min	
Mir	nimum set	unit Note 1)	0.05 L/min	0.1 L/min	0.5 L/min	
		ulse flow rate exchange dth: 50ms) Note 1)	0.05 L/pulse	0.1 L/pulse	0.5 L/pulse	
	Note 1)		L/min, gal(US)/min			
Dis	play units	Accumulated flow	L, gal(US)			
Ac	cumulated	I flow range Note 1)		0 to 999999 L, 0 to 999999 gal(US)		
Po	wer supply	y voltage	24 VDC	±10% (With power supply polarity pro	tection)	
Cu	rrent cons	umption	55 mA or less	(Not including the current consumption	of the sensor)	
Po	wer suppl	y voltage for sensor		Same as [Power supply voltage]		
Pov	ver supply (	current for sensor Note 2)	Max. 110 mA (However	, the total current for the 4 inputs is 440	mA maximum or less.)	
Se	nso <u>r input</u>	İ .	1 to	5 VDC (Input impedance: Approx. 800	ΚΩ)	
	No. o	f inputs	4 inputs			
	Input	protection	Excess voltage protection			
Note 3)	Switch output (Real-time switch output,		NPN open collector (PF2D20	Maximum load current: 80 mA  NPN open collector (PF2D200) Internal voltage drop: 1 V or less (with load current of 80 mA)  Maximum applied voltage: 30 V		
Output	outpu		PNP open collector (PF2D20	Maximum load current: 80 mA     Internal voltage drop: 1 V or le	ess (with load current of 80 mA)	
हुं	Accui	mulated pulse output	NPN open collector or PNP open collector (same as switch output		switch output)	
₹	No. o	f outputs				
	Outp	ut protection	Short circuit protection			
	steresis		Hysteresis mode: Variable (can be set from 0), Window comparator mode: Fixed (3-digits)			
	sponse tin		1 s or less			
_	curacy Note			±5% F.S.		
Re	peatability	Note 4)		±3% F.S.		
Te	mperature	characteristics	±2% F.S. (0 to 50°C, 25°C reference)			
Dis	play meth	iod	For measured value display: 4-digits, 7-segment LED (Orange) For channel display: 1-digit, 7-segment LED (Red)			
	Status LED's		Lights up when output is ON OUT1: Red			
ᄩ	Enclosure		IP65 for the front face only, the rest is IP40.			
Environment	Operating	temperature range	Operating: 0 to 50°C	C, Stored: -10 to 60°C (with no freezing	g and condensation)	
불[	Operating	humidity range	Operating or Stored: 35 to 85%RH (with no condensation)			
ᇤ	Noise resistance		500 Vp-p, Pulse width 1 μs, Rise time 1 ns			
Co	nnection		Power supply/Output con	nection: 8P connector, Sensor connect	ion: 4P connector (e-con)	
Ma	terial		Housi	Housing: PBT, Monitor: PET, Backside rubber: CR		
We	ight		60 g (Exce	60 g (Except for any accessories that are shipped together)		
-			2 (			

Note 1) Fixed SI unit [L/min or L] will be set for switch types without the unit switching function. ("-M" is suffixed at the end of part number.) Accumulated flow is reset when the





power supply turns OFF.


Note 2) If Vcc side on sensor input connector part is short-circuited with the 0 V side, the flow monitor inside will be damaged.

Note 3) Switch output and accumulated pulse output can be selected during initial setting. Note 4) The system accuracy when combined with an applicable flow sensor. Note 5) This product conforms to the CE marking.

Parte liet

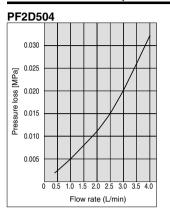


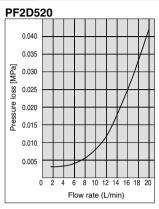

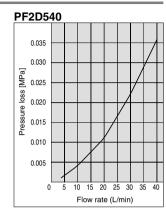


## **Wetted Parts Construction**

## PF2D504/520

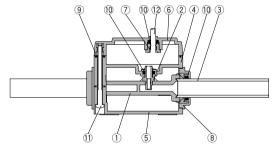

rai is iisi		
Number	Parts	Material
1	Body	New PFA
2	Sensor	New PFA
3	Tubing	Super PFA
4	Housing A	PPS
5	Housing B	PPS
6	Housing C	PPS
7	Bushing	POM
8	Сар	PPS
9	Gasket	FKM
10	O-ring	FKM
11	Thread	Stainless steel 304
12	Lead wire	PVC


## PF2D540

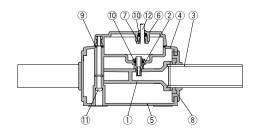



## **Dimensions: Remote Type Sensor Unit**


## PF2D504-11/520-13

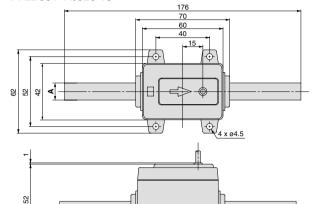

Model	Α
PF2D504	ø9.52
PF2D520	ø12.7

#### Internal circuits and wiring examples

1 to 8 are the terminal numbers.

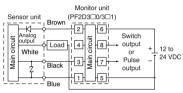


#### Load is an analog input equipment such as a voltmeter. **PF2D5**□□-□-1 (With voltage output type) PF2D540-19 Monitor unit

#### Sensor unit (PF2D3□0/3□1) Anal Analog output Switch circuit circuit 4 - 8 output White ┼3 7 Pulse output Blue

# Load is an analog input equipment such as a voltmeter. PF2D5\(\sigma\)-\(\sigma\)-2 (With voltage output type)

## Wiring

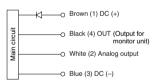

12 to


24 VDC

or

Use this sensor by connecting it to a SMC remote type display unit Series, PF2D2

30.


# 186 86 78 56 15 $\overline{\Phi}$ 2 8 8 4 x ø4.5 62 25 Flow direction

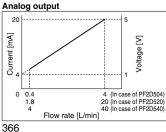



## Cable Specifications


No. of cable	wire	4	
Conductor	Nominal cross-sectional area	0.15 mm <sup>2</sup>	
Conductor	Dimension	Approx. 0.5 mm	
Insulator	Dimension	Approx. 0.9 mm Brown, White, Blue, Black	
Sheath	Material	Oil-resistant PVC	
Sileatii	O.D.	3.5 mm	

## PF2D30<sup>9</sup>-A Panel mount adapter type

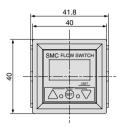


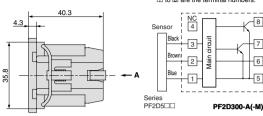

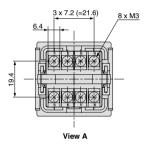


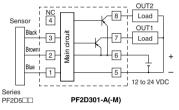

\* Do not connect the white wire of the sensor to 3 of the monitor unit.

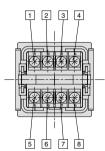

### Panel fitting dimensions

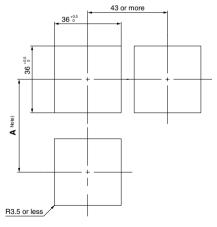


Note) Decide the length of A taking into account the size of terminal you use.

**SMC** 

\* The applicable panel thickness is 1 to 3.2 mm.

Corner: R3.5 or less

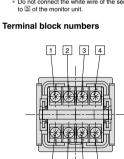

Load OUT1


Load

12 to 24 VDC


Dimensions: Remote Type Monitor Unit For Deionized Water and Chemicals (4-channel Controller)


## PF2D200/201



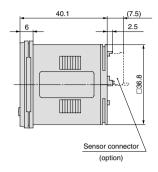


## Front protective cover + Panel mount adapter

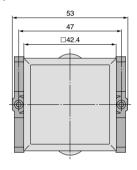


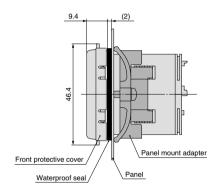


Panel fitting dimensions

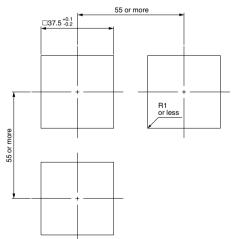

<sup>\*</sup> Applicable panel thickness: 0.5 to 8 mm

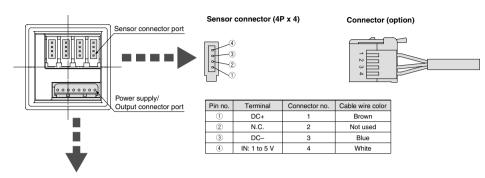


## Power supply/Output connector (8P)

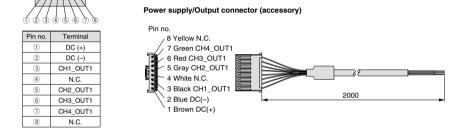


## **Cable Specifications**

No. of cable wire		8
Conductor	Nominal cross-sectional area	0.15 mm <sup>2</sup>
Conductor	Dimension	Approx. 0.5 mm
Insulator	Dimension	Approx. 0.9 mm Brown, White, Blue, Black, Gray, Red, Green Yellow
Sheath	Material	Heat-resistant polyethylene
Sileatii	O.D.	4.8 mm

# Internal circuits and wiring examples PF2D200

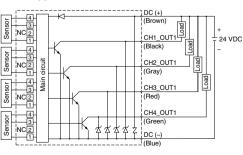

## PF2D201

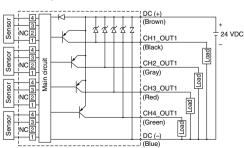

## **Description**

# Remote Type/Monitor Unit PF2D300, 301



#### RESET button (▲ + ▼ button)

If the UP and DOWN buttons are pressed simultaneously, the RESET function will activate. In case of an emergency, please clear the display. The display of the accumulated flow will be reset to zero.

1	LED display/Red	Displays the measured flow rate, each setting condition, and error code.
2	Output (OUT1) display/Green	Displays the output condition of OUT1. Lights up when output is turned ON.
3	Output (OUT2) display/Red	Displays the output condition of OUT2. Lights up when output is turned ON.
4	UP button (▲ button)	Use to change the mode or to increase the set value.
(5)	SET button ( button)	Use this button to set the value or the set mode.
6	DOWN button (▼ button)	Use to change the mode or decrease the set value.

# 4-channel Flow Monitor (Remote type/Monitor unit) PF2D200, 201



1	LED display/Orange	Displays the measured flow rate, each setting condition, and error code.	
2	Switch output display/Red	Displays the output condition of OUT1 (CH1 to 4). Lights up when output is turned ON.	
3	Unit display/Orange	Illuminates the selected unit. Use after putting the unit label other than L/min, L.	
4	Channel display/Red	Displays the selected channel.	
(5)	UP button (▲ button)	Use to change the mode or to increase the set value.	
6	SET button	Use this button to set the value or the set mode.	
7	DOWN button (▼ button)	Use to change the mode or decrease the set value.	

Instantaneous flow rate and accumulated flow rate can be selected. A flow rate of up to 999999 can be accumulated. The accumulated flow rate is reset when the power supply turns OFF.

## Unit switching

Dis	play	Instantaneous flow rate	Accumulated flow
u	- 1	L/min	L
u	.2	GPM	gal (US)

GPM = gal (US)/min

Note) The SI unit (L/min or L) is fixed for types without the display unit switching function.

## Flow rate measuring unit confirmation

This function allows to confirm the accumulated flow rate when instantaneous flow rate is selected and to confirm the instantaneous flow rate when accumulated flow rate is selected.

## Error correction

## For PF2D300/301

LED display	Contents	Solution
Eri	A current of more than 80 mA is flowing to OUT1.	Check the load and the wiring for OUT1.
ErZ	A current of more than 80 mA is flowing to OUT2.	Check the load and the wiring for OUT2.
Ery	The set data has changed for some reason.	Perform the RESET operation, and reset all the data again.
	The flow rate is over the flow rate measurement range.	Use an adjustment valve, etc. to reduce the flow rate until it is within the flow rate range.

## For PF2D200/201

LED display	Contents	Solution	
Er 1	Over current is flowing to the load of a switch output.	Shut off the power supply. After eliminating the output factor that caused the excess current, turn the power supply back on.	
ErO	Internal data error.		
Er7	Internal data error.	Please contact SMC for investigation.	
Er10	Internal data error.		
Er5	Internal data error.	Shut off the power supply and then reset the switch.	
ЕгБ	Internal data error.		
	The flow rate is over the flow rate measurement range.	Use an adjustment valve, etc. to reduce the flow rate until it is within the flow rate range.	

## Keylock

This function prevents incorrect operations such as changing the set value accidentally.


### Accumulation clearance

This is to clear the accumulated value.

## Output types


Real-time switch output, accumulated switch output, or accumulated pulse output can be selected as an output type.

#### Real-time switch output

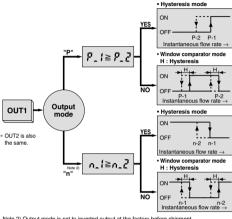


Note 2) Output mode is set to inverted output at the factory before shipment

## Accumulated switch output

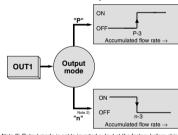

Note 2) Output mode is set to inverted output at the factory before shipment.

## Accumulated pulse output

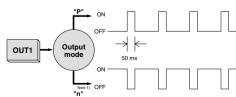

Note1) Refer to the specifications of monitor unit for the flow rate value per pulse



## **Functions**

## Copy function (PF2D200, 201 only)

Information to be copied is:

- 1) Flow rate range
- 2 Display mode
- ③ Display unit (Only available when the unit specification is nil.)
- (4) Output method
- 5 Output mode
- 6 Flow rate value

## Peak hold, Bottom hold display function

(PF2D200, 201 only)

The maximum or minimum value can be held in the case where the instantaneous flow rate display mode is selected during the initial setting. The hold value is reset when the power supply turns OFF or the hold is released.

## Channel select function (PF2D200, 201 only)

Every pushing the  $\triangle$  button, channel selection "1 $\rightarrow$ 2 $\rightarrow$ 3 $\rightarrow$ 4 $\rightarrow$ 1..." is available. The flow rate measurement of each selected channel is shown in the monitor unit.

## Channel scan function (PF2D200, 201 only)


Changes displaying the channel shown every about 2 seconds and its detected flow rate.

## Option

When only optional parts are required, order with the part numbers listed below.

#### e-con connector

Part no.	Qty.
ZS-28-CA-2	1

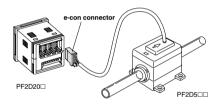


In addition to the connector shown above, those listed below (female contact) can be connected.  $% \label{eq:contact} % \label{eq:cont$ 


Manufacturer	Model
Sumitomo 3M Limited	37104-3101-000FL
Tyco Electronics Japan G.K.	1-1473562-4
OMRON Corp.	XN2A-1430

## Panel mount adapter

Pin no.	Description	Note
ZS-22-E	Panel mount adapter A, B	With mounting bracket

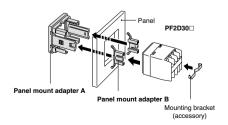



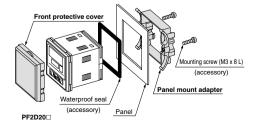



# 1 Fluoropolymer fittings mounting type (Space-saving type)

Attached insert bushings and nuts for the LQ1 series fluoropolymer fittings on double end piping.

Please contact SMC for detailed dimensions, specifications and lead times.

## **How to Order**

PF2D520 S - 13 -

Model

13

1319

1913

19

With LQ1 fitting

IN side

4

5 (With reducer)

5 (With reducer)


Refer to page 362 for details about "How to Order"

Class

OUT side

5 (With reducer)


5 (With reducer)

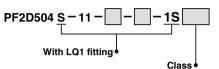

Model	IN side	OUT side
11	3	3
1113	3	4 (With reducer)
1311	<b>311</b> 4 (With reducer) 3	
13	4 (With reducer)	4 (With reducer)

### The dimensions of the body are the same as the standard model. Refer to page 366. **Dimensions**


## LQ1 fitting size: 3

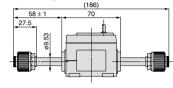

## LQ1 fitting size: 4



## LQ1 fitting size: 4

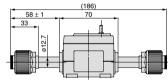


### LQ1 fitting size: 5



# PF2D540 S - 19 -With LQ1 fitting

		Class •
Model	IN side	OUT side
19	5	5
1925	5	6 (With reducer)
2519	6 (With reducer)	5
25	6 (With reducer)	6 (With reducer)

## LQ1 fitting size: 5

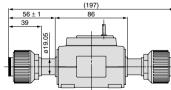

## LQ1 fitting size: 6




**SMC** 

# Made to Order Related Products




## How to Order Fittings for a Product with Nuts

How to order a flow sensor, Series PF2D5□S, etc. nut type fittings without a nut (including insert bushings) in one place.

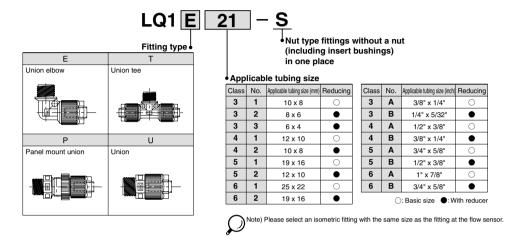

## Order example

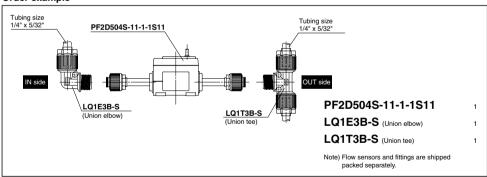

# Applicable Fluids

Compatibility checklist: Between the digital flow switch sensor material for deionized water and chemicals and the fluid selected.

F	luid	Compatibility
Acetone		0
Ammonium hydroxide		0
Isobutyl alcohol		× Note 3)
Isopropyl alcohol		O Note 1) Note 2)
Hydrochloric acid		O Note 2)
Ozone		×
Hydrogen peroxide	Concentration 50% or less 50°C or less	0
Ethyl acetate		0
Butyl acetate		0
Nitric acid (except fuming nitric acid)	Concentration 10% or less	O Note 2)
Deionized water		0
Sodium hydroxide		× Note 3)
Ultrapure water		0
Toluene		0
Hydrofluoric acid	Concentration 50% or less	0
Sulfuric acid (except fuming sulfuric acid)	Concentration 20% or less	0
Phosphoric acid	Concentration 30% or less	0

 $\bigcirc$ 

The material and fluid compatibility check list provides reference values as a guide only, therefore we do not guarantee the application to our product.

Note 1) Since static electricity may be generated, implement suitable countermeasures Note 2) Fluid may pass through. Fluid that has passed through may have an impact on components made of different materials.

Note 3) Karman vortex measurement cannot be carried out due to high viscosity.

- · Compatibility is indicated for fluid temperatures at 90°C or less.
- The product does not have an explosion proof construction. Be sure to take measures to prevent the area around the product from becoming filled with an explosive gas, when using an explosive fluid.
- · SMC is not responsible for its accuracy and any damage happened because of this data.

Table symbols : Can be used : Can be used under certain conditions × : Cannot be used



Be sure to read before handling. Refer to back page 1 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for Flow Switch Precautions.

**Design and Selection** 

# $\Delta$ Warning

Operate the switch only within the specified voltage.

Use of the switch outside of the specified voltage range can cause not only a malfunction and damage to the switch, but it can also cause electrocution and fire.

2. Do not exceed the maximum allowable load specification.

A load exceeding the maximum load specification can cause damage to the switch.

3. Do not use a load that generates a surge voltage.

Although the circuit at the output side of the switch is surge protected, damage may still occur if a voltage surge is applied repeatedly. When a load which generates a surge, such as from a relay or solenoid valve is directly driven, use a switch with a built-in surge absorbing element.

4. Be sure to verify the applicable fluid.

The switches do not have an explosion proof rating. To prevent possible fire hazard, do not use with flammable gases or fluids.

5. Monitor the internal voltage drop of the switch.

When operating below the specified voltage, it is possible that the load may be ineffective even though the pressure switch function is normal. Therefore, the formula below should be satisfied after confirming the minimum operating voltage of the load.

Supply \_ Internal voltage >

Minimum operating voltage of load

## Use the switch within the specified flow rate measurement and operating pressure.

Operating beyond the specified flow rate and operating pressure can damage the switch. Especially avoid the application of pressure through a water hammer, which is above the specification.

<Examples of pressure reduction measures>

- a) Use a device such as a water hammer relief valve to slow the valve's closing speed.
- Absorb impact pressure by using an accumulator or elastic piping material such as a rubber hose.
- c) Keep the piping length as short as possible.

# 7. Design the system so that the fluid always fills the detection passage.

Especially for vertical mounting, introduce the fluid from the bottom to the top.

# 8. Operate within the flow rate measurement range.

If operated outside of the flow rate measurement range, the Karman vortex will not be generated and normal measurement will not be possible.

### Never use inflammable fluids and/or permeable fluids.

They may cause a fire, an explosion or corrosion.

\* Refer to the MSDS (material safety data sheet) when using chemicals.

## **Design and Selection**

## **⚠Caution**

 Data from the flow switch is stored even after the power supply is off.

The input data is stored in EEPROM so that the data will not be lost after the flow switch is turned off. (The data can be rewritten for up to one million times, and stored for up to 20 years.)

2. Accumulated flow rate is reset when it is turned OFF.

### Mounting

# **∆**Warning

1. Monitor the flow direction of the fluid.

Install and connect piping so that fluid flows in the direction of the arrow indicated on the body.

- Remove dirt and dust from inside of the piping by means of air blow, before attaching to the switch.
- 3. Do not drop or bump.

Do not drop, bump, or apply excessive impacts (490 m/s²) while handling. Although the external body of a switch (switch case) may not be damaged, the switch inside could be damaged and cause a malfunction.

4. Hold the body of the switch when handling.

The tensile strength of the cord is 49N and applying a greater pulling force than this can cause a malfunction. When handling, hold the body of the switch.

Do not use until you can verify that equipment can operate properly.

Following mounting, repair, or retrofit, verify correct mounting by conducting suitable function and leakage tests after piping and power connections have been made.

- Never mount a switch in a place that will be used as a step stool during piping.
- Be sure to allow straight pipe length that is minimum 8 times the port size upstream and downstream of the switch piping.

When abruptly reducing the size of piping or when there is a restriction such as a valve on the inlet side, the flow velocity distribution in the piping changes and makes accurate measurement impossible. Therefore, flow restriction measures such as these should be implemented on the outlet side of the switch

Also, leaving the outlet side open or bringing about excessive flow volume will increase the risk of cavitation and may make accurate measurement impossible. Increasing the fluid pressure is one means of reducing cavitation. Try a procedure such as mounting a throttle on the outlet side of the switch. Check to make sure there is no malfunction before using.

## **△** Caution

 When the PF2D5 series and the high-purity fluoropolymer fittings LQ series are individually purchased, they cannot be assembled with the jigs for the LQ series. In that case both of them have to be returned to us and shipped again after assembled.



Be sure to read before handling. Refer to back page 1 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for Flow Switch Precautions.

## Wiring

# $\Delta$ Warning

1. Verify the color and the terminal number when wiring.

Incorrect wiring can cause the switch to be damaged and malfunction. Verify the color and the terminal number in the operation manual when wiring.

2. Avoid repeatedly bending or stretching of the lead wire.

Repeatedly applying bending stress or stretching force to the lead wire will cause it to break.

3. Confirm proper insulation of wiring.

Make sure that there is no faulty wiring insulation (contact with other circuits, ground fault, improper insulation between terminals, etc.). Damage may occur due to excess current flow into a switch.

 Do not wire in conjunction with power lines or high voltage lines.

Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Control circuits including switches may malfunction due to noise from these other lines.

Do not allow loads to short circuit.

Although a switch indicate excess current error if a load is short circuited, all incorrect wiring connections such as power supply polarity cannot be protected. Take precautions to avoid incorrect wiring.

## Usage

# **△**Warning

 When using a switch for high temperature fluid, the switch itself also becomes hot due to the high temperature fluid. Avoid touching the switch directly as this may cause a burn.

## **Operating Environment**

# **∆**Warning

Never use in the presence of explosive gases.

The switches do not have an explosion proof rating. Never use in the presence of an explosive gas as this may cause a serious explosion.

- Mount the switch in a location where there is no vibration (Monitor: greater than 98 m/s², Sensor: 4.9 m/s² or less), or no impact greater than 490 m/s².
- Do not use in an area where surges are generated.

When there are units that generate a large amount of surge in the area around a pressure switch, (e.g., solenoid type lifters, high frequency induction furnaces, motors, etc.) this may cause deterioration or damage to the switch's internal circuitry. Avoid sources of surge generation and crossed lines.

Switches are not equipped with surge protection against lightning.

The flow switches are CE compliant; however, they are not equipped with surge protection against lightning. Lightning surge protection measures should be applied directly to system components as necessary.

Avoid using the switch in an environment where the likelihood of splashing or spraying of liquids exists.

The switches are dustproof and splashproof; however, avoid using in an environment where the likelihood of heavy splashing or spraying of water and/or oil exist. Since the monitor unit of the remote type switches featured here is not dust or splash proof, the use in an environment where water and/or oil splashing or spraying exists must be avoided.

### Maintenance

# **△**Warning

1. Perform periodical inspections to ensure proper operation of the switch.

Unexpected malfunctions may cause a possible danger.

2. Take precautions when using the switch for an interlock circuit.

When a pressure switch is used for the interlock circuit, devise a multiple interlock system to prevent trouble or malfunction. Verify the operation of the switch and the interlock function on a regular basis.

- Do not disassemble or perform any conversion work on flow switches.
- 4. The following should be observed during regular maintenance to avoid damage and loss due to chemicals.
  - 1) Do not touch the remaining chemicals in piping and/or digital flow switch.
  - Check the name and the nature of chemicals used and treat them accordingly.





Be sure to read before handling. Refer to back page 1 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for Flow Switch Precautions.

Measured Fluid

# **△**Warning

1. Check regulators and flow adjustment valves before introducing the fluid.

If pressure or flow rate beyond the specified range are applied to the switch, the sensor unit may be damaged.

Install a filter on the inlet side when there is a possibility of condensation and foreign matter being mixed with the fluid.

If foreign matter adheres to the switch's vortex generator or vortex detector, accurate measurement will no longer be possible

Others

# **∆**Warning

- After the power is turned on, the switch's output remains off while a message is displayed. Therefore, start the measurement after a value is displayed.
- 2. Perform settings after stopping control systems.

When the switch's initial setting and flow rate setting are performed, output maintains the condition prior to the settings. Output turns OFF when the switch's initial setting and flow rate setting are performed.

## Set Flow Rate Range and Rated Flow Range


## 

## Set the flow rate within the rated flow range.

The set flow rate range is the range of flow rate that can be set on the controller side.

The rated flow range is the range that satisfies the sensor's specifications (accuracy, linearity etc.).

It is possible to set a value outside off the rated flow range, however, the specification is not be guaranteed.

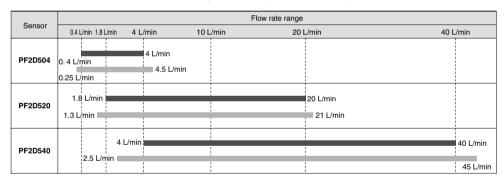

Rated flow range of sensor

Set flow rate range of sensor



Be sure to read before handling. Refer to back page 1 for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for Flow Switch Precautions.

## ■ 4-channel Flow Monitor

Handling

# **⚠** Warning

- Do not drop, bump, or apply excessive impacts (980 m/s²) while handling. Although the body of the flow monitor case may not be damaged, the inside of the flow monitor could be damaged and lead to a malfunction.
- 2. The tensile strength of the power supply/output connection cable is 50 N and the sensor lead wire with a connector is 25 N. Applying a greater pulling force than the applicable specified tensile strength to either of these components can lead to a malfunction. When handling, hold the body of the controller.

#### Connection

# **⚠** Warning

- Incorrect wiring can damage the switch and cause a malfunction or erroneous switch output. Connections should be done while the power is turned off.
- Do not attempt to insert or pull the flow rate sensor or its connector when the power is on. Switch output may malfunction.
- Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- If a commercial switching power supply is used, make sure that the F.G. terminal is grounded.

## **Operating Environment**

# **⚠** Warning

- Our 4-channel flow monitor is CE marked, however it is not equipped with surge protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.
- Our 4-channel flow monitor does not have an explosion proof rating. Never use pressure sensors in the presence of inflammable or explosive gases.
- Enclosure "IP65" applies only to the front face of the panel when mounting. Do not use in an environment where oil splashing or spraying are anticipated.


## Mounting

# **∧** Caution

The front face of the panel mount conforms to IP65, however there is a possibility of liquid infiltration if the panel mount adapter is not installed securely and properly. Securely fix the adapter with screws as shown below.

### Front protective cover + Panel mount adapter

Tighten screws 1/4 to 1/2 turn after the heads are flush with the panel.

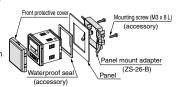


## Wiring

# **↑** Caution


- 1. Connecting sensor cable and connector (ZS-28-CA-□)
- · Cut the sensor cable as shown below.
- Insert each lead wire into the corresponding connector number by following the chart provided below.

20 mm or more	Connector no.	Cable wire color
	1	Brown (DC+)
	2	Not used
	3	Blue (DC-)
	1	White (IN: 1 to 5 V)

- Make sure that the numbers on the connector and the wire colors match. After verifying that the wires are fully inserted, temporarily hold A down by hand.
- · Using pliers, press the center of A straight down.
- Note that that connector cannot be taken apart for reuse once it is crimped. Use a new sensor connector if wiring or cable insertion is done incorrectly.

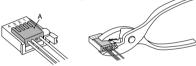

- 2. Inserting/Detaching of sensor connector, power supply/output connector
- Insert each connector straightforwardly until it clicks and locks onto the body.
- To remove the connector, pull it straight out while pushing the lever with your thumb.

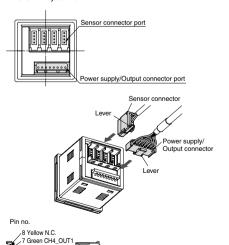

6 Red CH3\_OUT1

-5 Gray CH2\_OUT1

4 White N.C. 3 Black CH1 OUT1

2 Blue DC (-) 1 Brown DC (+) 2 m