Separate Controller

Ionizer / Slim Bar Type





Powerfully eliminates static electricity from highly charged workpieces

Pulse AC type, High density emitter arrangement (6 times the number of emitters*1)

Ideal for removing static electricity from films, resins, etc.

*1 Compared to the existing model





10 mm



Height 23 mm x Width 20 mm










IZT44/45

Powerful static elimination

Pulse AC type, High density emitter arrangement (6 times the number of emitters*1)

The amount of ion generation is large in the shaded areas.


*1 Compared to the existing model

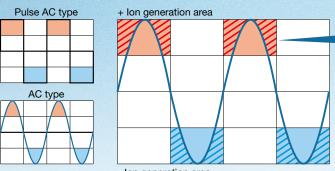

- Ion generation area


High density emitter arrangement

	Pitch [mm]	Number of emitters
New IZT44/45	10	6
IZT40/41	60	1

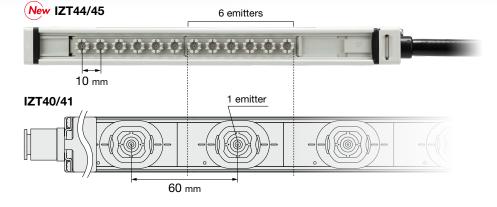


High speed static elimination

Ion generation frequency: 30 Hz, Without air

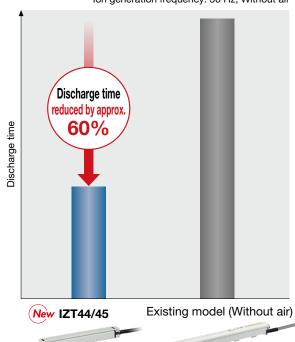

Powerful static elimination is possible without air supply.


Prevents workpiece from being blown away

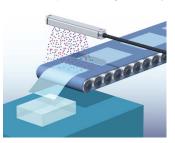

Prevents heat sealer temperature deterioration



Prevents dust from blowing up

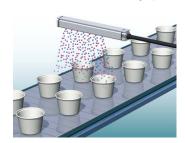












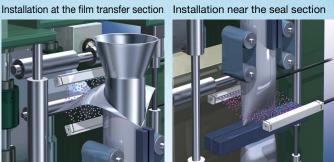

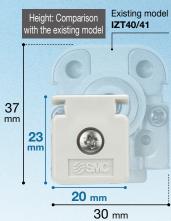




2 ionizer bars can be connected to one high voltage power supply.

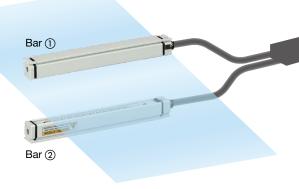


Improved maintainability

• Clean all the emitters with a dedicated cleaning kit.

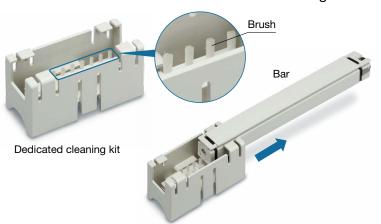

• The bar can be easily replaced. p. 4

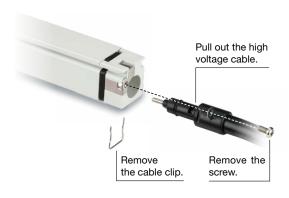



2 types of controllers are available.

Integrated High voltage power supply IZT44 Series

Simple operation


- Ready to use by simply turning on the power supply.
- Space-saving installation
- Error detection indication and output signal



Separate High voltage power supply IZT45 Series


Supports various sensing function.

- Flexible layout by the separation of the controller and the high voltage power supply module
- 4 high voltage power supply modules can be connected

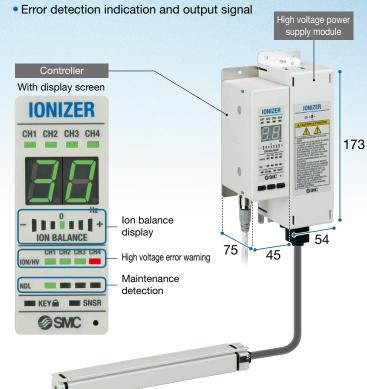

Up to 4 high voltage power supply modules can be connected to one controller.




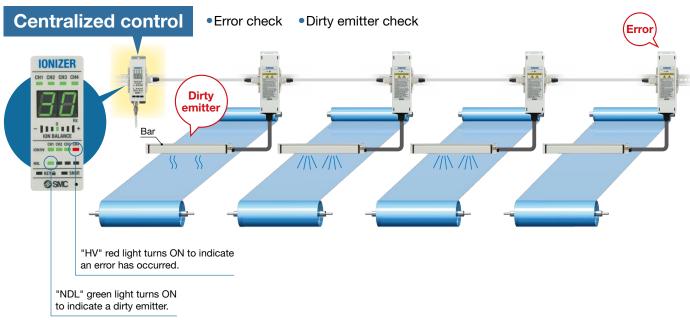



Flexible layout possible with various module connection methods




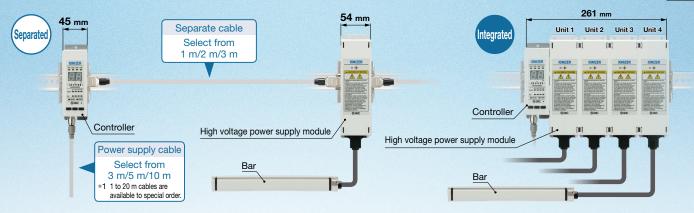


Controller to Bar maximum installation distance: 15 m



Can be installed through gaps between equipment

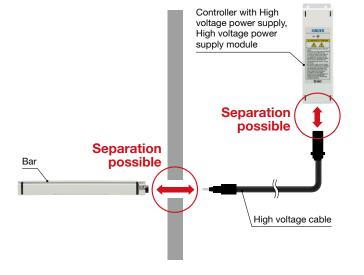


Improved installation, replacement, and maintenance in narrow spaces

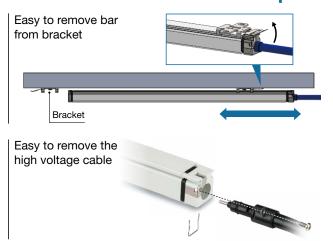

Related Products


■ Electrostatic Sensor/IZD10 Series

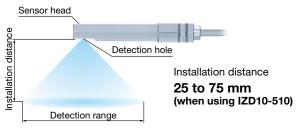

Installation distance and detection range

Installation distance [mm]	25	30	40	50	60	70	75
Detection range [mm]	100	120	150	180	205	225	235

■ Electrostatic Sensor Monitor/IZE11 Series

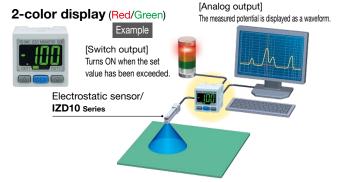



Separate Controller Ionizer / Slim Bar Type IZT44/45 Series

<functions></functions>	IZT44	IZT45
Applied voltage method	Pulse AC, DC (either positive or negative)	Pulse AC, DC (either positive or negative)
Auto balance	_	•
Input/Output	Output only)	•
lon balance display	_	•
High voltage error detection	•	•
Maintenance detection	_	•
lon generation stop signal	_	•
Output check*1	•	•
NPN/PNP switch output	(Wiring)	(Controller operation)

^{*1} The function which provides an output signal arbitrarily in normal operation (For wiring confirmation)

<Accessories, Optional Parts>

Bar bracket p. 12				•	•
DIN rail mounting bracket for Controller and High		IZT44 For volta	Controller with High ige power supply	•	_
voltage power s module p. 12	шрріу	IZT45 For Controller	For High voltage power supply module	-	•
Power supply	For IZT44 p. 12	4		•	_
cable	For IZT45	5		-	•
AC adapter			For IZT44	•	_
p. 12			For IZT45	-	•
Separate cable				-	•
High voltage cal	ole assembly			•	•
Branch cable a	ssembly	K	59	•	•
High voltage cable holder p. 12	Straight	Elbow		•	•
Cleaning kit p. 12		The state of the s		•	•


Separate Controller Ionizer / Slim Bar Type IZT44/45 Series



Application Examples

For the film conveyer

· Prevents dust adhesion · Prevents film winding defects

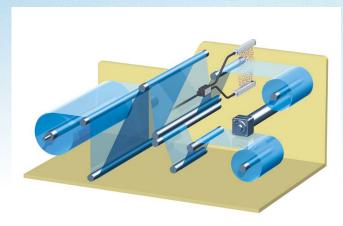

For the PTP / Blister packaging machine

· Prevents tablets from popping out




For the label pasting machine

· Prevents dust adhesion · Prevents incorrect label pasting position




For the film cutting

 \cdot Prevents bag sticking and scattering $\;\;\cdot$ Prevents operator discomfort

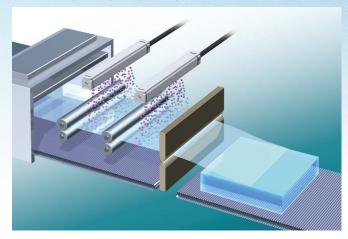


For the static neutralization of cups

· Prevents dust adhesion

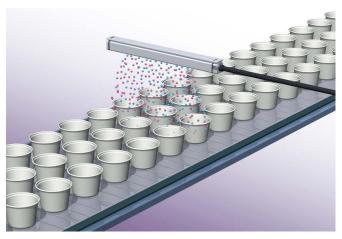

For the rotary printing press

· Prevents poor winding of printed materials

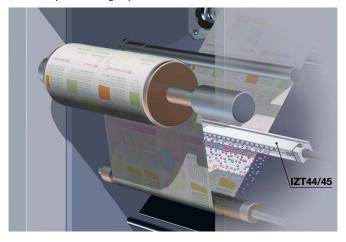

CONTENTS

Separate Controller Ionizer / Slim Bar Type IZT44/45 Series





Separate Controller

Ionizer / Slim Bar Type IZT44/45 Series

Technical Datap	ວ. 8
How to Order	
Bar + Controller with High voltage power supplyp	o. 9
Bar + High voltage power supply module + Controllerp	o. 9
For Individual Partsp	o. 10
(Bar/Controller with High voltage power supply/Controller/High voltage power supply module)	
Specificationsp	o. 11
Accessories (for Individual Parts)p	o. 12
Accessories Sold Separatelyp	o. 12
Maintenance Partsp	o. 12
Wiring Circuitp	o. 13
Dimensionsp	o. 14
Compatibility with the Existing Productsp	o. 19

⚠ IZT44/45 Series/Precautions


Be sure to read this before handling the products. For the safety instructions, refer to the "Handling Precautions for I SMC Products" and the "Operation Manual" found on the SMC website.

IZT44/45 Series Technical Data


Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

(1) Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)

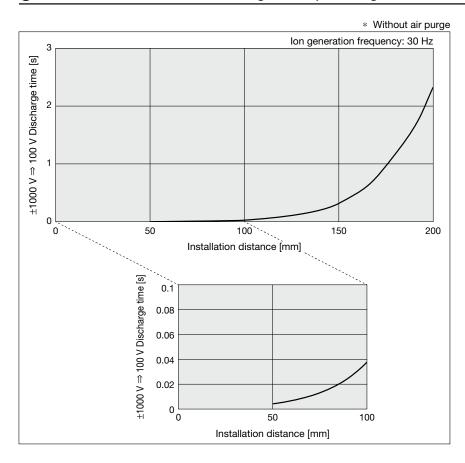


2 Change in Electrostatic Charge during Static Neutralization

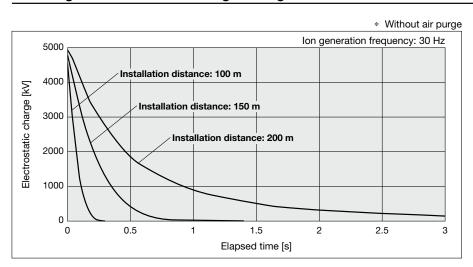



How to Order

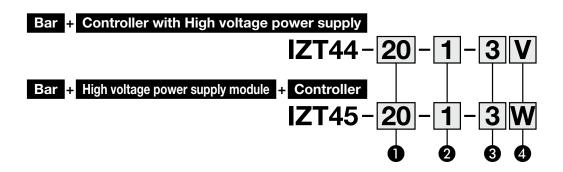

Bar length

Symbol	Bar length [mm]	Symbol	Bar length [mm]
20	200	56	560
26	260	62	620
32	320	68	680
38	380	74	740
44	440	92	920
50	500	128	1280

 The number of bar brackets included will vary depending on the bar length (see the table below).

Number of included bar brackets

Bar length [mm]	End bracket	Intermediate bracket
200 to 620	0	None
680 to 1280	2	1

3 Power supply cable length

Symbol	Cable length [m]	
3	3	
5	5	
10	10	
N	None	

- * The power supply cables included with IZT44 and IZT45 are different.
- When using an AC adapter, select "N" and then select the AC adapter from the items sold separately.

2 High voltage cable length

Symbol	Cable length [m]	
1	1	
2	2	
3	3	

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders

Symbol	Straight	Elbow
1	1	1
2	2	1
3	3	1




4 DIN rail mounting bracket

For IZT4	For IZT44 Controller with High voltage power supply			
Symbol	ymbol For Controller			
Nil	None			
V	V Included			

For IZT45 Controller, For High voltage power supply module

Symbol	mbol For Controller	For High voltage
-,		power supply module
Nil	None	None
U	Included	Included
W	Included	None
Υ	None	Included

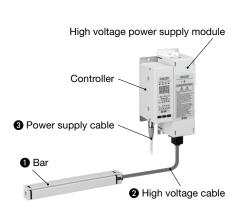

IZT45




For Individual Parts

How to Order

Individual Parts Combinations

Bar / IZTB44		High voltage power supply module /	Controller / IZTC	
	Dai / IZ I D44	IZTP41-L	44 (with High voltage power supply)	45
IZT44	•		•	
IZT45	•	•		•





Bar length

Symbol	Bar length [mm]	Symbol	Bar length [mm]
20	200	56	560
26	260	62	620
32	320	68	680
38	380	74	740
44	440	92	920
50	500	128	1280

2 High voltage cable length

Symbol	Cable length [m]
1	1
2	2
3	3
N	None

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

3 Bar bracket

Symbol	For Bar	
Nil	None	
В	Included	

The number of bar brackets included will vary depending on the bar length (see the table below).


Number of included high voltage cable holders					
Symbol	Straight	Elbow			
1	1	1			
2	2	1			
3	3	1			

* Number of included brackets

Bar length	End bracket	Intermediate bracket
200 to 620	0	None
680 to 1280	2	1

Controller with High voltage power supply









Power supply cable length

Symbol	Cable length [m]	
3 3		
5	5	
10 10		
N	N None	


The power supply cables included with IZTC44 and IZTC45 are different.


2 DIN rail mounting bracket for IZT44 Controller


	101 IZ1 TT OUTLIONE		
	Symbol	For Controller	
	Nil	None	
	V	Included	

3 DIN rail mounting bracket for IZT45 Controller

	101 121 10 00111101101		
	Symbol	For Controller	
	Nil	None	
	W	Included	







- capping mounts		
Symbol	For High voltage power supply module	
Nil	None	
Υ	Included	





IZT44/45 Series

Specifications

Ionizer model		IZT44	IZT45	
Ion generation method		Corona dis	charge type	
Method of applying voltage		AC, DC*1		
Applied voltage		±70	00 V	
Current consumption		0.5 A or less	0.6 A or less (+0.5 A or less per ionizer when connected)	
Power supply v	oltage	24 VDC	C ±10%	
Switch input	NPN specification*2	-	Voltage range: 5 VDC or less Current consumption: 5 mA or less	
Switch input	PNP specification*2	_	Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less	
Switch output (Open collector)	NPN specification*2	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	
(Open collector)	PNP specification*2	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)	
Function		High voltage abnormality detection (lon generation stops when an abnormality is detected.), Output check	Auto balance, Maintenance detection, High voltage abnormality detection (lon generation stops when an abnormality is detected.), lon generation stop, and Output check	
Effective static	neutralization distance	50 to 200 mm		
Ambient temperature	Controller, High voltage power supply module	0 to 40°C		
temperature	Bar	0 to 50°C		
Ambient humid	lity	35 to 80%RH (No condensation)		
	Controller	Cover: ABS, Aluminum	Cover: ABS, Aluminum Switch: Silicone rubber	
Material	High voltage power supply module		Cover: ABS, Aluminum	
	Bar	Cover: ABS, PBT, Emitter: Tungsten High voltage cable: Silicone rubber, PVC		
	Controller	IDOO	IP20	
IP enclosure	High voltage power supply module	IP20	IP20	
	Bar	IP	240	
Standards		CE (EMC directive, RoHS directive), UKCA		
	la av avada ta DC	, ,	• • • • • • • • • • • • • • • • • • • •	

weignt [g			
	Controller	High voltage power supply module	
IZT44	44	10	
IZT45	220	690	

													<u>[9]</u>
Е	Bar length [mm]	200	260	320	380	440	500	560	620	680	740	920	1280
IZT44	High voltage cable (1 m)	250	275	305	330	360	385	415	440	470	495	575	740
IZT45	High voltage cable (2 m)	365	395	420	450	475	500	530	555	585	610	690	855
(Common for bars)	High voltage cable (3 m)	480	510	535	565	590	620	645	670	700	725	810	970

AC Adapter (Sold Separately)


Model IZT44-CG1, IZT44-CG2, IZT45-CG1, IZT45-CG2 Input voltage*1 100 to 240 VAC, 50/60 Hz Output current 1.9 A Ambient temperature 0 to 40°C Ambient humidity 35 to 65%RH (No condensation) Weight 365 g (IZT4□-CG1), 200 g (IZT4□-CG2)	to reaptor (ooia coparatory)				
Output current 1.9 A Ambient temperature 0 to 40°C Ambient humidity 35 to 65%RH (No condensation)	Model	IZT44-CG1, IZT44-CG2, IZT45-CG1, IZT45-CG2			
Ambient temperature 0 to 40°C Ambient humidity 35 to 65%RH (No condensation)	Input voltage*1	100 to 240 VAC, 50/60 Hz			
Ambient humidity 35 to 65%RH (No condensation)	Output current	1.9 A			
, ,	Ambient temperature	0 to 40°C			
Weight 365 g (IZT4□-CG1) 200 g (IZT4□-CG2)	Ambient humidity	35 to 65%RH (No condensation)			
1101gii. 1001 g (1214	Weight	365 g (IZT4□-CG1), 200 g (IZT4□-CG2)			
Standards/Directive CE/UKCA, UL, CSA	Standards/Directive	CE/UKCA, UL, CSA			

^{*1} The included AC cable is for use in Japan only (Rated voltage 125 V, Plug JIS8303, Inlet IEC60320-C13).



^{*1} Apply cathode or anode to DC.
*2 For the IZT44, NPN or PNP can be selected by wiring. For the IZT45, NPN or PNP can be selected by controller operation.


Accessories (for Individual Parts)

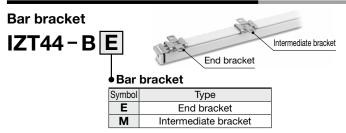


DIN rail mounting bracket for IZT44 Controller with High voltage power supply

IZT44 - B1

DIN rail mounting bracket for IZT45 Controller and High voltage power supply module

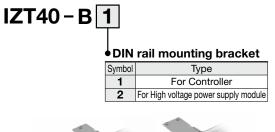



Power supply cable IZT44-CP3

IZT45-CP 3

Power supply cable for IZT44



Socket connector pin assignment A-coded (Normal key)

Power supply cable for IZT45




Socket connector pin assignment A-coded (Normal key)



Power supply cable length						
Symbol	Cable length [m]					
3	3					
5	5					
10	10					

High voltage cable holder

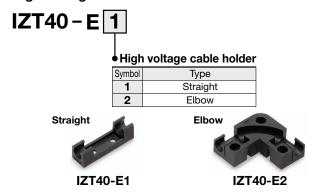

Accessories Sold Separately


Branch cable

IZT44 - A001



* Use in combination with the IZTB44-□-N-□.

High voltage cable assembly





High voltage cable length

Symbol	Cable length [n	
1	1	
2	2	
3	3	

AC adapter

IZT44 - CG 1

IZT45-CG 1



AC cord selection

Symbol	Type
1	With AC cable
2	Without AC cable

- The included AC cable is for use in Japan only (Rated voltage 125 V, Plug JIS C 8303, Inlet IEC 60320-C6)
- The external input/output function cannot be used when an AC adapter is being used.

3

Separate cable (For IZT45)

IZT40-CF 1



●Separate cable length						
Symbol Cable length [m]						
1	1					
2	2					

3

Maintenance Parts


Cleaning kit


IZT44 - M3





IZT44/45 Series

Wiring Circuit/IZT44, IZT45

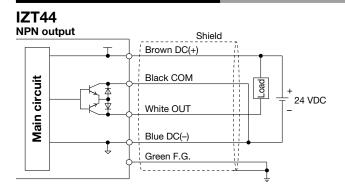


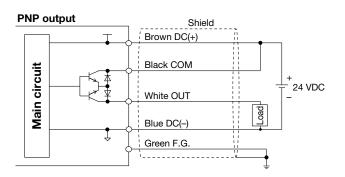

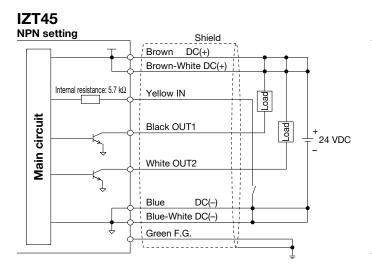

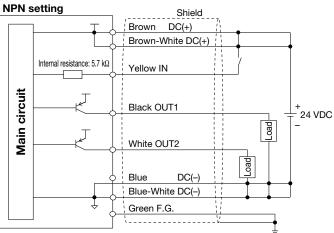

Separate Controller Ionizer / Slim Bar Type IZT44/45 Series

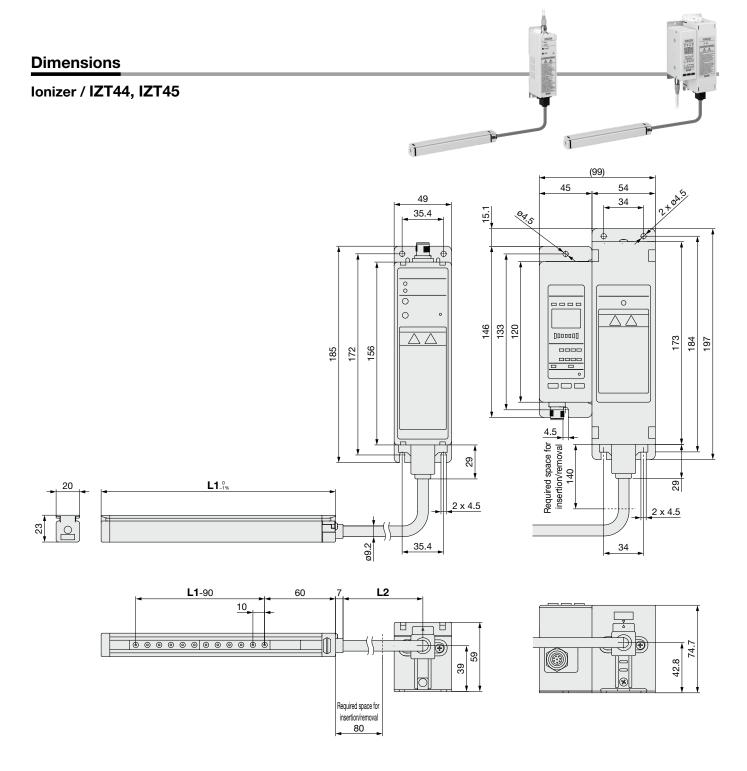

Bar Length L1

Dai Echigai Ei					
Model	L1 _{-1%} [mm]				
IZT□-20	200				
IZT□-26	260				
IZT□-32	320				
IZT□-38	380				
IZT□-44	440				
IZT□-50	500				
IZT□-56	560				
IZT□-62	620				
IZT□-68	680				
IZT□-74	740				
IZT□-92	920				
IZT□-128	1280				

High Voltage Cable Length L2

Model	L2 [mm]
IZT□-□-1	1
IZT□-□-2	2
IZT□-□-3	3

IZT44 Ion Generation Frequency

2144 Ion Generation Frequency				
Switch no.	Frequency [Hz]			
0	1			
1	3			
2	5			
3	8			
4	10			
5	15			
6	20			
7	30			
8	DC +			
9	DC -			

IZT45 Ion Generation Frequency

Frequency display	Frequency [Hz]
1	1
3	3
5	5
8	8
1 0	10
1 5	15
2 0	20
3 0	30
d P	DC+
d n	DC-



IZT44/45 Series


Dimensions

End bracket / IZT44-BE Intermediate bracket / IZT44-BM

End bracket


Intermediate bracket


DIN rail mounting bracket for IZTC44 / IZT44-B1

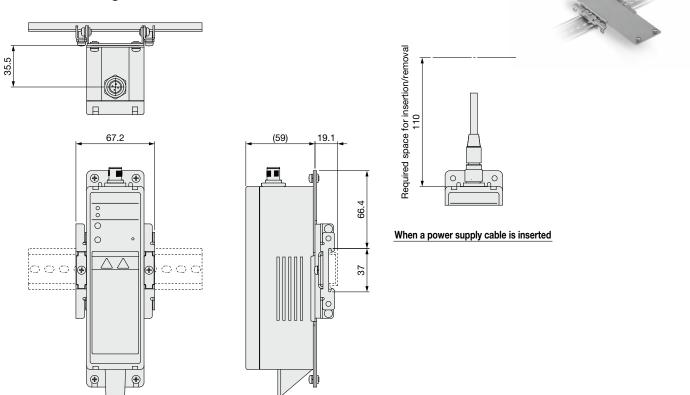


Dimensions

DIN rail mounting bracket for IZTC45 / IZT40-B1

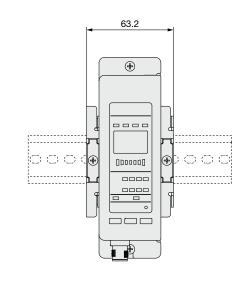


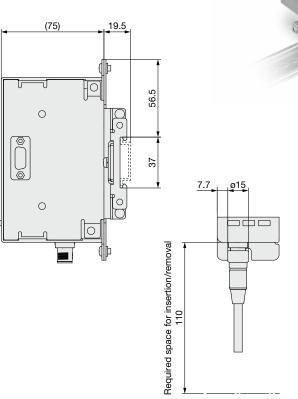


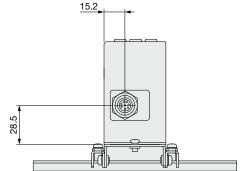

When a power supply cable is inserted

DIN rail mounting bracket for IZTP4□(-L) (IZT40-B2)

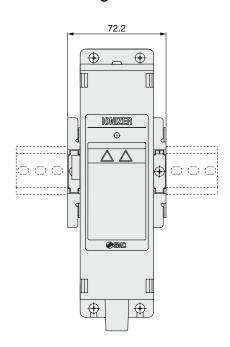

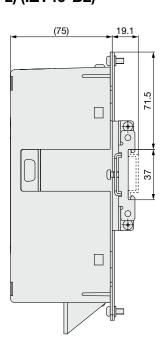




IZT44/45 Series

Dimensions


Power supply cable / IZT44-CP□



Power supply cable length L

Model	L [mm]
IZT44-CP3	3000
IZT44-CP5	5000
IZT44-CP10	10000


Power supply cable / IZT45-CP□




Power supply cable length L

Model	L [mm]
IZT45-CP3	3000
IZT45-CP5	5000
IZT45-CP10	10000

Branch cable / IZT44-A001



Separate cable / IZT40-CF□




Cable Length L4

53.7


Oable Leligui LT					
Model	L4 [mm]				
IZT40-CF1	1000				
IZT40-CF2	2000				
IZT40-CF3	3000				

When a separate cable is used

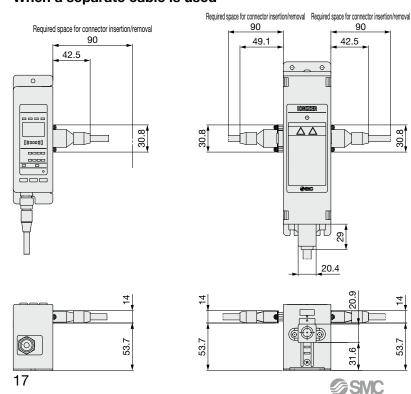


Dimensions

AC adapter: IZT44-CG¹₂, IZT45-CG¹₂

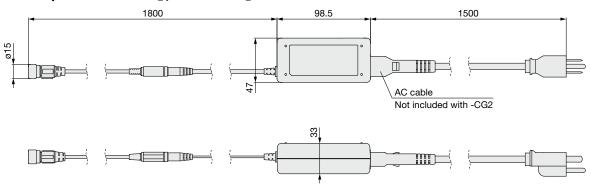


High voltage cable holder

Straight IZT40-E1

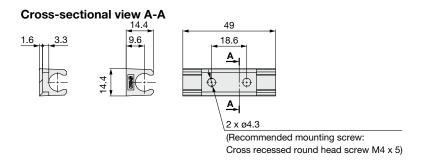

Elbow IZT40-E2

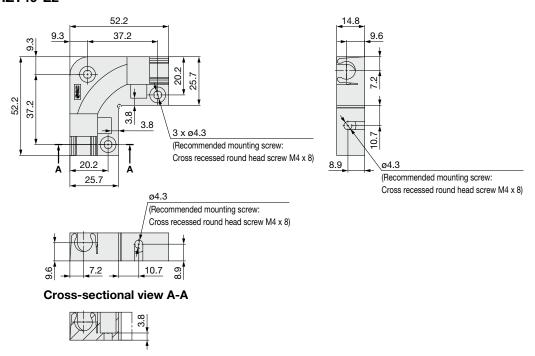

Compatibility with the Existing Products


Combinations available


	Controller	Controller			High voltage power supply module						
Ion generation unit		IZTC40	IZTC41	IZTC41-L	IZTC44	IZTC45	IZTP40	IZTP41	IZTP43	IZTP41-L	IZTP43-L
Slim bar p. 9	IZTB44	0					0				
	IZTB44		0					0			
	IZTB44			0						0	
Ú.	IZTB44				0						
	IZTB44					0				0	
Bar (with air purge)	IZTB40	0					0				
	IZTB40		0					0			
	IZTB40			0						0	
	IZTB40				0						
	IZTB40					0				0	
Nozzle	IZTN43		0						0		
ONZE	IZTN43			0							0
	IZTN43					0					0

Combination example 1 When using the slim bar IZTB44 with IO-Link



Combination example 2 When using the bar IZTB40 (with air purge) with M12 power supply cable

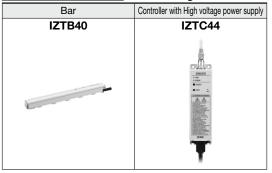

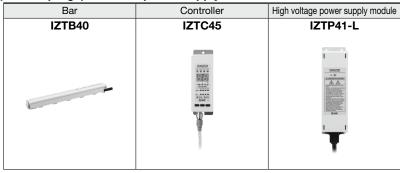

Combination example 3 When using the nozzle IZTN43 with M12 power supply cable

Combination example o	men using the nozzi	e iz i i i i i vi i z powei s
Nozzle	Controller	High voltage power supply module
IZTN43	IZTC45	IZTP43-L
and a second	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	GREEN

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

⚠ Danger: Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

⚠ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

*1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components IEC 60204-1: Safety of machinery - Electrical equipment of machines - Part 1: General requirements ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1:Robots

.⚠Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogs and operation manuals.
 - 3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

⚠ Caution

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries.

Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation