
Cylinder with Lock



New


- Suitable for intermediate stops, emergency stops and drop prevention
- 2-color indication auto switches can be mounted.
  - Small solid state type (D-M9□ series)
  - Magnetic field resistant solid state type (D-P3DW□ series)

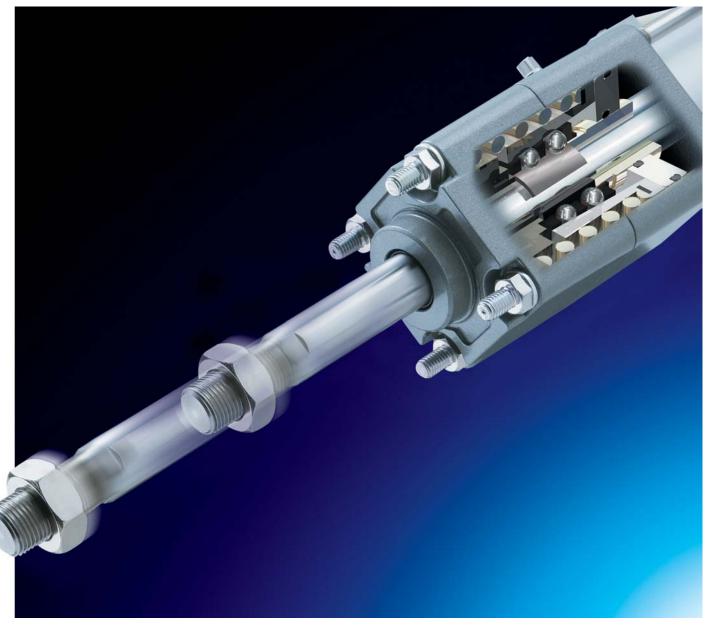

# Suitable for intermediate stops,

# Simple construction

A force magnifying mechanism is employed based on the wedge effect of the taper ring and steel balls.

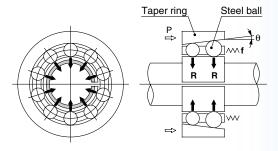

# High locking efficiency

Greater locking efficiency as well as stable locking and unlocking operation has been achieved by arranging a large number of steel ball bearings in circular rows. (Unlocking pressure of 0.25 MPa ...... 0.05 MPa lower than conventional SMC products) In addition, both alignability and stable locking force with respect to piston rod eccentricity are obtained by allowing the taper ring to float.

• High reliability and stable holding force

Outstanding durability and stable holding force are maintained by the use of a brake shoe having superior wear resistance, which has also been substantially lengthened. (Double the conventional SMC product)

Compact lock unit saves space.

The lock unit is extremely compact, without a large overhang.

Cylinder with Lock





Magnetic field resistant 2-color indication solid state auto switch D-P3DW□ series mountable





# emergency/stops and drop prevention



An equal holding force can be obtained on either reciprocating stroke of the cylinder.



# Max. piston speed: 1000 mm/s

It can be used at 50 to 1000 mm/s provided that it is within the allowable kinetic energy range.


# Manual override for unlocking

Even if the air supply is blocked or exhausted, lock release is possible. The fail safe mechanism locks again when the manual override is released.



A construction which is strong against moisture and drainage in the compressed air has been realized by separating the locking mechanism and the unlocking chamber.

#### Series Variations

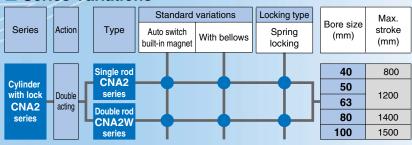

#### Applicable Auto Switches

_ AP	Applicable Auto Owitories							
Reed m	Band mounting	D-B54/B64, D-B59W, D-A3□ D-A44						
	Tie-rod mounting	D-A9□, D-A54/A64, D-A59W D-A3□C, D-A44C						
Solid state	Band mounting	D-G5□/K59, D-G5NTL D-G5□W/K59W, D-G5BAL D-G59F, D-G39/K39						
auto switch	Tie-rod mounting	D-M9□, D-M9□W, D-M9□AL D-J51, D-F5NTL, D-F59F D-G39C/K39C, D-P3DW						




# **Model Selection**

#### **Precautions on Model Selection**

# **⚠** Warning

- 1. In order that the originally selected maximum speed is not exceeded, be certain to use a speed controller to adjust the total movement distance of the load so that movement takes place in no less than the applicable movement time.
  - The movement time is the time that is necessary for the load to travel the total movement distance from the start without any intermediate stops.
- 2. In cases where the cylinder stroke and the movement distance of the load are different (double speed mechanism, etc.), use the movement distance of the load for selection purposes.

#### Example)

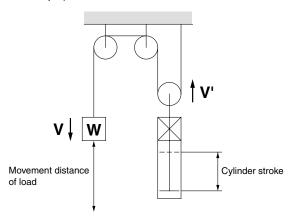

3. The following selection example and procedures are based on use at the intermediate stop (including emergency stops during the operation). However, when the cylinder is in the locked state such as drop prevention, kinetic energy does not act upon it. Under these conditions, use the load weight at the maximum speed (V) of 100 mm/s shown in Chart (5) to (7) on page 2 depending on the operating pressure and select models.

#### **Selection Example**

Load weight: m = 50 kg
 Movement distance: st = 500 mm
 Movement time: t = 2 s

• Load condition: Vertical downward = Load in direction of rod

• Operating pressure: **P** = 0.4 MPa

Step (1): From Chart (1) find the maximum movement speed of the load.

∴ Maximum speed  $V \approx 350$  mm/s


Step (2): Select Chart (6) based upon the load conditions and operating pressure, and then from the intersection of the maximum speed V=350 mm/s found in Step (1), and the load weight m=50 kg.

 $\dot{\cdot}\cdot$  ø63  $\rightarrow$  Decided the bore size CNA2  $\Box$  63 or more.

#### Step (1) Find the maximum load speed V.

Find the maximum load speed: V (mm/s) from the load movement time: t (s) and the movement distance: st (mm).

#### Chart (1)

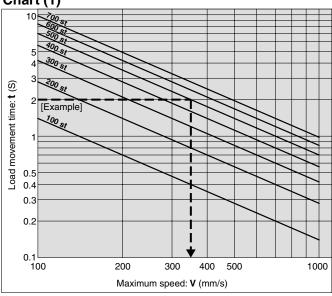


#### Step (2) Find the bore size.

Select a chart based upon the load condition and operating pressure, and then find the point of intersection for the maximum speed found in Step (1) and the load weight. Select the bore size on the line above the point of intersection.


#### Load Condition

#### **Operating Pressure**

# Load in the direction at the right angle to rod (\* Being held by a guide)

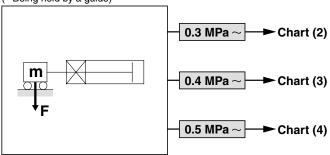


# Load in the direction of rod extension Load in the direction of rod retraction

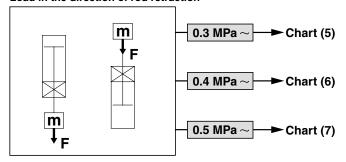






# Cylinder with Lock Series CNA2


#### **Selection Chart**

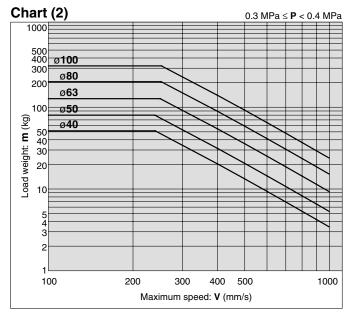


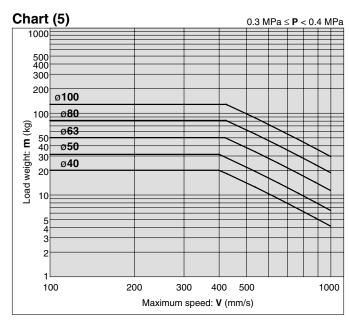

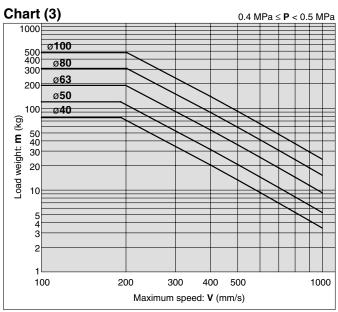

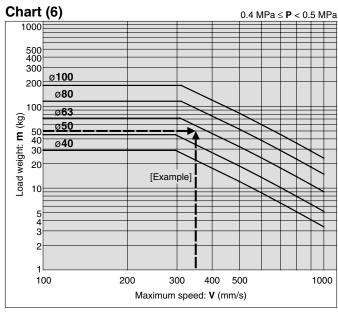


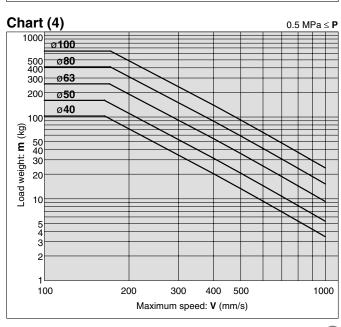

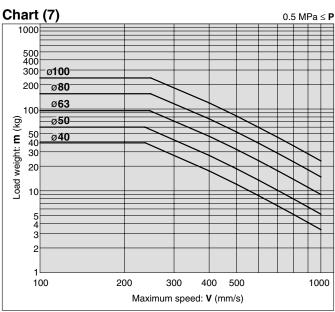

# Cylinder with Lock **Double Acting, Single Rod** Series CNA2 ø40, ø50, ø63, ø80, ø100

#### **How to Order**

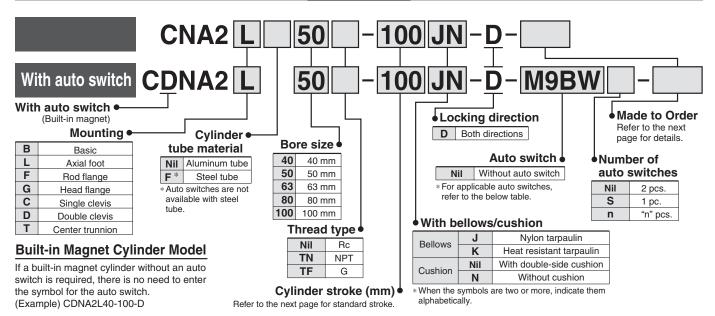

#### Applicable Auto Switches

			igh	VA (inches and	Lo	oad volta	ge	Auto swit	ch model	Lead v	vire le	ength	n (m)															
Гуре	Special function	Electrical entry	Indicatorlight	Wiring (Output)		С	AC	Tie-rod mounting	Band mounting	0.5 (Nil)	1	3 (L)	5	Pre-wired connector	Applica	ble load												
				3-wire (NPN)				M9N	_	•		•	0	0														
				3-WILE (INLIA)		5 V, 12 V		_	G59		-		0	0	IC circuit													
				3-wire (PNP)	24 V	3 V, 12 V		M9P	_				0	0	lo circuit													
		Grommet		3-wile (i ivi )	24 V				G5P		<u>  - </u>		0	0														
						12 V		M9B	_				0	0														
				2-wire		12 V			K59		<u>  — </u>	•	0	0	_													
ج					_	_	100 V, 200 V	J51	_		-			_														
¥		Terminal		3-wire (NPN)		12 V		G39C	G39		<u>  - </u>	_	<u>  - </u>	_														
S		conduit		2-wire	-	12 V		K39C	K39	-	-	_	-	_														
육				3-wire (NPN)				M9NW	_				0	0		Relay,												
Solid state auto switch			Ye	Y											Yes	3-Wile (IVI IV)		5 V, 12 V		_	G59W		-		0	0	IC circuit	PLC
tate	Diagnostic indication (2-color indication)				24 V 12 V	3 V, 12 V	5 V, 12 V	M9PW	_				0	0														
S		Grommet						_	G5PW		-			0														
ĕ∣						5 V, 12 V	12 V	12 V	12 V		M9BW	_				0	0											
Ň											_	K59W		-			0											
		Grommet		3-wire (NPN)				M9NA***	_	0	0		0	0														
	Water resistant			3-wire (PNP)				M9PA***	_	0	0		0	0														
	(2-color indication)			2-wire				M9BA***	_	0	0		0	0														
				2-WIIC		12 V								12 V	12 V	12 V	12 V	12 V	12 V		_	G5BA	-	-		0	0	
	With diagnostic output (2-color indication)			4-wire (NPN)		5 V, 12 V		F59F	G59F	•	<u>  — </u>	•	0	0	IC circuit													
	Magnetic field resistant (2-color indication)			2-wire (Non-polar)		_		P3DW	_		<u>  - </u>			0	_													
			Yes	3-wire (NPN equivalent)	_	5 V	_	A96	_		<u> </u>		<u> </u>	_	IC circuit	_												
ᇊ			163				100 V	A93	_		-		-	_	_													
¥		Grommet	No				100 V or less	A90	_		-		-	_	IC circuit	Relay,												
S			Yes				100 V, 200 V	A54	B54		-			_		PLC												
윺			No	2-wire	24 V	12 V	200 V or less	A64	B64		-		-	_														
ā		Terminal		Z-WIIE	24 V		_	A33C	A33	L -	<u> </u>	_	<u> </u>	_	_	PLC												
eec		conduit	Yes				100 V, 200 V	A34C	A34	_	-	_	-	_		Relay,												
œ		DIN terminal	] '63					100 V, 200 V	A44C	A44	_	1-	_		_		PLC											
	Diagnostic indication (2-color indication)	Grommet					_	A59W	B59W	•	-		-			1.20												

<sup>\*\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.

Consult with SMC regarding water resistant types with the above model numbers \* Lead wire length symbols: 0.5 m ······ Nil (Example) M9NW 1 m ····· M (Example) M9NWM

(Example) M9NWL 3 m .... L 5 m ..... Z

\* Solid state auto switches marked with "O" are produced upon receipt of order.

<sup>(</sup>Example) M9NWZ \* Since there are other applicable auto switches than listed, refer to page 28 for details.


<sup>\*</sup> For details about auto switches with pre-wired connector, refer to Best Pneumatics No. 3. Refer to CAT.ES20-201 catalog for the D-P3DWD.

<sup>\*</sup> The D-A9□/M9□□□/P3DW□ auto switches are shipped together, (but not assembled). (Only auto switch mounting brackets are assembled at the time of shipment for the D-A9□/M9□□□.)

# Cylinder with Lock Double Acting, Single Rod Series CNA2



#### Symbol Double acting, Single rod





#### Made to Order (For details, refer to Best Pneumatics No. 3.)

Symbol	Specifications				
<b>—</b> XA□	Change of rod end shape				
—XC3 Special port location					
—XC4 With heavy duty scraper					
—XC11	Dual stroke cylinder/Single rod				
—XC14	Change of trunnion bracket mounting position				
—XC15	Change of tie-rod length				
—XC35	With coil scraper				

Refer to pages 23 to 28 for cylinders with auto switches.

- · Minimum stroke for auto switch mounting
- Auto switch proper mounting position (detection at stroke end) and mounting height
- Operating range
- · Auto switch mounting bracket/Part no.

Minimum mountable stroke for a cylinder with auto switch(es)

### **∕**!\ Caution

1. Each switch and mounting style of cylinder has different minimum mountable stroke. Be careful especially of the center trunnion style.

(Refer to pages 25 and 26 for details.)

#### **Specifications**

Bore size (mm)	40	50	63	80	100	
Lubrication		Not re	equired (Non	ı-lube)		
Action	Double acting					
Proof pressure	1.5 MPa					
Max. operating pressure			1.0 MPa			
Min. operating pressure	0.08 MPa					
Piston speed	50 to 1000 mm/s *					
Ambient and fluid temperature			ch: –10 to 7 ch: –10 to 6	`	٥,	
Cushion			Air cushion			
Stroke length tolerance	nce Up to 250: +1.0 , 251 to 1000: +1.4 , 1001 to 1500: +1.8					
Mounting	Basic, Axial foot, Rod flange, Head flange, Single clevis, Double clevis, Center trunnion					

<sup>\*</sup> Load limits exist depending on the piston speed when locked, mounting direction and operating pressure.

#### **Lock Specifications**

Bore size (mm)	40	50	63	80	100
Locking action	Spring locking (Exhaust locking)				
Unlocking pressure	0.25 MPa or more				
Lock starting pressure	0.20 MPa or less				
Max. operating pressure	1.0 MPa				
Locking direction	Both directions				
Holding force (N)	882	1370	2160	3430	5390

<sup>\*</sup> Be sure to select cylinders in accordance with the procedures on page 1.

For cases with auto switches, refer to the table of minimum stroke for Standard Stroke auto switch mounting on pages 25 and 26.

Bore size (mm)	Standard stroke (mm) Note 1)	Long stroke (mm) Note 2)
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	800
50, 63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	1200
80, 100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700	ø80: 1400 ø100: 1500

Note 1) Intermediate strokes other than the above are produced upon receipt of order. Spacers are not used for intermediate strokes.

Note 2) Long stroke applies to the axial foot and the rod flange. When exceeding the stroke range for each bracket, determine the maximum stroke referring to the Selection Table (front matter 29 in Best Pneumatics No. 2).

#### Stopping Accuracy

(mm)

Lock type	Piston speed (mm/s)						
	100	300	500	1000			
Spring locking	±0.3	±0.6	±1.0	±2.0			

Condition: Lateral, Supply pressure P = 0.5 MPa

Load weight ..... Upper limit of allowed value

Solenoid valve for locking mounted on the unlocking port

Maximum value of stopping position dispersion from 100 measurements



## **Mounting Bracket/Part No.**

Bore size (mm)	40	50	63	80	100
Axial foot *	CA2-L04	CA2-L05	CA2-L06	CA2-L08	CA2-L10
Flange	CA2-F04	CA2-F05	CA2-F06	CA2-F08	CA2-F10
Single clevis	CA2-C04	CA2-C05	CA2-C06	CA2-C08	CA2-C10
Double clevis **	CA2-D04	CA2-D05	CA2-D06	CA2-D08	CA2-D10

<sup>\*</sup> When ordering axial foot bracket, order 2 pieces per cylinder.

#### **Bellows Material**

Symbol Bellows material		Max. ambient temperature
J Nylon tarpaulin		70°C
K	Heat resistant tarpaulin	110°C *

<sup>\*</sup> Maximum ambient temperature for bellows itself

#### **Accessories**

Mounting		Basic	Axial foot	Rod flange	Head flange	Single clevis	Double clevis	Center trunnion
Standard	Rod end nut	•	•	•	•	•	•	•
equipment	Clevis pin	_	_	_	_	_	•	_
	Single knuckle joint	•	•	•	•	•	•	•
Option	Double knuckle joint (With pin)	•	•	•	•	•	•	•
-	With bellows	•	•	•	•	•	•	•

### Weight


							(kg)
Bore size (mm)			40	50	63	80	100
	Dania	Aluminum tube	1.65	2.59	3.94	7.05	10.37
	Basic	Steel tube	1.70	2.65	3.98	7.21	10.58
	Axial foot	Aluminum tube	1.84	2.63	4.28	7.72	11.36
	Axiai ioot	Steel tube	1.89	2.67	4.32	7.88	11.57
	Flongs	Aluminum tube	2.02	2.86	4.73	8.50	12.29
Regio weight	Flange	Steel tube	2.07	2.90	4.77	8.66	12.50
Basic weight	Single clevis	Aluminum tube	1.88	2.75	4.57	8.16	12.15
		Steel tube	1.93	2.79	4.61	8.32	12.36
	Double clevis	Aluminum tube	1.92	2.84	4.73	8.45	12.67
		Steel tube	1.97	2.88	4.77	8.61	12.88
	Contar trunnian	Aluminum tube	2.10	2.94	4.83	8.75	12.77
	Center trunnion	Steel tube	2.20	3.04	5.03	9.04	13.16
Additional weight per	Maunting brookst	Aluminum tube	0.20	0.25	0.31	0.46	0.58
each 50 mm of stroke	Mounting bracket	Steel tube	0.28	0.35	0.43	0.70	0.87
Acceptant breeket	Single knuckle joint		0.23	0.26	0.26	0.60	0.83
Accessory bracket	Double knuckle joint (	With pin)	0.37	0.43	0.43	0.87	1.27

Calculation: (Example) CNA2L40-100-D



<sup>\*\*</sup> Clevis pin, flat washer and split pin are shipped together with double clevis.

#### **Construction Principle**

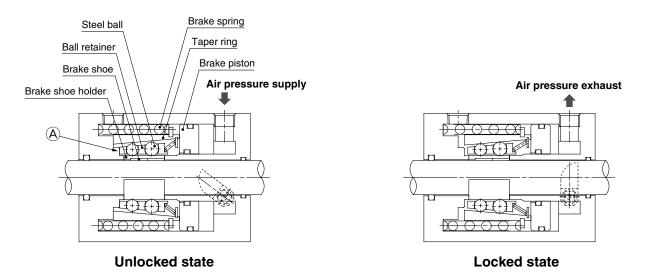


#### Spring locking (Exhaust locking)


The spring force which acts upon the taper ring is magnified by a wedge effect, and is conveyed to all of the numerous steel balls which are arranged in two circles. These act on the brake shoe holder and brake, which lock the piston rod by tightening against it with a large force.


Unlocking is accomplished when air pressure is supplied to the unlocking port. The brake piston and taper ring oppose the spring force, moving to the left side, and the ball retainer strikes the cover section A. The braking force is released as the steel balls are removed from the taper ring by the ball retainer.



#### Construction

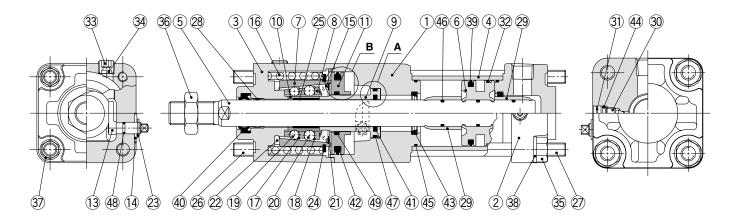





A section: ø50 to ø100



#### **Component Parts**

No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Metallic painted after hard anodized
2	Head cover	Aluminum alloy	Metallic painted
3	Cover	Aluminum alloy	Metallic painted after chromated
4	Cylinder tube	Aluminum alloy	Hard anodized
5	Piston rod	Carbon steel	Hard chrome plated
6	Piston	Aluminum alloy	Chromated
7	Taper ring	Bearing steel	Heat treated
8	Ball retainer	Special resin	
9	Piston guide	Carbon steel	Zinc chromated
10	Brake shoe holder	Special steel	Heat treated
11	Deleges wiston	Aluminum allau	Hard anodized (ø40, ø50, ø63)
11	Release piston	Aluminum alloy	Chromated (ø80, ø100)
12	Release piston bushing	Steel + Special resin	Only ø80, ø100
13	Unlocking cam	Chromium molybdenum steel	Zinc chromated
14	Washer	Rolled steel	Zinc chromated
15	Retainer pre-load spring	Stainless steel wire	
16	Brake spring	Steel wire	Zinc chromated
17	Clip A	Stainless steel	
18	Clip B	Stainless steel	
19	Steel ball A	Bearing steel	
20	Steel ball B	Bearing steel	
21	Tooth ring	Stainless steel	
22	Bumper	Urethane	
23	Type C retaining ring for unlocking cam shaft	Carbon tool steel	
24	Type C retaining ring for taper ring	Carbon tool steel	
25	Brake shoe	Special friction material	
26	Unit holding tie-rod	Carbon steel	Chromated
27	Tie-rod	Carbon steel	Zinc chromated
28	Bushing	Copper alloy	
29	Cushion ring	Aluminum alloy	Anodized
30	Cushion valve	Steel wire	Electroless nickel plated
31	Stop ring	Steel for spring	
32	Wear ring	Special resin	
33	Hexagon socket head plug	Carbon steel	Nickel plated

#### **Component Parts**

No.	Description	Material	Note
34	Element	Bronze	
35	Tie-rod nut	Rolled steel	Nickel plated
36	Rod end nut	Rolled steel	Nickel plated
37	Spring washer	Steel wire	Chromated
38	Spring washer	Steel wire	Chromated
39	Piston seal	NBR	
40	Rod seal A	NBR	
41	Rod seal B	NBR	
42	Release piston seal	NBR	
43	Cushion seal	Urethane	
44	Cushion valve seal	NBR	
45	Tube gasket	NBR	
46	Piston gasket	NBR	
47	Piston guide gasket	NBR	
48	Unlocking cam gasket	NBR	
49	O-ring	NBR	

#### Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
40	MB 40-PS	
50	MB 50-PS	
63	MB 63-PS	Including 39, 40, 43, 45.
80	MB 80-PS	
100	MB100-PS	


- \* Since the lock of the CNA2 series cannot be disassembled and is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.


  \* Seal kit includes a grease pack (ø40 and ø50: 10 g, ø63 and ø80: 20 g, ø100:
- Seal kit includes a grease pack (ø40 and ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g).
- Order with the following part number when only the grease pack is needed. Grease pack part number: GR-S-010 (10 g), GR-S-020 (20 g)



#### **Dimensions**

#### Basic (B): CNA2B

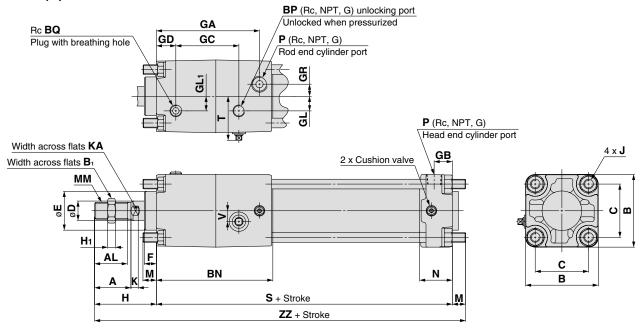

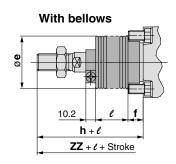


																							(mm)
re size mm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	Н	Hı	J	K
40	Up to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6
50	Up to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7
63	Up to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7
80	Up to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10
100	Up to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10


									(mm)
Bore size (mm)	KA	М	ММ	N	Р	s	т	٧	ZZ
40	14	11	M14 x 1.5	27	1/4	153	37.5	9	215
50	18	11	M18 x 1.5	30	3/8	168	44	11	237
63	18	14	M18 x 1.5	31	3/8	182	52.5	12	254
80	22	17	M22 x 1.5	37	1/2	218	59.5	15	306
100	26	17	M26 x 1.5	40	1/2	246	69.5	15	335

W	40 20 to 500 43 11.2 59 1/4 stroke 22														
			е	f	h	e	ZZ								
	40	20 to 500	43	11.2	59	1/4 stroke	223								
	50	20 to 600	52	11.2	66	1/4 stroke	245								
	63	20 to 600	52	11.2	66	1/4 stroke	262								
	80	20 to 750	65	12.5	80	1/4 stroke	315								
	100	20 to 750	65	14	81	1/4 stroke	344								

#### **Dimensions**

#### Axial foot (L): CNA2L

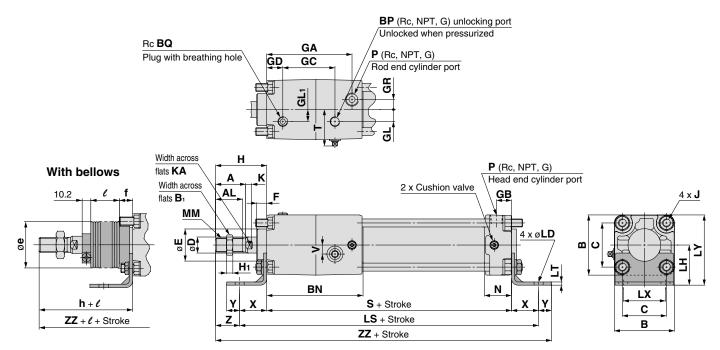

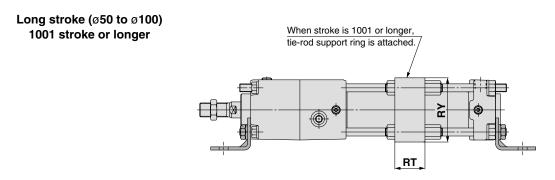


																							(mm)
Bore size (mm)	Stroke range (mm)	A	AL	В	B <sub>1</sub>	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL <sub>1</sub>	GR	Н	H <sub>1</sub>	J	K
40	Up to 800	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6
50	Up to 1200	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7
63	Up to 1200	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7
80	Up to 1400	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10
100	Up to 1500	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10

																			(mm)
Bore size (mm)	KA	LD	LH	LS	LT	LX	LY	ММ	N	P	RT	RY	s	Т	V	Х	Y	Z	ZZ
40	14	9	40	207	3.2	42	70	M14 x 1.5	27	1/4	_	_	153	37.5	9	27	13	24	244
50	18	9	45	222	3.2	50	80	M18 x 1.5	30	3/8	30	76	168	44	11	27	13	31	266
63	18	11.5	50	250	3.2	59	93	M18 x 1.5	31	3/8	40	92	182	52.5	12	34	16	24	290
80	22	13.5	65	306	4.5	76	116	M22 x 1.5	37	1/2	45	112	218	59.5	15	44	16	27	349
100	26	13.5	75	332	6.0	92	133	M26 x 1.5	40	1/2	50	136	246	69.5	15	43	17	29	378

With Be	(mm) (mm) 2 11.2 59 1/4 stroke 252														
		е	f	h	e	ZZ									
40	20 to 800	43	11.2	59	1/4 stroke	252									
50	20 to 1200	52	11.2	66	1/4 stroke	274									
63	20 to 1200	52	11.2	66	1/4 stroke	298									
80	20 to 1400	65	12.5	80	1/4 stroke	358									
100	20 to 1500	65	14	81	1/4 stroke	387									



#### **Dimensions**

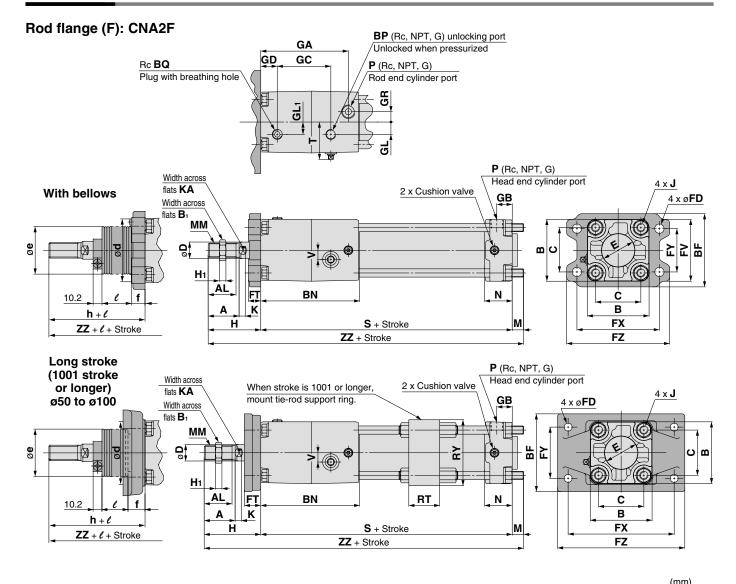

																											(111111)
Bore size (mm)	Stroke range (mm)	A	AL	В	Bı	BF	BN	ВР	BQ	С	D	E	FD	FT	FV	FX	FY	FZ	GA	GB	GC	GD	GL	GL₁	GR	Н	H <sub>1</sub>
40	Up to 800	30	27	60	22	71	96	1/8	1/8	44	16	32	9	12	60	80	42	100	85	15	50	16	12	12	10	51	8
50	Up to 1000	35	32	70	27	81	108	1/4	1/8	52	20	40	9	12	70	90	50	110	95	17	56	20	13	15	12	58	11
63	Up to 1000	35	32	86	27	101	115	1/4	1/4	64	20	40	11.5	15	86	105	59	130	102	17	65	20	18	12	15	58	11
80	Up to 1000	40	37	102	32	119	139	1/4	1/4	78	25	52	13.5	18	102	130	76	160	123	21	79.5	20	23	18	17	71	13
100	Up to 1000	40	37	116	41	133	160	1/4	1/4	92	30	52	13.5	18	116	150	92	180	144	21	93.5	22	25	20	19	72	16

											(mm)
Bore size (mm)	J	K	KA	М	ММ	N	Р	s	Т	V	ZZ
40	M8 x 1.25	6	14	11	M14 x 1.5	27	1/4	153	37.5	9	215
50	M8 x 1.25	7	18	11	M18 x 1.5	30	3/8	168	44	11	237
63	M10 x 1.25	7	18	14	M18 x 1.5	31	3/8	182	52.5	12	254
80	M12 x 1.75	10	22	17	M22 x 1.5	37	1/2	218	59.5	15	306
100	M12 x 1.75	10	26	17	M26 x 1.5	40	1/2	246	69.5	15	335

(mm)     (mm)     52     43     15     59     1/4 stroke     22       50     20 to 1000     58     52     15     66     1/4 stroke     24       63     20 to 1000     58     52     17.5     66     1/4 stroke     26														
		d*	е	f	h	e	zz							
40	20 to 800	52	43	15	59	1/4 stroke	223							
50	20 to 1000	58	52	15	66	1/4 stroke	245							
63	20 to 1000	58	52	17.5	66	1/4 stroke	262							
80	20 to 1000	80	65	21.5	80	1/4 stroke	315							
100	20 to 1000	80	65	21.5	81	1/4 stroke	344							

Long St	roke											(mm)
Bore size (mm)	Stroke range (mm)	BF	FD	FT	FX	FY	FZ	Н	М	RT	RY	ZZ
50	1001 to 1200	88	9	20	120	58	144	67	6	30	76	241
63	1001 to 1200	105	11.5	23	140	64	170	71	10	40	92	263
80	1001 to 1400	124	13.5	28	164	84	198	87	12	45	112	317
100	1001 to 1500	140	13.5	29	180	100	220	89	12	50	136	347


With L	ong Stroke l	<u>Bello</u>	ws				(mm)
Bore siz	e Stroke range (mm)	d	e*	f	h	e	ZZ
50	1001 to 1200	58	52	19	66	1/4 stroke	240
63	1001 to 1200	58	52	19	66	1/4 stroke	258
80	1001 to 1400	80	65	21	80	1/4 stroke	310
100	1001 to 1500	80	65	21	81	1/4 stroke	339


<sup>\*</sup> When machining a hole to put a bellows through for mounting, make the hole larger than the O.D. ød of the bellows mounting bracket for the standard stroke and the bellows O.D. øe for a long stroke.



#### **Dimensions**

#### Head flange (G): CNA2G

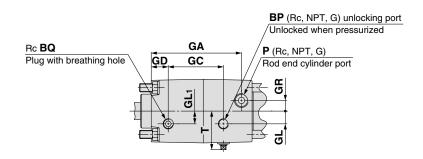

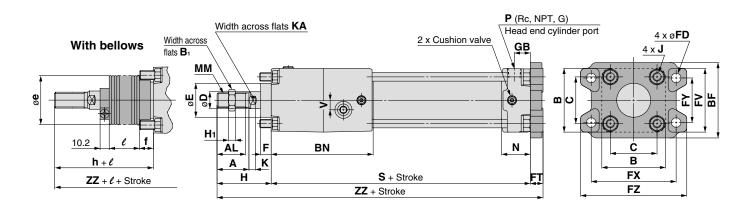


																											(mm)
Bore size (mm)	Stroke range (mm)	Α	AL	В	B <sub>1</sub>	BF	BN	ВР	BQ	C	D	Е	F	FD	FT	FV	FX	FY	FZ	GA	GB	GC	GD	GL	GL₁	GR	н
40	Up to 500	30	27	60	22	71	96	1/8	1/8	44	16	32	10	9	12	60	80	42	100	85	15	50	16	12	12	10	51
50	Up to 600	35	32	70	27	81	108	1/4	1/8	52	20	40	10	9	12	70	90	50	110	95	17	56	20	13	15	12	58
63	Up to 600	35	32	86	27	101	115	1/4	1/4	64	20	40	10	11.5	15	86	105	59	130	102	17	65	20	18	12	15	58
80	Up to 750	40	37	102	32	119	139	1/4	1/4	78	25	52	14	13.5	18	102	130	76	160	123	21	79.5	20	23	18	17	71
100	Up to 750	40	37	116	41	133	160	1/4	1/4	92	30	52	14	13.5	18	116	150	92	180	144	21	93.5	22	25	20	19	72


											(mm)
Bore size (mm)	Hı	J	K	KA	ММ	N	P	s	Т	٧	zz
40	8	M8 x 1.25	6	14	M14 x 1.5	27	1/4	153	37.5	9	216
50	11	M8 x 1.25	7	18	M18 x 1.5	30	3/8	168	44	11	238
63	11	M10 x 1.25	7	18	M18 x 1.5	31	3/8	182	52.5	12	255
80	13	M12 x 1.75	10	22	M22 x 1.5	37	1/2	218	59.5	15	307
100	16	M12 x 1.75	10	26	M26 x 1.5	40	1/2	246	69.5	15	336

With Bel	lows					(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	ZZ
40	20 to 500	43	11.2	59	1/4 stroke	224
50	20 to 600	52	11.2	66	1/4 stroke	246
63	20 to 600	52	11.2	66	1/4 stroke	263
80	20 to 750	65	12.5	80	1/4 stroke	316
100	20 to 750	65	14	81	1/4 stroke	345

#### **Dimensions**

#### Single clevis (C): CNA2C

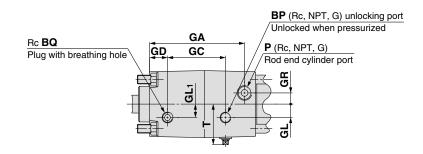

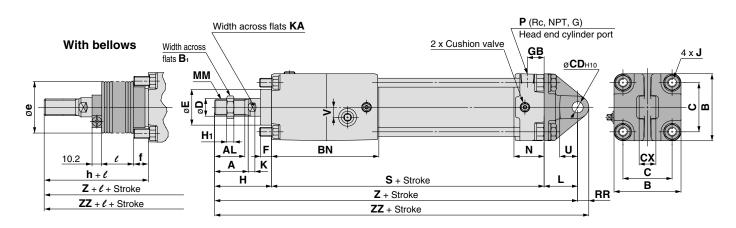


																						(mm)
Bore size (mm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	<b>CD</b> H10	сх	D	E	F	GA	GB	GC	GD	GL	GL <sub>1</sub>	GR	н
40	Up to 500	30	27	60	22	96	1/8	1/8	44	10 0 0	15 -0.1	16	32	10	85	15	50	16	12	12	10	51
50	Up to 600	35	32	70	27	108	1/4	1/8	52	12+0.070	18 -0.1	20	40	10	95	17	56	20	13	15	12	58
63	Up to 600	35	32	86	27	115	1/4	1/4	64	16 <sup>+0.070</sup>	25 -0.1	20	40	10	102	17	65	20	18	12	15	58
80	Up to 750	40	37	102	32	139	1/4	1/4	78	20 +0.084	31.5 -0.1	25	52	14	123	21	79.5	20	23	18	17	71
100	Up to 750	40	37	116	41	160	1/4	1/4	92	25 <sup>+0.084</sup>	35.5 -0.1	30	52	14	144	21	93.5	22	25	20	19	72

															(mm)
Bore size (mm)	H <sub>1</sub>	J	K	KA	L	ММ	N	Р	RR	s	т	U	٧	z	ZZ
40	8	M8 x 1.25	6	14	30	M14 x 1.5	27	1/4	10	153	37.5	16	9	234	244
50	11	M8 x 1.25	7	18	35	M18 x 1.5	30	3/8	12	168	44	19	11	261	273
63	11	M10 x 1.25	7	18	40	M18 x 1.5	31	3/8	16	182	52.5	23	12	280	296
80	13	M12 x 1.75	10	22	48	M22 x 1.5	37	1/2	20	218	59.5	28	15	337	357
100	16	M12 x 1.75	10	26	58	M26 x 1.5	40	1/2	25	246	69.5	36	15	376	401

With Bell	ows						(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	z	ZZ
40	20 to 500	43	11.2	59	1/4 stroke	242	252
50	20 to 600	52	11.2	66	1/4 stroke	269	281
63	20 to 600	52	11.2	66	1/4 stroke	288	304
80	20 to 750	65	12.5	80	1/4 stroke	346	366
100	20 to 750	65	14	81	1/4 stroke	385	410

**SMC** 

#### **Dimensions**

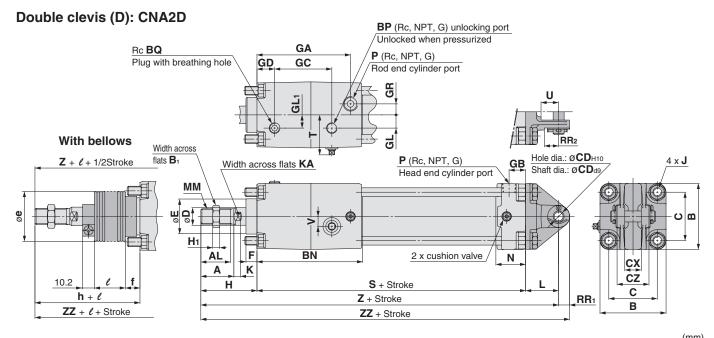


																										(111111)
Bore size (mm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	CD <sub>H10</sub>	сх	cz	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	н	Ηı	J	K
40	Up to 500	30	27	60	22	96	1/8	1/8	44	10 +0.058	15 +0.3	29.5	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6
50	Up to 600	35	32	70	27	108	1/4	1/8	52	12+0.070	18+0.3	38	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7
63	Up to 600	35	32	86	27	115	1/4	1/4	64	16+0.070	25 <sup>+0.3</sup> <sub>+0.1</sub>	49	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7
80	Up to 750	40	37	102	32	139	1/4	1/4	78	20 +0.084	31.5 +0.3	61	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10
100	Up to 750	40	37	116	41	160	1/4	1/4	92	25 <sup>+0.084</sup>	35.5 <sup>+0.3</sup> <sub>+0.1</sub>	64	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10

													(mm)
Bore size (mm)	KA	L	ММ	N	Р	RR₁	RR <sub>2</sub>	S	Т	U	٧	z	ZZ
40	14	30	M14 x 1.5	27	1/4	10	16	153	37.5	16	9	234	244
50	18	35	M18 x 1.5	30	3/8	12	19	168	44	19	11	261	273
63	18	40	M18 x 1.5	31	3/8	16	23	182	52.5	23	12	280	296
80	22	48	M22 x 1.5	37	1/2	20	28	218	59.5	28	15	337	357
100	26	58	M26 x 1.5	40	1/2	25	23.5	246	69.5	36	15	376	401

<u>With Be</u>	llows						(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	Z	ZZ
40	20 to 500	43	11.2	59	1/4 stroke	242	252
50	20 to 600	52	11.2	66	1/4 stroke	269	281
63	20 to 600	52	11.2	66	1/4 stroke	288	304
80	20 to 750	65	12.5	80	1/4 stroke	346	366
100	20 to 750	65	14	81	1/4 stroke	385	410

(mm)

#### **Double Clevis Pivot Bracket**

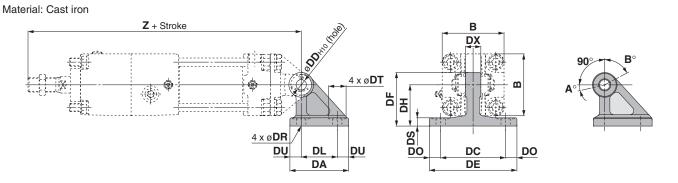

																<u>`                                    </u>
Part no.	Bore size (mm)	В	DA	DC	DD <sub>H10</sub> (hole)	DE	DF	DH	DL	DO	DR	DS	DT	DU	DX	z
CA2-B04	40	60	57	65	10+0.058	85	52	40	35	10	9	8	17	11	15	234
CA2-B05	50	70	57	65	12 +0.070	85	52	40	35	10	9	8	17	11	18	261
CA2-B06	63	85	67	80	16 <sup>+0.070</sup>	105	66	50	40	12.5	11	10	22	13.5	25	280
CA2-B08	80	102	93	100	20 +0.084	130	90	65	60	15	13.5	12	24	16.5	31.5	337
CA2-B10	100	116	93	100	25 <sup>+0.084</sup>	130	90	65	60	15	13.5	12	24	16.5	35.5	376


Rotatin	g Ar	igie	
Bore size (mm)	Α°	В°	A° + B° + 90°
40			
50			
63	12°	60°	162°
80			
100			

Note 1) There is no mention of cylinder part number. Note 2) Order it separately from cylinder.



 $<sup>\</sup>ast$  Clevis pin, flat washer and split pin are shipped together.

#### **Dimensions**

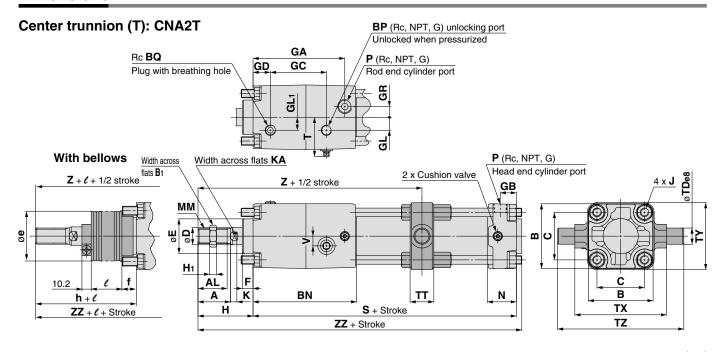


	(IIIII)																									
	e size S nm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	Н	H1	J	K	KA	ММ
	40	25 to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6	14	M14 x 1.5
	50	25 to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7	18	M18 x 1.5
	63	32 to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7	18	M18 x 1.5
	80	41 to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10	22	M22 x 1.5
1	00	45 to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10	26	M26 x 1.5


												(mm)
Bore size (mm)	N	Р	s	Т	TDe8	TT	тх	TY	TZ	V	z	ZZ
40	27	1/4	153	37.5	15 -0.032 -0.059	22	85	62	117	9	162	209
50	30	3/8	168	44	15 <sup>-0.032</sup> -0.059	22	95	74	127	11	181	232
63	31	3/8	182	52.5	18 -0.032	28	110	90	148	12	191	246
80	37	1/2	218	59.5	25 <sup>-0.040</sup> -0.073	34	140	110	192	15	231	296
100	40	1/2	246	69.5	25 <sup>-0.040</sup> -0.073	40	162	130	214	15	255	326

With B	With Bellows (mr														
Bore size (mm)	Stroke range (mm)	е	f	h	e	z	ZZ								
40	25 to 500	43	11.2	59	1/4 stroke	170	217								
50	25 to 600	52	11.2	66	1/4 stroke	189	240								
63	32 to 600	52	11.2	66	1/4 stroke	199	254								
80	41 to 750	65	12.5	80	1/4 stroke	240	305								
100	45 to 750	65	14	81	1/4 stroke	264	335								

#### **Trunnion Pivot Bracket**

Material: Cast iron

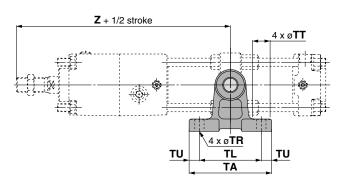

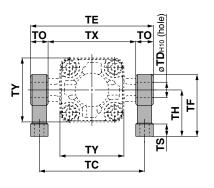

																(mm)
Part no.	Bore size (mm)	TA	тс	TD <sub>H10</sub> (hole)	TE	TF	тн	TL	то	TR	TS	TT	TU	тх	TY	z
CA2-S04	40	80	102	15 <sup>+0.070</sup>	119	60	45	60	17	9	12	17	10	85	62	162
CA2-304	50	80	112	15 +0.070	129	60	45	60	17	9	12	17	10	95	74	181
CA2-S06	63	100	130	18 0 18 0	150	73	55	70	20	11	14	22	15	110	90	191
MP C10	80	120	166	25 <sup>+0.084</sup>	192	100	75	90	26	13.5	17	24	15	140	110	231
MB-S10	100	120	188	25 <sup>+0.084</sup>	214	100	75	90	26	13.5	17	24	15	162	130	255

Note 1) There is no mention of cylinder part number.


Note 2) Order it separately from cylinder.

Note 3) Two trunnion pivot brackets are needed per one cylinder.



# **Accessory Bracket Dimensions**


## Y Type Double Knuckle Joint

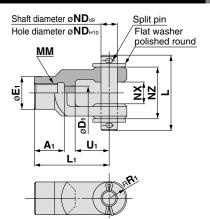

Materia	Material: Cast iron (mm)													
Part no.	Applicable bore size (mm)	<b>A</b> 1	D <sub>1</sub>	E <sub>1</sub>	L	L <sub>1</sub>	ММ	ND	NX	NZ	Rı	U₁	Split pin size	Flat washer size
Y-04D	40	22	10	24	55.5	55	M14 x 1.5	12	16+0.3	38	13	25	ø3 x 18 ℓ	Polished round 12
Y-05D	50, 63	27	14	28	55.5	60	M18 x 1.5	12	16+0.3	38	15	27	ø3 x 18ℓ	Polished round 12
Y-08D	80	37	18	36	76.5	71	M22 x 1.5	18	28+0.3	55	19	28	ø4 x 25 ℓ	Polished round 18
Y-10D	100	37	21	40	83	83	M26 x 1.5	20	30+0.3	61	21	38	ø4 x 30 ℓ	Polished round 20

<sup>\*</sup> Knuckel pin, split pin and flat washer are shipped together.


#### Clevis Pin/Knuckle Pin

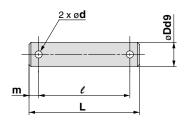

Material: C	Material: Carbon steel (mm)														
Part no.	Applicab	le bore size	Dd9	d	_	e	m	Applicable	Applicable						
r arrino.	Clevis	Knuckle		Drill through	_			split pin	flat washer						
CDP-2A	40	_	10 -0.040	3	46	38	4	ø3 x 18 ℓ	Polished round 10						
CDP-3A	50	40, 50, 63	12-0.050	3	55.5	47.5	4	ø3 x 18 ℓ	Polished round 12						
CDP-4A	63	_	16 <sup>-0.050</sup> <sub>-0.093</sub>	4	71	61	5	ø4 x 25 ℓ	Polished round 16						
CDP-5A	_	80	18-0.050	4	76.5	66.5	5	ø4 x 25 ℓ	Polished round 18						
CDP-6A	80	100	20 -0.065	4	83	73	5	ø4 x 30 ℓ	Polished round 20						
CDP-7A	100	_	25 <sup>-0.065</sup> <sub>-0.117</sub>	4	88	78	5	ø4 x 36 ℓ	Polished round 24						


<sup>\*</sup> Split pin and flat washer are attached.

#### I Type Single Knuckle Joint

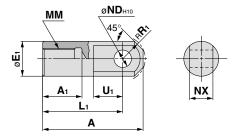

Materia	al: Sulfur	free-c	cuttir	ng st	teel				(	mm)
Part no.	Applicable bore size (mm)	A	<b>A</b> 1	E <sub>1</sub>	Lı	ММ	<b>ND</b> H10	NX	Rı	U <sub>1</sub>
I-04A	40	69	22	24	55	M14 x 1.5	12+0.070	16 <sup>-0.1</sup> <sub>-0.3</sub>	15.5	20
I-05A	50, 63	74	27	28	60	M18 x 1.5	12+0.070	16-0.1	15.5	20
I-08A	80	91	37	36	71	M22 x 1.5	18 <sup>+0.070</sup>	28-0.1	22.5	26
I-10A	100	105	37	40	83	M26 x 1.5	20+0.084	30-0.1	24.5	28

### **Rod End Nut (Standard equipment)**

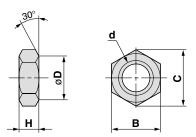

Material	: Rolled steel					(mm)
Part no.	Applicable bore size (mm)	В	С	D	d	Н
NT-04	40	22	25.4	21	M14 x 1.5	8
NT-05	50, 63	27	31.2	26	M18 x 1.5	11
NT-08	80	32	37.0	31	M22 x 1.5	13
NT-10	100	41	47.3	39	M26 x 1.5	16






# Cylinder with Lock Double Acting, Double Rod

# Series CNA2W

ø40, ø50, ø63, ø80, ø100

#### **How to Order**

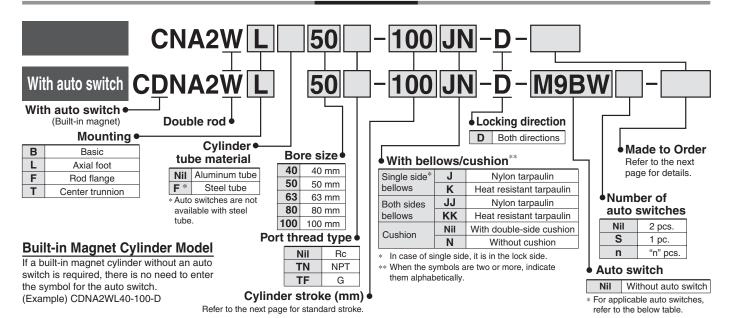

Applicable Auto Switches/Refer to Best Pneumatics No. 3 for further information on auto switches.

		Electrical	light	Wiring	L	oad volta	ge	Auto swit	ch model	Lead v	vire le	ength	(m)	Pre-wired		
Туре	Special function	entry	Indicator light	(Output)		C	AC	Tie-rod mounting	Band mounting	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	connector	Applica	ble load
			_					M9N	_	(,		(-)	0	0		
				3-wire (NPN)				_	G59		Ť		Ŏ	ŏ		
				a : (DMD)		5 V, 12 V		M9P	_			•	Ŏ	Ŏ	IC circuit	
		Grommet		3-wire (PNP)	24 V		_	_	G5P		Ť	•	Ŏ	Ŏ		
						40.1/		M9B	_	•			0	0		
				2-wire		12 V		_	K59	•	1-	•	0	0		
ç					_	_	100 V, 200 V	J51	_	•	1-	•	0		-	
Solid state auto switch		Terminal		3-wire (NPN)		12 V		G39C	G39	_	-	_	_	_		
S		conduit		2-wire		12 V		K39C	K39	_	T-	_	_	_		
t c				3-wire (NPN)				M9NW	_			•	0	0		Relay,
e al			Yes	3-WILE (INFIN)		5 V, 12 V		_	G59W		-		0	0	IC circuit	PLC
tate	Diagnostic indication			3-wire (PNP)		5 V, 12 V		M9PW	_	•			0	0		
S	(2-color indication)			3-Wile (FIVE)					G5PW	•	<u> </u>		0	0		
oji o				2-wire	24 V	12 V		M9BW	_	•			0	0		
S		Grommet			24 V	12 V			K59W	•	<u> </u>		0	0		
		aronninet		3-wire (NPN)		5 V, 12 V		M9NA***	_	0	0		0	0	_	
	Water resistant			3-wire (PNP)		5 V, 12 V		M9PA***	_	0	0	•	0	0		
	(2-color indication)			2-wire		12 V		M9BA***	_	0			0	0		
									G5BA		-		0	0		
	With diagnostic output (2-color indication)			4-wire (NPN)		5 V, 12 V		F59F	G59F		<u> </u>		0	0	IC circuit	
	Magnetic field resistant (2-color indication)			2-wire (Non-polar)				P3DW	_	•	<u> </u>	•	•	0		
			Yes	3-wire (NPN equivalent)		5 V		A96		•	<del>  -</del>	•	_		IC circuit	
ch		_					100 V	A93		•	<del>  -</del>	•	_		<u> </u>	
wit		Grommet	-				100 V or less	A90		-	<del>  -</del>	•	_		IC circuit	Relay,
S			Yes				100 V, 200 V	A54	B54	•	<del> </del> —	•				PLC
auto			No	2-wire	24 V	12 V	200 V or less	A64	B64	•	<del>  -</del>	•	_	_		DI O
Reed auto switch		Terminal						A33C	A33		+-		_		_	PLC
Зее		conduit	Yes				100 V, 200 V	A34C	A34	_	+-	_	_	_		Relay,
_	Discount in the first (O and a first first)	DIN terminal	1				, ,	A44C	A44		+-	_	_	_		PLC
	Diagnostic indication (2-color indication)	Grommet					_	A59W	B59W		_					

<sup>\*\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance Consult with SMC regarding water resistant types with the above model numbers.

\* Lead wire length symbols: 0.5 m ..... Nil (Example) M9NW

1 m ····· M (Example) M9NWM 3 m ····· L (Example) M9NWL

- \* Solid state auto switches marked with "O" are produced upon receipt of order.
- 5 m ····· Z (Example) M9NWZ
- \* Since there are other applicable auto switches than listed, refer to page 28 for details.

  \* For details about auto switches with pre-wired connector, refer to Best Pneumatics No. 3. Refer to CAT.ES20-201 catalog for the D-P3DW.
- The D-A9\(\times\)/M9\(\times\) auto switches are shipped together, (but not assembled). (Only auto switch mounting brackets are assembled at the time of shipment for the \(\text{D-A9}\)/M9\(\times\).

# Cylinder with Lock Double Acting, Double Rod Series CNA2W



#### Symbol Double acting, Double rod



#### Made to Order (For details, refer to Best Pneumatics No. 3.)

Symbol	Specifications
—XC14	Change of trunnion bracket mounting position
—XC15	Change of tie-rod length

Refer to pages 23 to 28 for cylinders with auto switches.

- · Minimum stroke for auto switch mounting
- Auto switch proper mounting position (detection at stroke end) and mounting height
- Operating range
- · Auto switch mounting bracket/Part no.

Minimum mountable stroke for a cylinder with auto switch(es)

## Caution

1. Each switch and mounting style of cylinder has different minimum mountable stroke. Be careful especially of the center trunnion style.

(Refer to pages 25 and 26 for details.)

#### **Specifications**

Bore size (mm)	40	50	63	80	100						
Fluid			Air								
Туре			Non-lube								
Action			ouble actin	g							
Lock operation		S	pring lockin	g							
Proof pressure	1.5 MPa										
Max. operating pressure			1.0 MPa								
Min. operating pressure			0.1 MPa								
Piston speed		50	to 1000 mm	/s *							
Ambient and fluid temperature	Without auto switch: -10 to 70°C (No freezing) With auto switch: -10 to 60°C (No freezing)										
Cushion	Air cushion										
Stroke length tolerance	Up to 2	250: +1.0 0, 251	to 1000: +1.4	, 1001 to 1	500: +1.8 0						
Mounting	Basic, Axial foot, Rod flange, Center trunnion										

<sup>\*</sup> Load limits exist depending on the piston speed when locked, mounting direction and operating pressure.

#### **Lock Specifications**

Bore size (mm)	40	50	63	80	100							
Locking action		Spring loc	king (Exhau	st locking)								
Unlocking pressure	0.25 MPa or more											
Lock starting pressure		0.2	20 MPa or le	ess								
Max. operating pressure	1.0 MPa											
Locking direction	Both directions											
Holding force (N)	882	1370	2160	3430	5390							

<sup>\*</sup> Be sure to select cylinders in accordance with the procedures on page 1.

For cases with auto switches, refer to the table of minimum stroke for Standard Stroke auto switch mounting on pages 25 and 26.

Bore size (mm)	Standard stroke (mm)									
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500									
50, 63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600									
80, 100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700									

<sup>\*</sup> Intermediate strokes other than the above are produced upon receipt of order. Spacers are not used for intermediate strokes.

### **Stopping Accuracy**

(mm)

				()					
Look time	Piston speed (mm/s)								
Lock type	100	300	500	1000					
Spring locking	±0.3	±0.6	±1.0	±2.0					

Condition: Lateral, Supply pressure P = 0.5 MPa

Load weight ..... Upper limit of allowed value

Solenoid valve for locking mounted on the unlocking port

Maximum value of stopping position dispersion from 100 measurements



## **Mounting Bracket/Part No.**

Bore size (mm)	40	50	63	80	100
Axial foot *	CA2-L04	CA2-L05	CA2-L06	CA2-L08	CA2-L10
Flange	CA2-F04	CA2-F05	CA2-F06	CA2-F08	CA2-F10

<sup>\*</sup> When ordering axial foot bracket, order 2 pieces per cylinder.

#### **Bellows Material**

Symbol	Bellows material	Max. ambient temperature
J	Nylon tarpaulin	70°C
K	Heat resistant tarpaulin	110°C *

<sup>\*</sup> Maximum ambient temperature for bellows itself

### **Accessories**

	Mounting	Basic	Axial foot	Flange	Center trunnion
Standard equipment	Rod end nut	•	•	•	•
	Single knuckle joint	•	•	•	•
Option	Double knuckle joint (With pin)	•	•	•	•
	With bellows	•	•	•	•

<sup>\*</sup> Accessory bracket dimensions are same as those of double acting, single rod type of the CNA2 series. (Refer to page 15.)


### Weight

							(kg)
	Bore size (mm)		40	50	63	80	100
	Basic	Aluminum tube	1.80	2.83	4.22	7.54	11.12
	Dasic	Steel tube	1.85	2.89	4.26	7.70	11.33
	Axial foot	Aluminum tube	1.99	2.87	4.56	8.21	12.11
Danie weight	Axiai ioot	Steel tube	2.04	2.91	4.60	8.37	12.32
Basic weight	Flance	Aluminum tube	2.17	3.10	5.01	8.99	13.04
	Flange	Steel tube	2.22	3.14	5.05	9.15	13.25
	0 1 1 1	Aluminum tube	2.25	3.18	5.11	9.24	13.52
	Center trunnion	Steel tube	2.35	3.28	5.31	9.53	13.91
Additional weight per	Maunting brookst	Aluminum tube	0.28	0.37	0.44	0.66	0.86
each 50 mm of stroke	Mounting bracket	Steel tube	0.35	0.47	0.55	0.89	1.15
Accessory brooket	Single knuckle joint		0.23	0.26	0.26	0.60	0.83
Accessory bracket	Double knuckle join	t (With pin)	0.37	0.43	0.43	0.87	1.27

Cylinder stroke ........... 100 stroke 1.99 + 0.28 x 100/50 = 2.55 kg




#### Construction

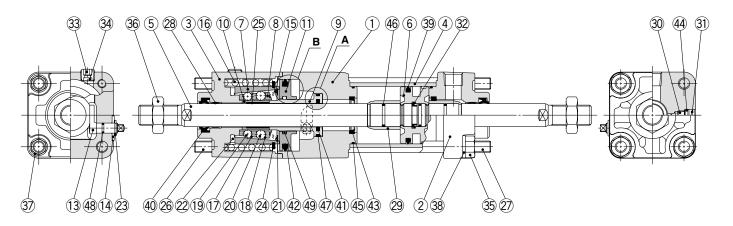

#### B section (Release piston bushing)

A section: ø50 to ø100





#### **Component Parts**

No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Metallic painted after hard anodized
2	Rod cover	Aluminum alloy	Metallic painted
3	Cover	Aluminum alloy	Metallic painted after chromated
4	Cylinder tube	Aluminum alloy	Hard anodized
5	Piston rod	Carbon steel	Hard chrome plated
6	Piston	Aluminum alloy	Chromated
7	Taper ring	Bearing steel	Heat treated
8	Ball retainer	Special resin	
9	Piston guide	Carbon steel	Zinc chromated
10	Brake shoe holder	Special steel	Heat treated
11	Release piston	Aluminum alloy	Hard anodized (ø40, ø50, ø63 Chromated (ø80, ø100)
12	Release piston bushing	Steel + Special resin	Only ø80, ø100
13	Unlocking cam	Chromium molybdenum steel	Zinc chromated
14	Washer	Rolled steel	Zinc chromated
15	Retainer pre-load spring	Stainless steel wire	
16	Brake spring	Steel wire	Zinc chromated
17	Clip A	Stainless steel	
18	Clip B	Stainless steel	
19	Steel ball A	Bearing steel	
20	Steel ball B	Bearing steel	
21	Tooth ring	Stainless steel	
22	Bumper	Urethane	
23	Type C retaining ring for unlocking cam shaft	Carbon tool steel	
24	Type C retaining ring for taper ring	Carbon tool steel	
25	Brake shoe	Special friction material	
26	Unit holding tie-rod	Carbon steel	Chromated
27	Tie-rod	Carbon steel	Zinc chromated
28	Bushing	Copper alloy	
29	Cushion ring	Aluminum alloy	Anodized
30	Cushion valve	Steel wire	Electroless nickel plated
31	Stop ring	Steel for spring	
32	Piston holder	Urethane	
33	Hexagon socket head plug	Carbon steel	Nickel plated

#### **Component Parts**

No.	Description	Material	Note
34	Element	Bronze	
35	Tie-rod nut	Rolled steel	Nickel plated
36	Rod end nut	Rolled steel	Nickel plated
37	Spring washer	Steel wire	Chromated
38	Spring washer	Steel wire	Chromated
39	Piston seal	NBR	
40	Rod seal A	NBR	
41	Rod seal B	NBR	
42	Release piston seal	NBR	
43	Cushion seal	Urethane	
44	Cushion valve seal	NBR	
45	Tube gasket	NBR	
46	Piston gasket	NBR	
47	Piston guide gasket	NBR	
48	Unlocking cam gasket	NBR	
49	O-ring	NBR	

#### Replacement Parts/Seal Kit


_			
	Bore size (mm)	Kit no.	Contents
	40	MBW 40-PS	
	50	MBW 50-PS	
_	63	MBW 63-PS	Including 39, 40, 43, 45.
	80	MBW 80-PS	
_	100	MBW100-PS	

- \* Since the lock of the CNA2 series cannot be disassembled and is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- \* Seal kit includes a grease pack (ø40 and ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g)

Order with the following part number when only the grease pack is needed. Grease pack part number: GR-S-010 (10 g), GR-S-020 (20 g)




#### **Dimensions**

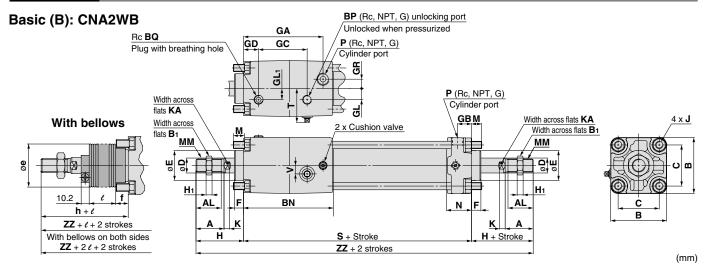

Bore size (mm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL <sub>1</sub>	GR	Н	Hı	J	K
40	Up to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6
50	Up to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7
63	Up to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7
80	Up to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10
100	Up to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1 75	10

									(111111)
Bore size (mm)	KA	М	ММ	N	Р	s	Т	٧	ZZ
40	14	11	M14 x 1.5	27	1/4	153	37.5	9	255
50	18	11	M18 x 1.5	30	3/8	168	44	11	284
63	18	14	M18 x 1.5	31	3/8	182	52.5	12	298
80	22	17	M22 x 1.5	37	1/2	218	59.5	15	360
100	26	17	M26 x 1.5	40	1/2	246	69.5	15	390

With Bel	With Bellows														
Bore size (mm)	Stroke range (mm)	е	f	h	e	<b>ZZ</b> (Single side)	<b>ZZ</b> (Both sides)								
40	20 to 500	43	11.2	59	1/4 stroke	263	271								
50	20 to 600	52	11.2	66	1/4 stroke	292	300								
63	20 to 600	52	11.2	66	1/4 stroke	306	314								
80	20 to 750	65	12.5	80	1/4 stroke	369	378								
100	20 to 750	65	14	81	1/4 stroke	399	408								

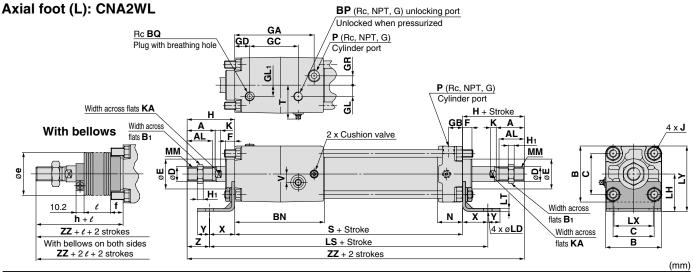


																											()
Bore size (mm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	Н	Hı	J	K	KA	LD	LH	LS
40	Up to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6	14	9	40	207
50	Up to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7	18	9	45	222
63	Up to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7	18	11.5	50	250
80	Up to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10	22	13.5	65	306
100	Up to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10	26	13.5	75	332

												(mm)
Bore size (mm)	LT	LX	LY	ММ	N	Р	s	Т	V	X	Υ	ZZ
40	3.2	42	70	M14 x 1.5	27	1/4	153	37.5	9	27	13	255
50	3.2	50	80	M18 x 1.5	30	3/8	168	44	11	27	13	284
63	3.2	59	93	M18 x 1.5	31	3/8	182	52.5	12	34	16	298
80	4.5	76	116	M22 x 1.5	37	1/2	218	59.5	15	44	16	360
100	6.0	92	133	M26 x 1.5	40	1/2	246	69.5	15	43	17	390

With Be	llows						(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	<b>ZZ</b> (Single side)	<b>ZZ</b> (Both sides)
40	20 to 500	43	11.2	59	1/4 stroke	263	271
50	20 to 600	52	11.2	66	1/4 stroke	292	300
63	20 to 600	52	11.2	66	1/4 stroke	306	314
80	20 to 750	65	12.5	80	1/4 stroke	369	378
100	20 to 750	65	14	81	1/4 stroke	399	408

# Cylinder with Lock Double Acting, Double Rod Series CNA2W


#### **Dimensions**

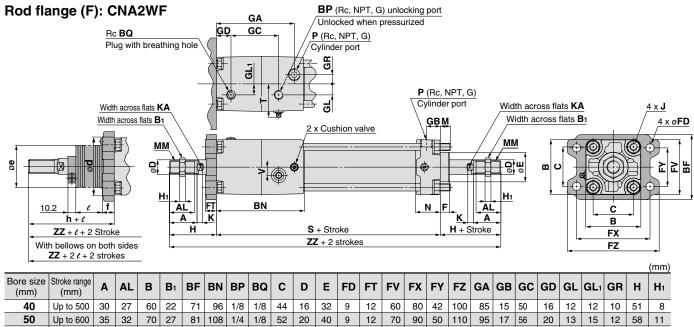

(mm)	(mm)	А	AL	В	B1	BF	BIA	ВР	BQ	C	ט		FU	-	FV	FX	FY	FZ	GA	GB	GC	GD	GL	GL1	GK	н	<b>H</b> 1
40	Up to 500	30	27	60	22	71	96	1/8	1/8	44	16	32	9	12	60	80	42	100	85	15	50	16	12	12	10	51	8
50	Up to 600	35	32	70	27	81	108	1/4	1/8	52	20	40	9	12	70	90	50	110	95	17	56	20	13	15	12	58	11
63	Up to 600	35	32	86	27	101	115	1/4	1/4	64	20	40	11.5	15	86	105	59	130	102	17	65	20	18	12	15	58	11
80	Up to 750	40	37	102	32	119	139	1/4	1/4	78	25	52	13.5	18	102	130	76	160	123	21	79.5	20	23	18	17	71	13
100	Up to 750	40	37	116	41	133	160	1/4	1/4	92	30	52	13.5	18	116	150	92	180	144	21	93.5	22	25	20	19	72	16
											(	(mm)	١	<b>Vith</b>	Bel	low	s										(mı
Poro oizo														Doro	oizo	Ctroko	rongo							-	77		77

Bore size (mm)	J	К	KA	М	ММ	N	Р	s	Т	V	ZZ
40	M8 x 1.25	6	14	11	M14 x 1.5	27	1/4	153	37.5	9	255
50	M8 x 1.25	7	18	11	M18 x 1.5	30	3/8	168	44	11	284
63	M10 x 1.25	7	18	14	M18 x 1.5	31	3/8	182	52.5	12	298
80	M12 x 1.75	10	22	17	M22 x 1.5	37	1/2	218	59.5	15	360
100	M12 x 1.75	10	26	17	M26 x 1.5	40	1/2	246	69.5	15	390

With Be	llows							(mm)
Bore size (mm)	Stroke range (mm)	d	е	f	h	e	<b>ZZ</b> (Single side)	ZZ (Both sides)
40	20 to 500	52	43	15	59	1/4 stroke	263	271
50	20 to 600	58	52	15	66	1/4 stroke	292	300
63	20 to 600	58	52	17.5	66	1/4 stroke	306	314
80	20 to 750	80	65	21.5	80	1/4 stroke	369	378
100	20 to 750	80	65	21.5	81	1/4 stroke	399	408

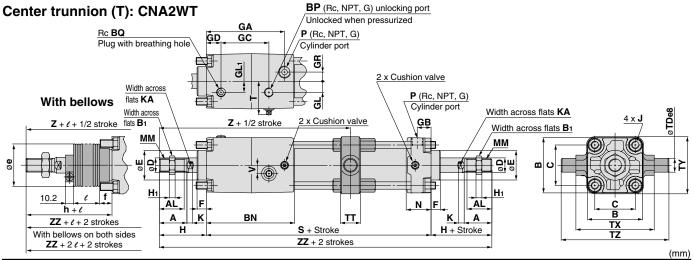


Bore size (mm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	н	H <sub>1</sub>	J	К	KA	ММ	N
40	25 to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6	14	M14 x 1.5	27
50	25 to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7	18	M18 x 1.5	30
63	32 to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7	18	M18 x 1.5	31
80	41 to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10	22	M22 x 1.5	37
100	45 to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10	26	M26 x 1.5	40


											(mm)
Bore size (mm)	Р	s	т	TDe8	тт	тх	TY	TZ	٧	z	ZZ
40	1/4	153	37.5	15-0.032	22	85	62	117	9	162	255
50	3/8	168	44	15-0.032	22	95	74	127	11	181	284
63	3/8	182	52.5	18-0.032	28	110	90	148	12	191	298
80	1/2	218	59.5	25-0.040	34	140	110	192	15	231	360
100	1/2	246	69.5	25-0.040	40	162	130	214	15	255	390

With Be	llows								(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	Z (Single side)	<b>ZZ</b> (Single side)	<b>Z</b> (Both sides)	ZZ (Both sides)
40	25 to 500	43	11.2	59	1/4 stroke	170	263	170	271
50	25 to 600	52	11.2	66	1/4 stroke	189	292	189	300
63	32 to 600	52	11.2	66	1/4 stroke	199	306	199	314
80	41 to 750	65	12.5	80	1/4 stroke	240	369	240	378
100	45 to 750	65	14	81	1/4 stroke	264	399	264	408


#### Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height

#### <Band mounting> D-B5□/B64 D-B59W




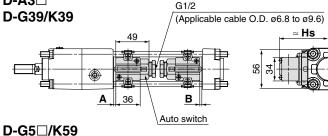

D-G5□/K59W D-G5BAL D-G59F/G5NTL



#### **D-A44**

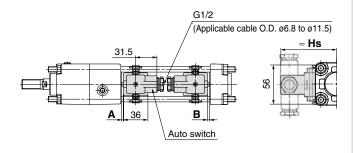


#### <Tie-rod mounting>


**D-A9**□/**A9**□**V D-Z7**□/**Z80** 

**D-M9**□/**M9**□**V D-Y59**□/**Y69**□/**Y7P/Y7PV** 


 $D-M9\square W/M9\square WV$   $D-Y7\square W/Y7\square WV$ 

D-M9□AL/M9□AVL D-Y7BAL







#### D-A3□C D-G39C/K39C

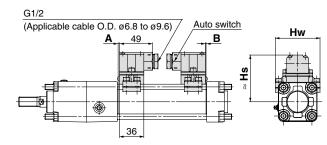



D-F5□/J5□ D-F5□W/J59W D-F5NTL D-F5BAL/F59F



#### **D-A44C**

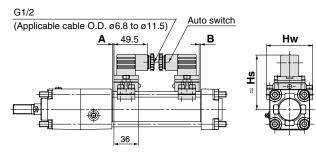





## **Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height**

### **Auto Switch Proper Mounting Position**

(mm)

Auto switch model			D-M9 D-M9 D-M9 D-M9 D-M9	UUV UUV UUV UUV	D-B5 D-Z7 D-Z8 D-Y5 D-Y6 D-Y7 D-Y7 D-Y7 D-Y7		D-P3i	DW□	D-P4	DWL	D-A: D-A: D-A: D-A: D-A: D-G: D-G: D-K:	6	D-B D-B	_	D-F5 D-J5 D-F5 D-F5 D-J5	□ 9F 5□W 9W	D-G5 D-K5 D-G5 D-G5 D-K5 D-G5	9 SNTL S□W S9W SBAL	D-A	59W	D-F5	NTL
size (mm)	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В
40	6	4	10	8	4	1	6	3	3.5	0.5	0.5	0	1	0	7	4	2.5	0	4.5	1.5	12	9
50	6	4	10	8	3.5	1.5	5.5	3.5	3	1	0	0	0.5	0	6.5	4.5	2	0	4	2	11.5	9.5
63	8.5	7.5	12.5	11.5	6	5	3	1.5	5.5	4.5	2.5	1.5	3	2	9	8	4.5	3.5	6.5	5.5	14	13
80	12	10	16	14	9.5	7.5	6	4.5	9	7	6	4	6.5	4.5	12.5	10.5	8	6	10	8	17.5	15.5
100	13.5	12.5	17.5	16.5	11	10	8	6.5	10.5	9.5	7.5	6.5	8	7	14	13	9.5	8.5	11.5	10.5	19	18

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

**Auto Switch Mounting Height** 

(mm)

E	Auto switch model		□ □ <b>W</b>	D-AS	e□v	D-M9I D-M9I	□WV	D-Z7 D-Z8 D-Y5 D-Y7 D-Y7	60 69□ ′P ′BAL	D-Y6 D-Y7 D-Y7	PV	D-P3	DW□	D-P4	DWL	D-B5□ D-B64 D-B59W D-G5□ D-K59 D-G5NTL D-G5□W D-K59W D-G5BAL D-G59F	D-A3□ D-G39 D-K39	D-A44	D-AS D-AS	6□
s	ize (mm) $\setminus$	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Hs	Hs	Hs	Ht
	40	30	30	31	30	34	30	30	30	30	30	38	30	42.5	33	37	71.5	81.5	38.5	31.5
	50	34	34	35	34	38	34	34	34	34	34	42	34	46.5	37.5	42	76.5	86.5	42	35.5
Г	63	41	41	41.5	41	44	41	41	41	41	41	49	41	52	43	49	83.5	93.5	46.5	43
	80	49.5	49	50	49	52.5	49	49.5	49	49.5	49	56	49	58.5	51.5	57.5	92	102	53.5	51
Г	100	56.5	56	58.5	56	61	56	56.5	55.5	57.5	55.5	65	56	66	58.5	68	102.5	112.5	61.5	57.5

Auto switch model	D-F5	9 □W 9W BAL	D-A: D-G: D-K:	39C	D-A	44C
size (mm)	Hs	Ht	Hs	Hw	Hs	Hw
40	38	31.5	73	69	81	69
50	42	35.5	78.5	77	86.5	77
63	47	43	85.5	91	93.5	91
80	53.5	51	94	107	102	107

# **Minimum Stroke for Auto Switch Mounting**

						n: Number of auto	switches (mm)
Auto switch model	Number of auto	Mounting brackets			Center trunnion		
7.000	switches mounted	other than center trunnion	ø <b>40</b>	ø <b>50</b>	ø <b>63</b>	ø <b>80</b>	ø100
	2 (Different surfaces, Same surface), 1	15	7	75	90	100	110
<b>D-A9</b> □	n	$15 + 40 \frac{(n-2)}{2}$	75 + 40	<u>(n - 4)</u>	$90 + 40 \frac{(n-4)}{2}$	$100 + 40 \frac{(n-4)}{2}$	$110 + 40 \frac{(n-4)}{2}$
		(n = 2, 4, 6, 8···)	(n = 4, 8,	12, 16…)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
D 40=1/	2 (Different surfaces, Same surface), 1	10	7	75	90	100	110
D-A9□V	n	$10 + 30 \frac{(n-2)}{2}$	75 + 30	$\frac{(n-4)}{2}$	$90 + 30 \frac{(n-4)}{2}$	$100 + 30 \frac{(n-4)}{2}$	$110 + 30 \frac{(n-4)}{2}$
		(n = 2, 4, 6, 8···)	(n = 4, 8,	12, 16…)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
D-M9□	2 (Different surfaces, Same surface), 1	15	8	30	95	110	115
D-M9□W D-M9□AL	n	$15 + 40 \frac{(n-2)}{2}$	80 + 40	$\frac{(n-4)}{2}$	$95 + 40 \frac{(n-4)}{2}$	$110 + 40 \frac{(n-4)}{2}$	$115 + 40 \frac{(n-4)}{2}$
		(n = 2, 4, 6, 8···)	(n = 4, 8,	12, 16…)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
D-M9□V	2 (Different surfaces, Same surface), 1	10	8	30	95	110	115
D-M9□WV D-M9□AVL	n	$10 + 30 \frac{(n-2)}{2}$	80 + 30	$\frac{(n-4)}{2}$	$95 + 30 \frac{(n-4)}{2}$	$110 + 30 \frac{(n-4)}{2}$	$115 + 30 \frac{(n-4)}{2}$
		(n = 2, 4, 6, 8···)	(n = 4, 8,	12, 16…)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
D-A5□/A6□ D-F5□/J5□	2 (Different surfaces, Same surface), 1	15	g	0	100	110	120
D-F5□W/J59W	n (Same surface)	$15 + 55 \frac{(n-2)}{2}$	90 + 55	$\frac{(n-4)}{2}$	$100 + 55 \frac{(n-4)}{2}$	$110 + 55 \frac{(n-4)}{2}$	$120 + 55 \frac{(n-4)}{2}$
D-F5BAL/F59F	,	(n = 2, 4, 6, 8···)	(n = 4, 8,	12, 16…)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
	2 (Different surfaces, Same surface), 1	20	g	0	100	110	120
D-A59W	n (Same surface)	$20 + 55 \frac{(n-2)}{2}$	90 + 55	$\frac{(n-4)}{2}$	$100 + 55 \frac{(n-4)}{2}$	$110 + 55 \frac{(n-4)}{2}$	$120 + 55 \frac{(n-4)}{2}$
	,	(n = 2, 4, 6, 8···)	(n = 4, 8,		(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
	1 2 (Different surfaces,	15	9	00	100	110	120
D ECNTI	Same surface), 1	25	11	0	120	130	140
D-F5NTL	n (Same surface)	$25 + 55 \frac{(n-2)}{2}$ $(n = 2, 4, 6, 8\cdots)$	110 + 5	2	$120 + 55 \frac{(n-4)}{2}$ $(n = 4, 8, 12, 16)$	$130 + 55 \frac{(n-4)}{2}$ $(n = 4, 8, 12, 16\cdots)$	_
	Different surfaces	15	(n = 4, 8,	•			
D-B5□/B64 D-G5□/K59	Same surface	75	9	00	100	1	10
D-G5□W	Different surfaces	$15 + 50 \frac{(n-2)}{2}$	90 + 50	$\frac{(n-4)}{2}$	$100 + 50 \frac{(n-4)}{2}$	110 + 5	$0 \frac{(n-4)}{2}$
D-K59W D-G5BAL	n	(n = 2, 4, 6, 8, ···)	(n = 4, 8, 1		(n = 4, 8, 12, 16, ···)	(n = 4, 8,	, ,
D-G59F	Same surface	75 + 50 (n – 2) (n = 2, 3, 4, ···)	90 + 50 (n = 2, 4,	` '	100 + 50 (n - 2) $(n = 2, 4, 6, 8, \cdots)$	110 + 50 (n = 2, 4	` '
D-G5NTL	1	10		0	100	•	10
	2 Different surfaces Same surface	20 75	g	00	100	1	10
		$20 + 50 \frac{(n-2)}{2}$	90 + 50	<u>(n – 4)</u>	100 + 50 (n-4)	110 + 5	0 (n – 4)
D-B59W	Different surfaces	(n = 2, 4, 6, 8, ···)	(n = 4, 8, 1	-	(n = 4, 8, 12, 16, ···)		12, 16, ···)
	Same surface	75 + 50 (n – 2)	90 + 50		100 + 50 (n - 2)	110 + 50 (n - 2)	
		(n = 2, 3, 4, ···)	(n = 2, 4,		(n = 2, 4, 6, 8, ···)	(n = 2, 4	
	1 Different surfaces	15 35		00	100		10
	Same surface	100	10	0	100	1.	10
D-A3□ D-G39	Different surfaces	35 + 30 (n - 2) (n = 2, 3, 4, ···)	100 + 30 (n = 2, 4,		100 + 30 (n - 2) (n = 2, 4, 6, 8, ···)		0 (n – 2) , 6, 8, ···)
D-K39	Same surface	100 + 100 (n - 2) (n = 2, 3, 4, ···)	100 + 10 (n = 2, 4,	` '	100 + 100 (n - 2) (n = 2, 4, 6, 8, ···)	110 + 100 (n - 2) (n = 2, 4, 6, 8, ···)	
	1	10	10		100		10
	2 Different surfaces Same surface	35 55	10	0	100	1-	10
D-A44	Different surfaces	35 + 30 (n - 2) (n = 2, 3, 4, ···)	100 + 30 (n = 2, 4,	, ,	100 + 30 (n - 2) (n = 2, 4, 6, 8, ···)		0 (n – 2) , 6, 8, ···)
J-A-7	n Same surface	$(n - 2, 3, 4, \cdots)$ 55 + 50 (n - 2) $(n = 2, 3, 4, \cdots)$	100 + 50 (n = 2, 4,	) (n – 2)	$100 + 50 (n - 2)$ $(n = 2, 4, 6, 8, \cdots)$	110 + 5	0 (n – 2) , 6, 8, ···)
	1	10	10		100		10



# Cylinder with Lock Series CNA2

# **Minimum Stroke for Auto Switch Mounting**

							n: Number of auto	switches (mm)
		Number of auto	Mounting brackets			Center trunnion		
Auto switch model		witches mounted	other than center trunnion	ø <b>40</b>	ø <b>50</b>	ø <b>63</b>	ø <b>80</b>	ø <b>100</b>
	2	Different surfaces	20	4	00	100	120	
D-A3□C D-G39C	-	Same surface	100	Į,	00	100		
		Different surfaces	20 + 35 (n - 2)	100 + 3	5 (n – 2)	100 + 35 (n - 2)	120 + 35 (n – 2)	
	_	Dillerent Sunaces	(n = 2, 3, 4, ···)	(n = 2, 4	·, 6, 8, ···)	(n = 2, 4, 6, 8, ···)	(n = 2, 4, 6, 8, ···)	
D-K39C	n	Same surface	100 + 100 (n - 2)	100 + 10	00 (n – 2)	100 + 100 (n - 2)	120 + 10	0 (n – 2)
		Same sunace	(n = 2, 3, 4, 5···)	(n = 2, 4	·, 6, 8, ···)	(n = 2, 4, 6, 8, ···)	(n = 2, 4	, 6, 8,)
		1	10	1	00	100	12	20
	2	Different surfaces	20	4.	00	100	1/	20
	_	Same surface	55	1	00	100	12	20
		Different surfaces	20 + 35 (n - 2)	100 + 3	5 (n – 2)	100 + 35 (n - 2)	120 + 3	5 (n – 2)
D-A44C	n	Dillerent surfaces	(n = 2, 3, 4, ···)	(n = 2, 4	·, 6, 8, ···)	(n = 2, 4, 6, 8, ···)	(n = 2, 4	, 6, 8,)
	l ''	Same surface	55 + 50 (n - 2)	100 + 5	0 (n – 2)	100 + 50 (n - 2)	120 + 50	0 (n – 2)
		Ourile Surface	(n = 2, 3, 4, ···)	(n = 2, 4	·, 6, 8, ···)	(n = 2, 4, 6, 8, ···)	(n = 2, 4, 6, 8, ···)	
		1	10	1	00	100	120	
D-Z7□/Z80	<b>D-Z7</b> □ <b>/Z80</b> 2 (Differe Same s		15	80	85	90	95	105
D-Y59□/Y7P D-Y7□W	n		$15 + 40 \frac{(n-2)}{2}$	$80 + 40 \frac{(n-4)}{2}$	$85 + 40 \frac{(n-4)}{2}$	$90 + 40 \frac{(n-4)}{2}$	$95 + 40 \frac{(n-4)}{2}$	$105 + 40 \frac{(n-4)}{2}$
D-17-W		11	(n = 2, 4, 6, 8···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
D-Y69□/Y7PV		(Different surfaces, Same surface), 1	10	65		75	80	90
D-Y7□WV		n	$10 + 30 \frac{(n-2)}{2}$	$65 + 30 \frac{(n-4)}{2}$		$75 + 30 \frac{(n-4)}{2}$	$80 + 30 \frac{(n-4)}{2}$	$90 + 30 \frac{(n-4)}{2}$
			(n = 2, 4, 6, 8···)	(n = 4, 8, 12, 16···)		(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
		(Different surfaces, Same surface), 1	20		95	100	105	110
D-Y7BAL		n	20 + 45 \frac{(n-2)}{2}	95 + 45	5 <u>(n - 4)</u>	$100 + 45 \frac{(n-4)}{2}$	$105 + 45 \frac{(n-4)}{2}$	$110 + 45 \frac{(n-4)}{2}$
			(n = 2, 4, 6, 8···)	(n = 4, 8,	12, 16…)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
	2 (Different surfaces, Same surface), 1		15	85			95	100
D-P3DW□		n	$15 + 50 \frac{(n-2)}{2}$		$85 + 50 \frac{(n-4)}{2}$		$95 + 50 \frac{(n-4)}{2}$	$100 + 50 \frac{(n-4)}{2}$
			(n = 2, 4, 6, 8···)		(n = 4, 8, 12, 16···)		(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)
		(Different surfaces, Same surface), 1	15	1:	20	130	140	
D-P4DWL		n	$15 + 65 \frac{(n-2)}{2}$		5 (n-4) 2	$130 + 65 \frac{(n-4)}{2}$	140 + 6	5 <u>(n - 4)</u>
			(n = 2, 4, 6, 8···)	(n = 4, 8,	12, 16…)	(n = 4, 8, 12, 16···)	(n = 4, 8, 12, 16···)	



#### **Operating Range**

Auto switch model	Bore size					
Auto switch model	40	50	63	80	100	
D-A9□/A9□V	7.5	8.5	9.5	9.5	10.5	
D-M9□/M9□V D-M9□W/M9□WV D-M9□AL/M9□AVL	4.5	5	5.5	5	6	
D-Z7□/Z80	8.5	7.5	9.5	9.5	10.5	
D-A3□/A44 D-A3□C/A44C D-A5□/A6□ D-B5□/B64	9	10	11	11	11	
D-A59W	13	13	14	14	15	
D-B59W	14	14	17	16	18	
D-Y59□/Y69□ D-Y7P/Y7□V D-Y7□W/Y7□WV D-Y7BAL	8	7	5.5	6.5	6.5	


					(mm)	
Auto switch model	Bore size					
Auto switch model	40	50	63	80	100	
D-F5□/J5□/F59F D-F5□W/J59W D-F5BAL/F5NTL	4	4	4.5	4.5	4.5	
D-G5□/K59/G59F D-G5□W/K59W D-G5NTL/G5BAL	5	6	6.5	6.5	7	
D-G5NBL	35	35	40	40	40	
D-G39/K39 D-G39C/K39C	9	9	10	10	11	
D-P3DW□	4.5	5	6	5.5	6	
D-P4DWL	4	4	4.5	4	4.5	

<sup>\*</sup> Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately ±30% dispersion) There may be the case it will vary substantially depending on the ambient environment.

#### Auto Switch Mounting Bracket/Part No.

#### <Tie-rod mounting>

Auto switch model	Bore size (mm)					
Auto switch model	40	50	63	80	100	
D-A9□/A9□V D-M9□/M9□V D-M9□W/M9□WV D-M9□AL/M9□AVL	BA7-040	BA7-040	BA7-063	BA7-080	BA7-080	
D-A5□/A6□/A59W D-F5□/J5□/F5□W/J59W D-F5NT/F5BAL/F59F	BT-04	BT-04	BT-06	BT-08	BT-08	
D-A3 C/A44C/G39C/K39C	BA3-040	BA3-050	BA3-063	BA3-080	BA3-100	
D-Z7□/Z80 D-Y59□/Y69□ D-Y7P/Y7PV D-Y7□W/Y7□WV D-Y7BAL	BA4-040	BA4-040	BA4-063	BA4-080	BA4-080	
D-P3DW□	BMB9-050S	BMB9-050S	BA9T-063S	BA9T-080S	BA9T-080S	
D-P4DWL	BAP2-040	BAP2-040	BAP2-063	BAP2-080	BAP2-080	

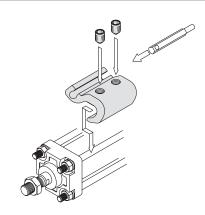

• The above figure shows the mounting example of the D-A9□(V)/M9□(V)/M9□W(V)/M9□A(V)L.

#### <Band mounting>

Auto switch model	Bore size (mm)					
Auto switch model	40	50	63	80	100	
D-A3□/A44 D-G39/K39	BDS-04M	BDS-05M	BMB1-063	BMB1-080	BMB1-100	
D-B5□/B64 D-B59W D-G5□/K59 D-G5□W/K59W D-G59F D-G5NTL D-G5NBL	BH2-040	BA5-050	BAF-06	BAF-08	BAF-10	

 $<sup>\</sup>ast$  Auto switch mounting bracket is attached to the D-A3  $\Box$  C/A44C/G39C/K39C.

(Example) ø40: D-A3□C-4, ø50: D-A3□C-5

ø63: D-A3□C-6, ø80: D-A3□C-8, ø100: D-A3□C-10

To order the auto switch mounting bracket separately, use the part number as shown above.

#### [Mounting screw set made of stainless steel]

The following mounting screw set made of stainless steel (including set screw) is available. Use it in accordance with the operating environment. (Order the auto switch mounting bracket and band separately, since they are not included.)

BBA1: For D-A5/A6/F5/J5 types

BBA3: For D-B5/B6/G5/K5 types

The D-F5BAL/G5BAL auto switches are set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, the BBA1 or BBA3 is attached.

Note 1) Refer to Best Pneumatics No. 3 for details about the BBA1 and BBA3.

Note 2) When using the D-M9□AL/D-M9□AVL/Y7BAL, do not use the steel set screws included in the auto switch mounting brackets above (BA7-□□□, BA4-□□□). Order a stainless steel screw set (BBA1) separately, and select and use the M4 x 6L stainless steel set screws included in the BBA1.



To order, indicate as shown below, according to the cylinder size.

# Cylinder with Lock Series CNA2

Other than the applicable auto switches listed in "How to Order", the following auto switches can be mounted. For detailed specifications, refer to Best Pneumatics No. 3.

Auto switch type	Model	Electrical entry	Features	
	D-A93V, A96V	Cyammat (Daynandiaulay)	_	
Reed	D-A90V	Grommet (Perpendicular)	Without indicator light	
need	D-A53, A56, B53, Z73, Z76	Crammat (In line)	_	
	D-A67, Z80	Grommet (In-line)	Without indicator light	
	D-M9NV, M9PV, M9BV			
	D-Y69A, Y69B, Y7PV		_	
	D-M9NWV, M9PWV, M9BWV	Grommet (Perpendicular)	Discussificialization (Qualax indication)	
	D-Y7NWV, Y7PWV, Y7BWV		Diagnostic indication (2-color indication)	
	D-M9NAVL, M9PAVL, M9BAVL		Water resistant (2-color indication)	
Calid atata	D-Y59A, Y59B, Y7P			
Solid state	D-F59, F5P, J59		_	
	D-Y7NW, Y7PW, Y7BW		Discussion in discaling (O colonia discaling)	
	D-F59W, F5PW, J59W	Grommet (In-line)	Diagnostic indication (2-color indication)	
	D-F5BAL, Y7BAL		Water resistant (2-color indication)	
	D-F5NTL, G5NTL		With timer	
	D-P4DWL, P5DWL		Magnetic field resistant (2-color indication)	

<sup>\*</sup> With pre-wired connector is available for solid state auto switches. For details, refer to Best Pneumatics No. 3.



<sup>\*</sup> Normally closed (NC = b contact), solid state auto switches (D-F9G/F9H/Y7G/Y7H) are also available. For details, refer to Best Pneumatics No. 3.

<sup>\*</sup> Wide range detection solid state auto switch (D-G5NBL) is also available. For details, refer to Best Pneumatics No. 3.



# Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or

moderate injury.

**⚠** Warning:

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or

serious injury.

Danger

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

## **⚠** Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.





## **⚠** Caution

#### 1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

# Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.\*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
  - This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - \*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

## **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Actuators and Auto Switches Precautions.

#### **Design of Equipment and Machinery**

# **⚠** Warning

 Construct so that the human body will not come into direct contact with driven objects or the moving parts of locking cylinders.

Devise a safe structure by attaching protective covers that prevent direct contact with the human body, or in cases where there is a danger of contact, provide sensors or other devices to perform an emergency stop, etc., before contact occurs.

2. Use a balance circuit, taking cylinder lurching into consideration.

In cases such as an intermediate stop, where a lock is operated at a desired position within the stroke and air pressure is applied from only one side of the cylinder, the piston will lurch at high speed when the lock is released. In such situations, there is a danger of causing human injury by having hands or feet, etc., caught, and also a danger for causing damage to the equipment. In order to prevent this lurching, a balance circuit such as the recommended pneumatic circuits (back page 4) should be used.

#### Selection

# 


1. When in the locked state, do not apply a load accompanied by an impact shock, strong vibration or turning force, etc.

Use caution, because an external action such as an impacting load, strong vibration or turning force, may damage the locking mechanism or reduce its life.

2. Consider stopping accuracy and the amount of overrun when an intermediate stop is performed.

Due to the nature of a mechanical lock, there is a momentary lag with respect to the stop signal, and a time delay occurs before stopping. The cylinder stroke resulting from this delay is the overrun amount. The difference between the maximum and minimum overrun amounts is the stopping accuracy.

- Place a limit switch before the desired stopping position, at a distance equal to the overrun amount.
- The limit switch must have a detection length (dog length) of the overrun amount + α.
- For SMC's auto switches, the operating range is between 4 and 40 mm. (It varies depending on a switch model.)
   When the overrun amount exceeds this range, self-holding of the contact should be performed at the auto switch load side.

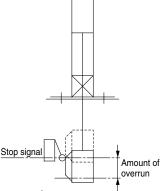

- \*For stopping accuracy, refer to page 4.
- 3. In order to further improve stopping accuracy, the time from the stop signal to the operation of the lock should be shortened as much as possible.

To accomplish this, use a device such as a highly responsive electric control circuit or solenoid valve driven by direct current, and place the solenoid valve as close as possible to the cylinder.

#### Selection

## **⚠** Warning

4. Note that the stopping accuracy will be influenced by changes in piston speed.

When piston speed changes during the course of the cylinder stroke due to variations in the load or disturbances, etc., the dispersion of stopping positions will increase. Therefore, consideration should be given to establishing a standard speed for the piston just before it reaches the stopping position.

Moreover, the dispersion of stopping positions will increase during the cushioned portion of the stroke and during the accelerating portion of the stroke after the start of operation, due to the large changes in piston speed.

5. The holding force (max. static load) indicates the maximum capability to hold a static load without loads, vibration and impact. This does not indicate a load that can be held in ordinary conditions.

Select the most suitable bore sizes for the operating conditions in accordance with the selection procedures. The Model Selection (pages 1 and 2) is based on use at the intermediate stop (including emergency stops during the operation). However, when the cylinder is in a locked state, kinetic energy does not act upon it. Under these conditions, use the load weight at the maximum speed (V) of 100 mm/s shown in Chart (5) to (7) on page 2 depending on the operating pressure and select models.

#### Mounting


# **Marning**

- Be certain to connect the rod end to the load with the lock released.
  - If connected in the locked state, a load greater than the turning force or holding force, etc., may operate on the piston rod and cause damage to the lock mechanism. The CNA2 series is equipped with an emergency unlocking mechanism; however, when connecting the rod end to the load, this should be done with the lock released. This can be accomplished by simply connecting an air line to the unlocking port and supplying air pressure of 0.25 MPa or more.

## 

1. Do not apply offset loads to the piston rod.

Particular care should be taken to match the load's center of gravity with the center of the cylinder shaft. When there is a large discrepancy, the piston rod may be subjected to uneven wear or damage due to the inertial moment during locking stops.



shaft center are not matched.

shaft center are matched.

Note) Can be used if all of the generated moment is absorbed by an effective guide.





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Actuators and Auto Switches Precautions.

#### Mounting

### 


Caution when using the basic style or replacing the mounting bracket.

The lock unit and cylinder rod cover are assembled as shown in the figure below. For this reason, it cannot be installed as in the case of common air cylinders, by using the basic style and screwing the cylinder tie-rods directly to machinery.

Furthermore, when replacing mounting brackets, the unit holding tie-rods may get loosen. Tighten them once again in such a case.

Use a socket wrench for replacing the mounting bracket or tightening the unit holding tie-rod.

Bore size	Mour	iting brad	cket nut	Unit holding tie-rod		
(mm)	(mm) Nut Width across flats Socket		Width across flats	Socket		
40.50	JIS B 1181 Class 3	13	JIS B 4636	10	JIS B 4636 2-point angle socket 10	
40, 50	M8 x 1.25	13	2-point angle socket 13	13	JIS B 4636 2-point angle socket 13	
63	JIS B 1181 Class 3 M10 x 1.25	17	JIS B 4636 2-point angle socket 17	13	JIS B 4636 2-point angle socket 13	
80, 100	JIS B 1181 Class 3 M12 x 1.25	19	JIS B 4636 2-point angle socket 19	17	JIS B 4636 2-point angle socket 17	

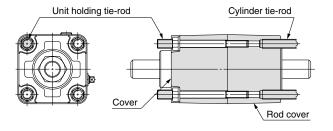

#### **Adjustment**

## 

- Adjust air balance for cylinder. Balance the load by adjusting the air pressure in the cylinder rod end and head end after the lock is released when the load is mounted on cylinder. When you have this air balance, cylinder ejection at lock release can be avoided.
- Adjust mounting position for detection area of auto switch, etc. When intermediate stop is done, adjust the mounting position for detection area of auto switch, etc., with consideration of overrun distance to required stop position.

#### **Pneumatic Circuit**

# **⚠** Warning

 Be certain to use an pneumatic circuit which will apply balancing pressure to both sides of the piston when in a locked stop.

In order to prevent cylinder lurching after a lock stop, when restarting or when manually unlocking, a circuit should be used to which will apply balancing pressure to both sides of the piston, thereby canceling the force generated by the load in the direction of piston movement.

#### **Pneumatic Circuit**

## **⚠** Warning

2. The effective area of the lock release solenoid valve should be at least 50% of the effective area of the cylinder driving solenoid valve, and it should be installed as close to the cylinder as possible so that it is closer than the cylinder driving solenoid valve.

If the effective area of the lock release solenoid valve is smaller than the cylinder driving solenoid valve or if it is installed at a distance from the cylinder, the time required for exhausting air for releasing the lock will be longer, which may cause a delay in the locking operation.

The delay in the locking operation may result in problems such as increase of overrunning when performing intermediate stop or emergency stop during operation, or if maintaining position from the operation stop state such as drop prevention, workpieces may be dropped depending on the timing of the load action to the operation delay of the lock.

Avoid backflow of the exhaust pressure when there is a possibility of interference of exhaust air, for example for a common exhaust type valve manifold.

The lock may not operate properly when the exhaust air pressure backflows due to interference of the exhaust air when exhausting air for lock release. It is recommended to use an individual exhaust type manifold or individual valves.


4. Allow at least 0.5 seconds from a locked stop (intermediate stop of the cylinder) until release of the lock.
When the locked stop time is too short, the piston rod (and

load) may lurch at a speed greater than the control speed of the speed controller.

5. When restarting, control the switching signal for the unlocking solenoid valve so that it acts before or at the same time as the cylinder drive solenoid valve.

If the signal is delayed, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.

6. Basic circuit

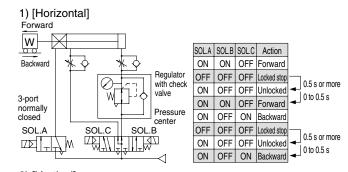

2) [Vertical]

[Load in the direction of rod extension]

[Load in the direction of rod retraction]

[Load in the direction of rod retraction]

[SOL.B SOL.C SOL.A SOL.C SOL.B SOL.B SOL.C SOL.B SOL.B SOL.C SOL.B SOL.B SOL.C SOL.B SOL






Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Actuators and Auto Switches Precautions.

#### **Pneumatic Circuit**


# **⚠** Caution

 3-position pressure center solenoid valve and regulator with check valve can be replaced with two 3-port normally open valves and a regulator with relief function.




#### [Example]

#### 1) [Horizontal]

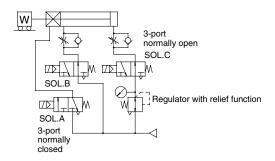

#### 2) [Vertical]

[Load in the direction of rod extension] [Load in the direction of rod retraction]

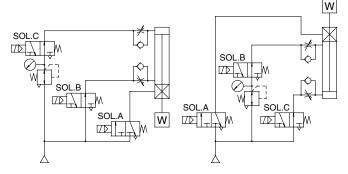

#### **Manually Unlocking**

# **Marning**


- 1. Never operate the unlocking cam until safety has been confirmed. (Do not turn to the FREE side.)
  - When unlocking is performed with air pressure applied to only one side of the cylinder, the moving parts of the cylinder will lurch at high speed causing a serious hazard.
  - When unlocking is performed, be sure to confirm that personnel are not within the load movement range and that no other problems will occur if the load moves.
- 2. Before operating the unlocking cam, exhaust any residual pressure which is in the system.
- 3. Take measures to prevent the load from dropping when unlocking is performed.
  - Perform work with the load in its lowest position.
  - Take measures for drop prevention by strut, etc.

## **⚠** Caution

- The unlocking cam is an emergency unlocking mechanism only. During an emergency when the air supply is stopped or cut off, this is used to alleviate a problem by forcibly pushing back the release piston and brake spring to release the lock.
- When installing the cylinder into equipment or performing adjustments, etc., be sure to apply air pressure of 0.25 MPa or more to the unlocking port, and do not perform work using the unlocking cam.
- 3. When releasing the lock with the unlocking cam, it must be noted that the internal resistance of the cylinder will be high, unlike normally unlocking with air pressure.

Bore size (mm)	Cylinder internal resistance (N)	Cam operating torque (guide) (N·m)	Width across flats dimension (mm)
40	108	5.9	5
50	275	11.8	6
63	432	12.8	7
80	686	20.6	7
100	765	23.5	9

- 4. Be sure to operate the unlocking cam (the arrow or mark on the head part of the unlocking cam) on the FREE side and do not turn with a torque greater than the maxmum cam operating torque. There is a danger of damaging the unlocking cam if it is turned excessively.
- 5. For safety reasons, the unlocking cam is constructed so that it cannot be fixed in the unlocked state.

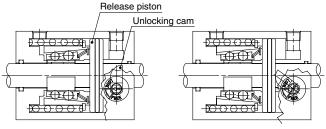

Locked state

Manually unlocked state

#### [Principle]

If the unlocking cam is turned counterclockwise with a tool such as an adjustable angle wrench, the release piston is pushed back and the lock is released. Since the lever will return to its original position when released and become locked again, it should be held in this position for as long as unlocking is needed.





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Actuators and Auto Switches Precautions.

#### **Maintenance**


# **A** Caution

#### 1. Never disassemble the lock unit.

It is very dangerous to disassemble the lock unit of the CNA2 series because it has a strong spring installed inside, so never disassemble the lock unit. Replace the lock unit if the seal or other internal parts need to be replaced.

#### 2. Lock unit model

To order the CNA2 series lock units for maintenance, use the order numbers given in the below table.

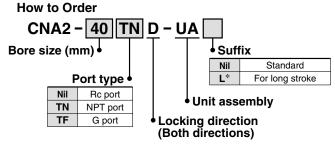


\* The lock unit for long stroke is applicable only to the flange style with 1001 stroke or longer whose bore size is ø50 to ø100. (Example: CNA2-100D-UAL)

#### 2. How to replace lock units


 Loosen the tie-rod nuts (4 pcs.) on the cylinder head cover side by using a socket wrench.

For applicable socket, refer to the below table.

Bore size (mm)	Nut	Width across flats dimension	Socket
40, 50	JIS B 1181 Class 2 M8 x 1.25	13	JIS B 4636 + 2-point angle socket 13
63	JIS B 1181 Class 2 M10 x 1.25	17	JIS B 4636 + 2-point angle socket 17
80, 100	JIS B 1181 Class 2 M12 x 1.75	19	JIS B 4636 + 2-point angle socket 19

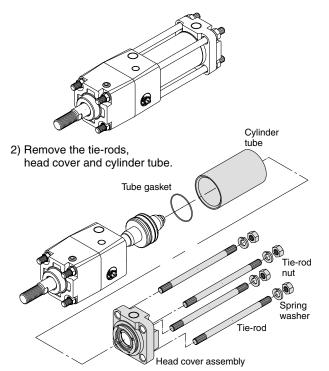


Apply 0.3 MPa or more of compressed air to the unlocking port, and pull out the piston rod assembly.

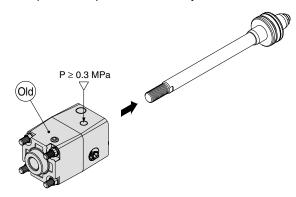

4) Similarly, apply 0.3 MPa or more of compressed air to the unlocking port of the new lock unit, and replace the new lock unit's temporary axis with the previous piston rod assembly.

Note) Be sure to keep applying compressed air with a pressure of at least 0.3 MPa to the lock releasing port when replacing the temporary rod of a new lock unit with a piston rod assembly.

If the compressed air applied to the lock releasing port is released (when it is in the lock condition) while the temporary rod and the piston rod assembly are removed from the lock unit, the brake shoe will be deformed and it will become impossible to insert the piston rod assembly, which will make the lock unit impossible to use.

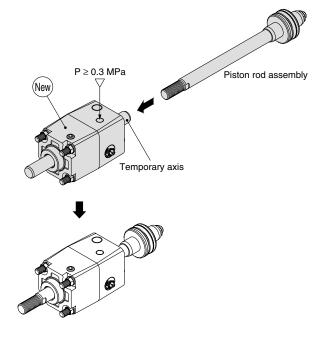

5) Reassemble in reverse order from step 2) to 1).





#### SMC'S GLOBAL MANUFACTURING, DISTRIBUTION AND SERVICE NETWORK



**EUROPE** 

**AUSTRIA** 

SMC Pneumatik GmbH (Austria)

**BELGIUM** 

SMC Pneumatics N.V./S.A.

**BULGARIA** 

SMC Industrial Automation Bulgaria Eood

**CROATIA** 

SMC Industrijska Automatika d.o.o.

**CZECH REPUBLIC** 

SMC Industrial Automation CZ s.r.o.

**DENMARK** 

SMC Pneumatik A/S

**ESTONIA** 

SMC Pneumatics Estonia OÜ

**FINLAND** 

SMC Pneumatics Finland Oy

**FRANCE** 

SMC Pneumatique SA

**GERMANY** 

SMC Pneumatik GmbH

**GREECE** 

SMC Hellas E.P.E.

HUNGARY

SMC Hungary Ipari Automatizálási Kft.

SMC Pneumatics (Ireland) Ltd.

**ITALY** 

SMC Italia S.p.A.

**LATVIA** 

SMC Pnuematics Latvia SIA

**LITHUANIA** 

**UAB "SMC Pneumatics"** 

**NETHERLANDS** 

SMC Pneumatics B.V.

**NORWAY** 

SMC Pneumatics Norway AS

**POLAND** 

SMC Industrial Automation Polska Sp.z.o.o.

**ROMANIA** 

SMC Romania S.r.I.

**RUSSIA** 

SMC Pneumatik LLC

**SLOVAKIA** 

SMC Priemyselná Automatizácia Spol s.r.o.

**SLOVENIA** 

SMC Industrijska Avtomatika d.o.o.

SPAIN/PORTUGAL

SMC España S.A.

**SWEDEN** 

SMC Pneumatics Sweden AB

**SWITZERLAND** 

SMC Pneumatik AG

SMC Pneumatics (U.K.) Ltd.

**ASIA** 

**CHINA** 

SMC (China) Co., Ltd.

HONG KONG

SMC Pneumatics (Hong Kong) Ltd.

SMC Pneumatics (India) Pvt. Ltd.

**MALAYSIA** 

SMC Pneumatics (S.E.A.) Sdn. Bhd.

**PHILIPPINES** 

Shoketsu SMC Corporation

**SINGAPORE** 

SMC Pneumatics (S.E.A.) Pte. Ltd.

SOUTH KOREA

SMC Pneumatics Korea Co., Ltd.

**TAIWAN** 

SMC Pneumatics (Taiwan) Co., Ltd.

**THAILAND** 

SMC (Thailand) Ltd.

NORTH AMERICA -

SMC Pneumatics (Canada) Ltd.

**MEXICO** 

SMC Corporation (Mexico), S.A. de C.V.

SMC Corporation of America

SOUTH AMERICA

**ARGENTINA** 

SMC Argentina S.A.

**BOLIVIA** 

SMC Pneumatics Bolivia S.r.l.

**BRAZIL** 

SMC Pneumáticos do Brasil Ltda

SMC Pneumatics (Chile) S.A.

**VENEZUELA** 

SMC Neumatica Venezuela S.A.

**OCEANIA** 

**AUSTRALIA** 

SMC Pneumatics (Australia) Pty. Ltd.

**NEW ZEALAND** 

SMC Pneumatics (N.Z.) Ltd.

♠ Safety Instructions | Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.