

# 3 Port Air Operated Valve Series VGA342



## How to Order

VGA342- 04 [ ] A

Port size

04	1/2
06	3/4
10	1

Thread type


Nil	Rc
F	G
N	NPT
T	NPTF

Passage


A	Normally closed (N.C.)
B	Normally open (N.O.)

### JIS Symbol

N.C.

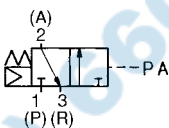

N.O.

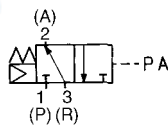


## ⚠ Precautions

Be sure to read this before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.


## ⚠ Caution

### 1. Change of fluid passage

M4 x 0.7

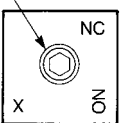

N.C.

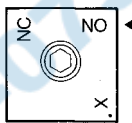

N.O.

Please note that the pressure in the valve should be exhausted when changing the fluid passage.

Loosen the hexagon socket head cap screw M4 x 0.7. Rotate the NC/NO switching plate and align the desired passage symbol NO/NC with the ◀ mark on the adapter plate. However, the X symbol is not applicable. For piping, refer to the table below. Screw tightening torque M4: 1.4 N·m

### Piping

Fluid passage	Port	P	A	R
N.C.		Inlet side	Outlet side	EXH side (2 port: Plug)
N.O.		EXH side (2 port: Plug)	Outlet side	Inlet side

Take sufficient precautions and confirm safety when changing the flow path and restarting after the changes.

### 2. Other

M5 size hole at the left side of the adapter plate is a breathing port for spool valve. Do not plug or tighten it.

## Specifications

Operating type	Air operated type
Type of actuation	N.C./N.O. (Changeable)
Return mechanism	Air + Spring
Fluid	Air
Operating pressure range	0.2 to 0.9 MPa
Pilot pressure	Same as operating pressure
Ambient temperature and operating fluid temperature	-10 to 50°C (No freezing. Refer to page 5.)
Lubrication	Not required (Use turbine oil Class 1 ISO VG32, if lubricated.)
Impact/Vibration resistance <small>Note</small>	150/50 m/s <sup>2</sup>



Note) Impact resistance: No malfunction from test using drop impact tester, to axis and right angle directions of main valve, each one time when pilot signal ON and OFF. (Value in the initial stage)

Vibration resistance: No malfunction occurs on the test with one sweep from 45 to 1000 Hz, to axis and right angle directions of main valve each time when pilot signal ON and OFF. (Value in the initial stage)

## Flow Characteristics

Port size	Flow characteristics											
	1→2(P→A)			2→3(A→R)			2→1(A→P)			3→2(R→A)		
	C (dm <sup>3</sup> /(s·bar))	b	Cv	C (dm <sup>3</sup> /(s·bar))	b	Cv	C (dm <sup>3</sup> /(s·bar))	b	Cv	C (dm <sup>3</sup> /(s·bar))	b	Cv
1/2	26	0.38	7.0	27	0.37	7.4	27	0.36	7.3	25	0.37	6.8
3/4	38	0.30	9.8	38	0.32	9.8	40	0.22	9.8	40	0.20	9.6

Port size	Effective area (mm <sup>2</sup> )	
	1→2(P→A)	2→3(A→R)
1	210	235

## Dimensions

